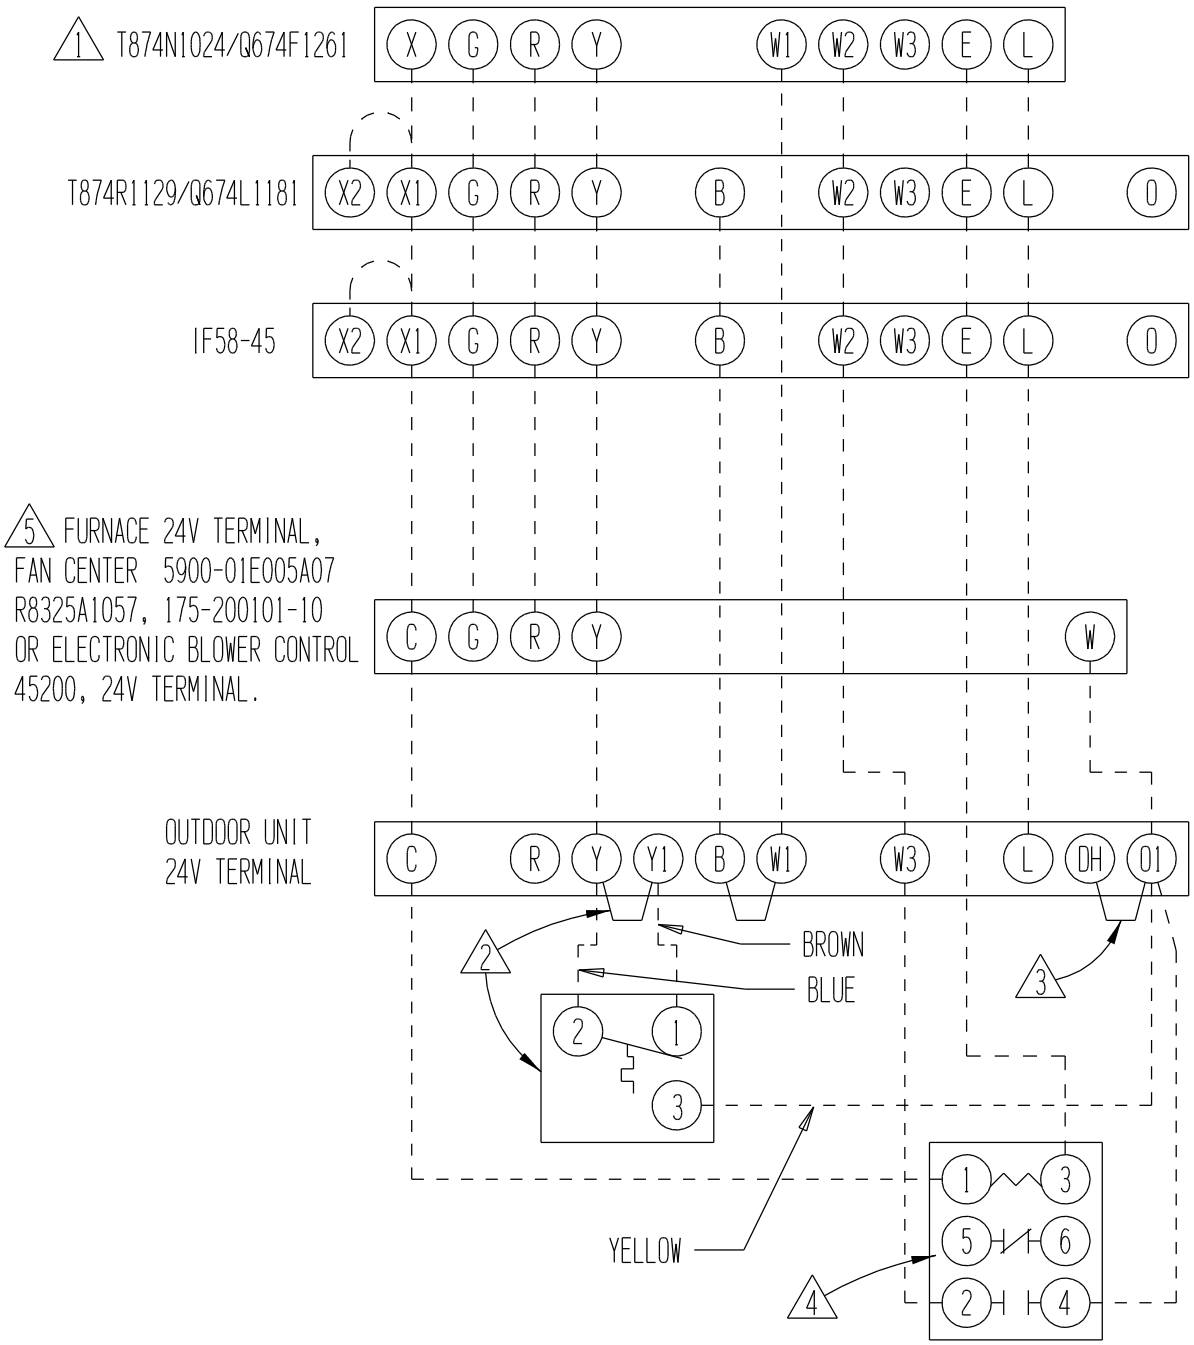

1. SET ADJUST HEAT ANTICIPATOR (SEE FURNACE INSTALLATION INSTRUCTIONS)
2. WHEN OUTDOOR THERMOSTATE (USED AS CHANGEOVER THERMOSTAT) IS INSTALLED, REMOVE JUMPER Y-Y1.
3. IF IT DESIRED NOT TO ALLOW FURNACE TO CYCLE "ON" DURING DEFROST, REMOVE JUMPER DH-O1.
4. LOCATE EMERGENCY HEAT RELAY IN OUTDOOR UNIT. NECESSARY TO OPERATE FURNACE IN EMERGENCY HEAT MODE.
5. IF THE FURNACE IS NOT INTERNALLY WIRED FOR ADD ON AIR CONDITIONING, A FAN CENTER WILL NEED TO BE ADDED.

	FACTORY WIRING	FIELD WIRING
LOW VOLTAGE	———	- - - - -
HIGH VOLTAGE	———	- - - - -

HEAT PUMP W/GAS FURNACE

4091-202 B