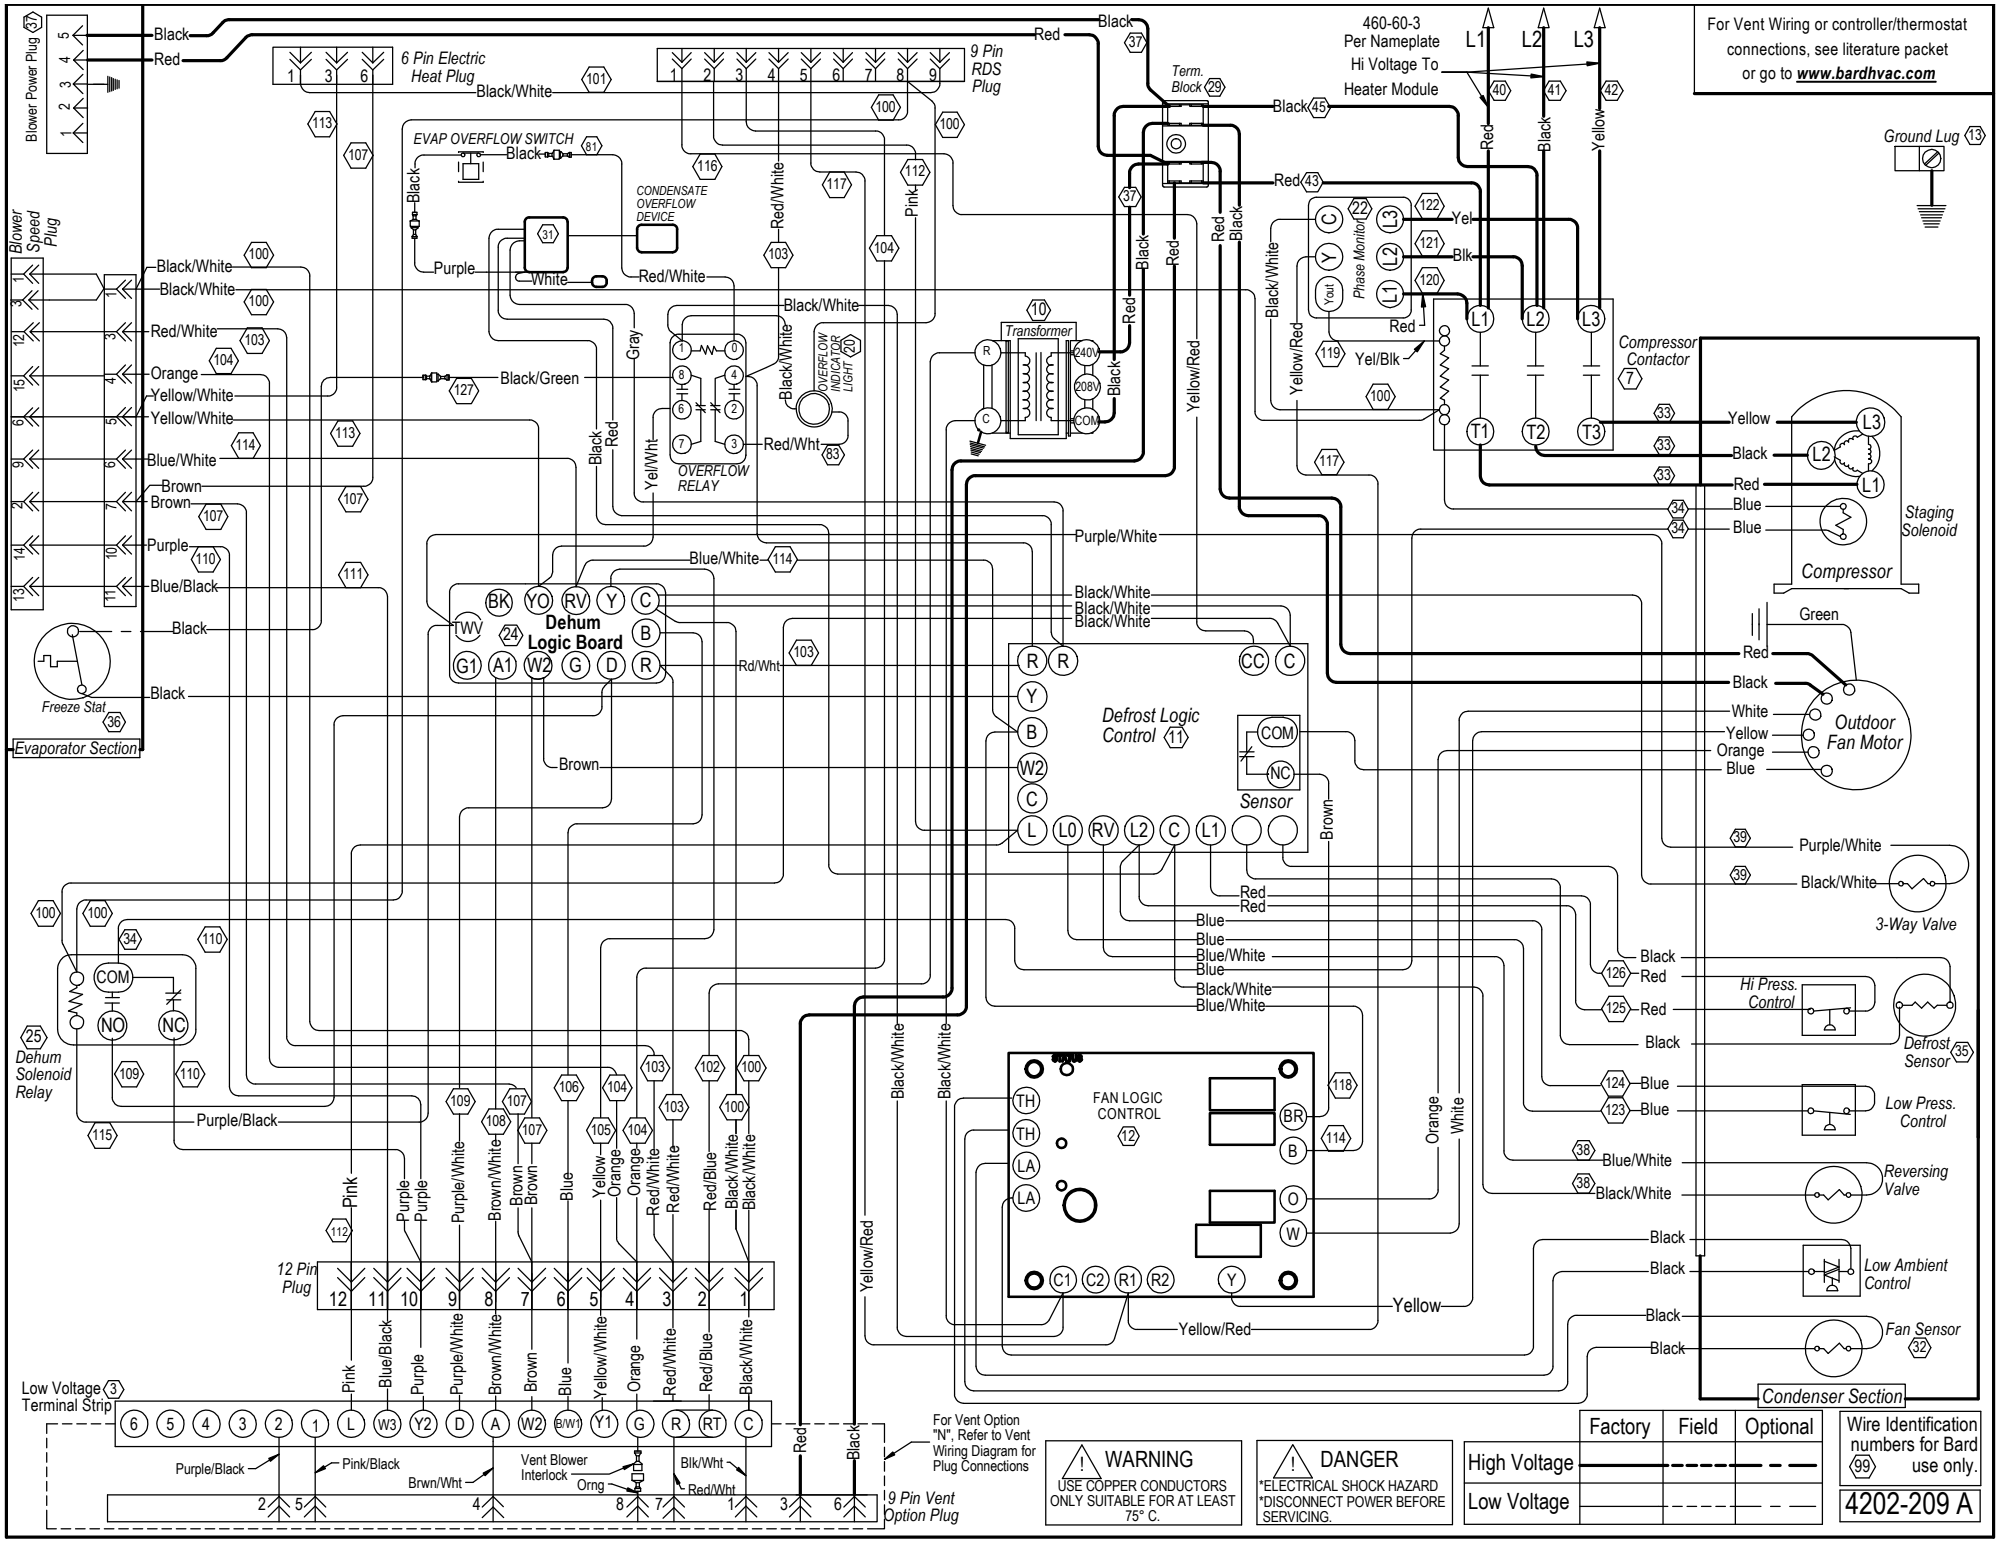
For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com
460-60-3 Per Nameplate Hi Voltage To Heater Module
L1
L2
L3
Ground Lug
Blower Power Plug
6 Pin Electric Heat Plug
9 Pin RDS Plug
Term. Block
EVAP OVERFLOW SWITCH
CONDENSATE OVERFLOW DEVICE
Blower Speed Plug
Phase Monitor
Transformer
OVERFLOW INDICATOR LIGHT
OVERFLOW RELAY
Compressor Contactor
Staging Solenoid
Compressor
Dehum Logic Board
Freeze Stat
Evaporator Section
Defrost Logic Control
Sensor
Outdoor Fan Motor
3-Way Valve
Hi Press. Control
Defrost Sensor
Low Press. Control
Reversing Valve
Low Ambient Control
Fan Sensor
Condenser Section
Dehum Solenoid Relay
FAN LOGIC CONTROL
12 Pin Plug
Low Voltage Terminal Strip
Vent Blower Interlock
9 Pin Vent Option Plug
For Vent Option "N", Refer to Vent Wiring Diagram for Plug Connections
WARNING
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.
DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE SERVICING.
Factory
Field
Optional
High Voltage
Low Voltage
Wire Identification numbers for Bard use only.
4202-209 A