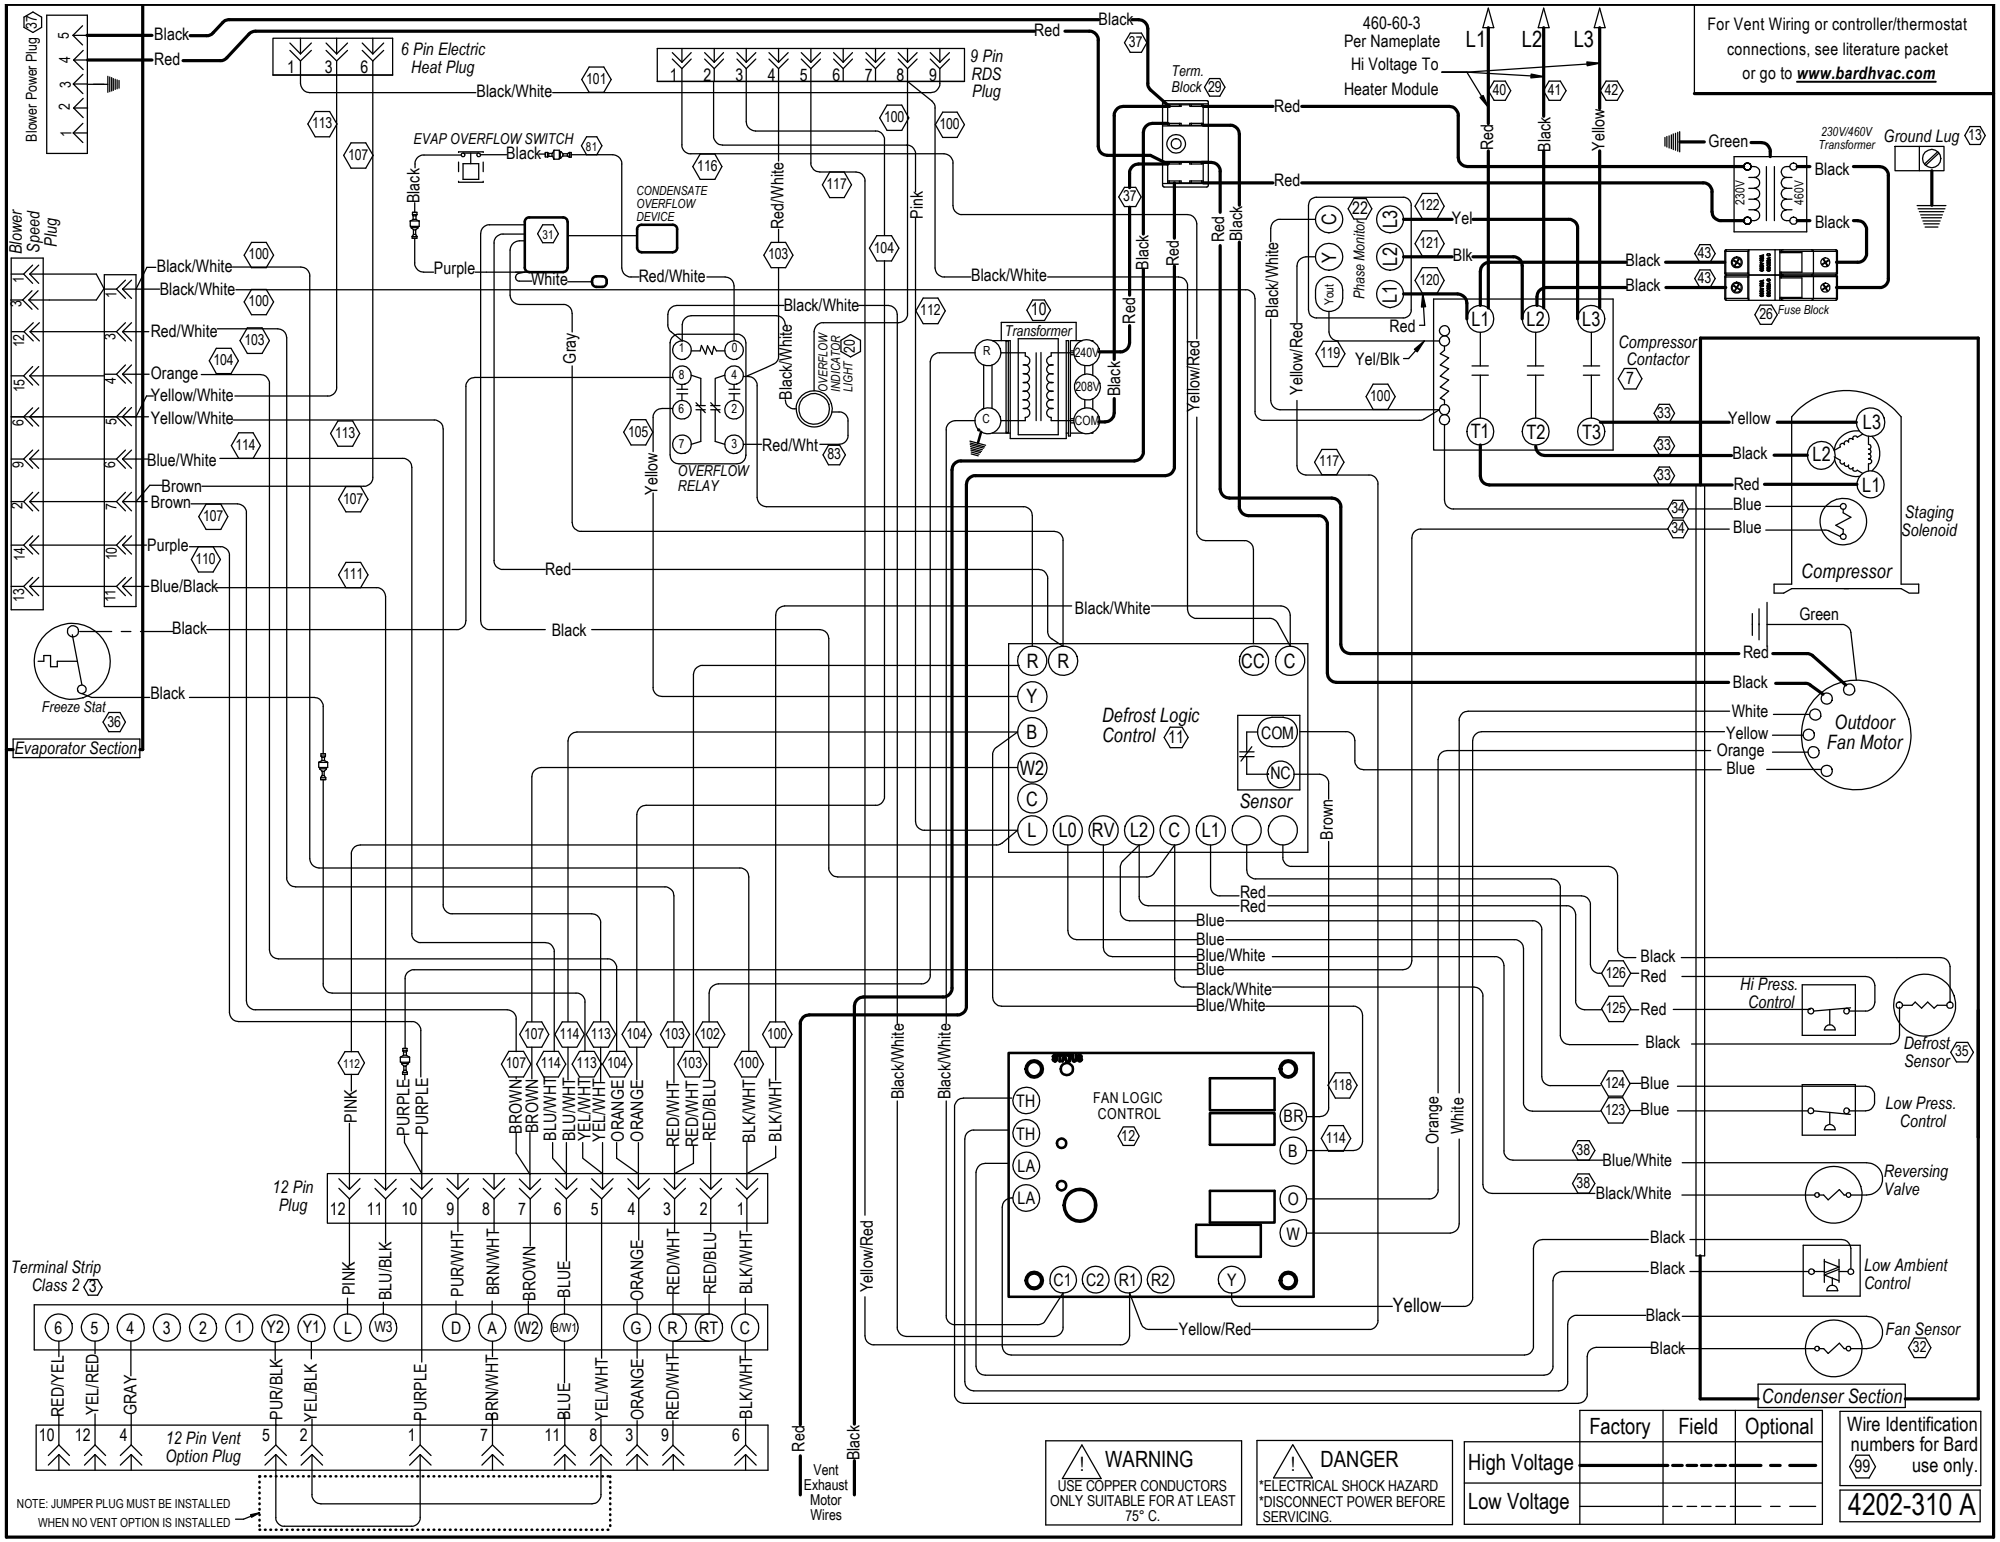
For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com
460-60-3 Per Nameplate Hi Voltage To Heater Module
L1
L2
L3
Blower Power Plug
6 Pin Electric Heat Plug
9 Pin RDS Plug
Term. Block
EVAP OVERFLOW SWITCH
CONDENSATE OVERFLOW DEVICE
Blower Speed Plug
Transformer
OVERFLOW INDICATOR LIGHT
OVERFLOW RELAY
Phase Monitor
230V/460V Transformer
Ground Lug
Fuse Block
Compressor Contactor
Compressor
Staging Solenoid
Outdoor Fan Motor
Freeze Stat
Evaporator Section
Defrost Logic Control
Sensor
Hi Press. Control
Defrost Sensor
Low Press. Control
Reversing Valve
Low Ambient Control
Fan Sensor
Condenser Section
FAN LOGIC CONTROL
12 Pin Plug
Terminal Strip Class 2
12 Pin Vent Option Plug
NOTE: JUMPER PLUG MUST BE INSTALLED WHEN NO VENT OPTION IS INSTALLED
Vent Exhaust Motor Wires
WARNING
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.
DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE SERVICING.
Factory
Field
Optional
High Voltage
Low Voltage
Wire Identification numbers for Bard use only.
4202-310 A