



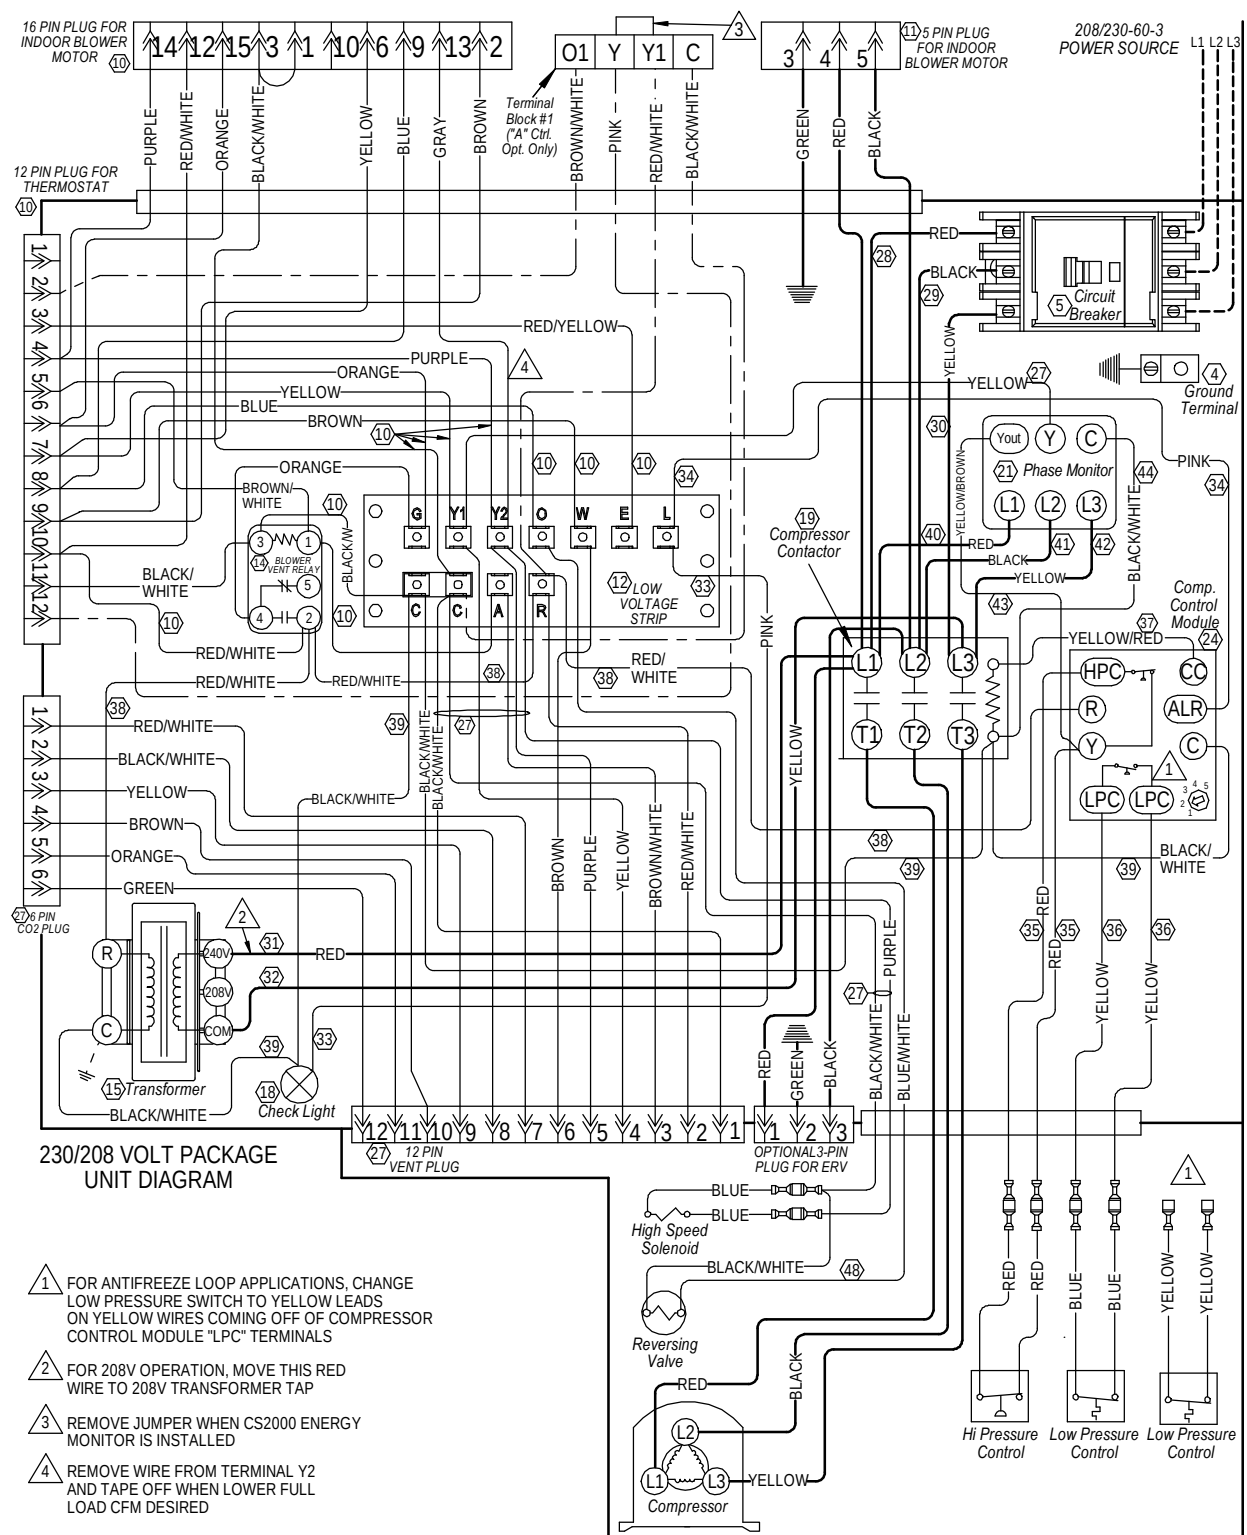

- 1 FOR ANTIFREEZE LOOP APPLICATIONS, CHANGE LOW PRESSURE SWITCH TO YELLOW LEADS ON YELLOW WIRES COMING OFF OF COMPRESSOR CONTROL MODULE "LPC" TERMINALS
- 2 FOR 208V OPERATION, MOVE THIS RED WIRE TO 208V TRANSFORMER TAP
- 3 REMOVE JUMPER WHEN CS2000 ENERGY MONITOR IS INSTALLED
- 4 REMOVE WIRE FROM TERMINAL Y2 AND TAPE OFF WHEN LOWER FULL LOAD CFM DESIRED

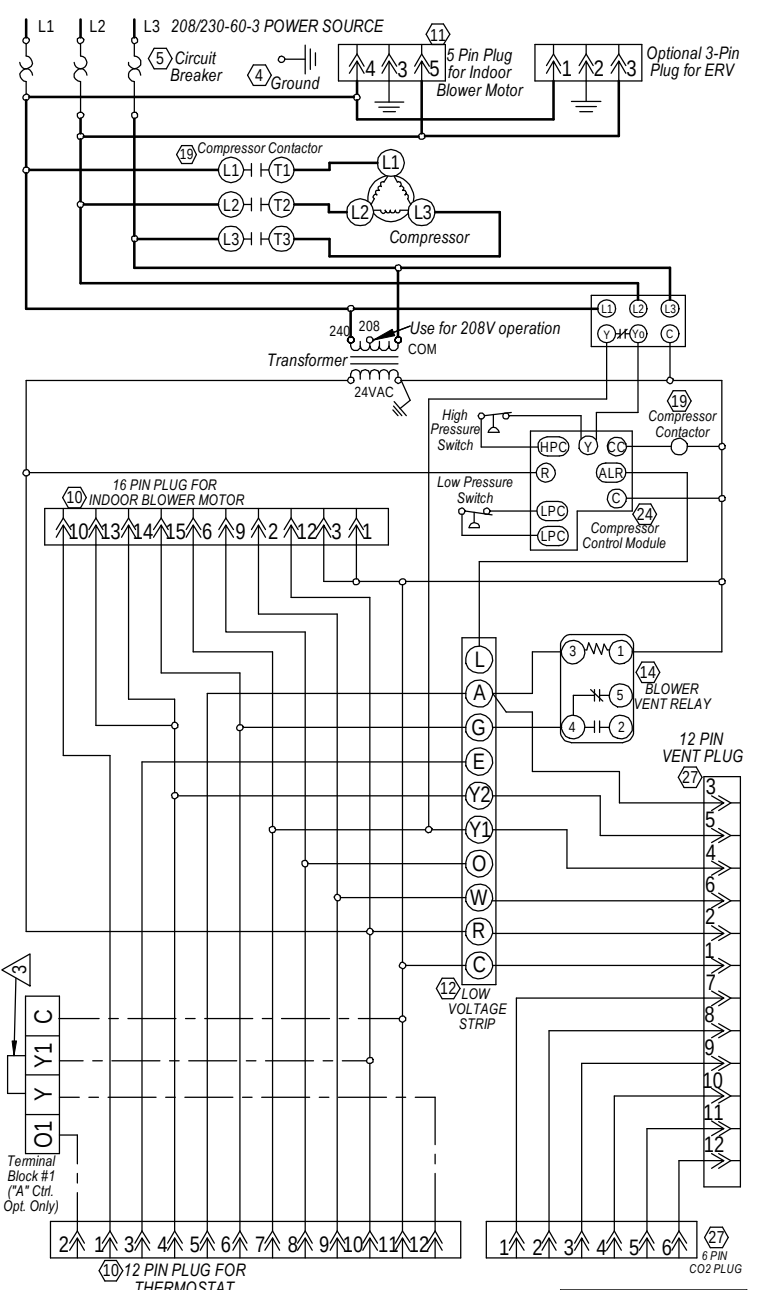

⚠ DANGER

ELECTRICAL SHOCK HAZARD
DISCONNECT POWER BEFORE
SERVICING.

99 Wire Identification numbers for Bard use only.

⚠ WARNING

USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST
75° C.

	Factory	Field	Optional
High Voltage			
Low Voltage			

Bard Mfg. Co.
Bryan, Ohio
4113-200 B