
INSTALLATION INSTRUCTIONS

CMH-23 Compressor Cutout Thermostat Kit For Use with W42HA, W48HA and W60HA Wall-Mount Heat Pumps

The CMH-23 is a field-installable compressor cutout outdoor thermostat to be used with a Bard wall-mounted heat pump.

The CMH-23 kit consists of:

- 910-1998 Relay and Compressor Cutout Thermostat Assembly
- 3/8" vinyl-covered clamps
- Required fasteners
- 7960-747 Installation Instructions

The CMH-23 kit is for use with Bard models W42HA, W48HA and W60HA wall-mount heat pumps.

Compressor Cutout Thermostat

Heat pump compressor operation at outdoor temperatures below 0° is neither desirable nor advantageous in terms of efficiency. An outdoor thermostat can be applied to take the mechanical heating (compressor) offline, and send the (compressor) signal to energize electric heat in its place (to make electric heat first stage heating). This can also be applied to limit the quantity of available electric heat.

Example: Heat pump with 10KW second stage heat. Once the outdoor thermostat has switched, 15KW without compressor.

INSTALLATION

1. Disconnect all power to wall-mount unit.
2. Remove outer and inner control panel covers.
3. Remove right side condenser inlet grille.
4. Mount 910-1998 relay and compressor cutout thermostat assembly to unit control panel as shown in Figure 1 on page 3. Use phillips head screws included with kit to attach relay to control panel.
5. Carefully route outdoor thermostat bulb down through the condenser partition with the compressor and other wires that are currently there. Referring to Figure 2 on page 4, attach the outdoor thermostat bulb to the fan shroud using the 3/8" vinyl-covered clamps and hex head screws included with the kit. Be sure to dress the capillary tube so as to not have any tube or other rubs. Use the cable ties included with kit to secure the capillary tube out of the way as needed.
6. Remove cover from vertical gray cable duct on control panel to allow wire harness from installed relay to route into it (see Figure 1).

NOTE: The unit wiring diagram (included with unit literature assembly and also located on inner control panel cover) can be used to wire this kit. However, the following instructions listed here provide the necessary connections point-by-point.




Bard Manufacturing Company, Inc.
Bryan, Ohio 43506
www.bardhvac.com

Manual: 7960-747
Supersedes: **NEW**
Date: 2-9-16

7. Locate yellow/white wire that runs from the 12-pin plug on the top of the low voltage box to:
 - Defrost logic control board on 1 phase non-dehum models
 - Phase monitor on 3 phase non-dehum models
 - Dehum logic control board on all dehum models


Remove from its original position and plug into yellow/white wire from the 910-1998 relay and compressor cutout thermostat assembly installed in Step 4. Locate orange/black wire from the 910-1998 relay and connect where yellow/white wire was removed.
8. Locate black/white wire from relay assembly and route through cable duct to defrost control logic board. Connect the wire to the C terminal. If the heat pump is a dehum unit, remove the black/white wire already connected to C terminal and stack it back onto the black/white wire from the relay assembly.
9. Locate blue wire from relay assembly and route through cable duct to defrost control logic board. Connect to B terminal. Remove blue wire already connected to B terminal and stack it back onto the blue wire from the relay assembly.
10. Locate brown wire from relay assembly and route through cable duct to defrost control logic board. Connect to W2 terminal. Remove brown wire already connected to W2 terminal and stack it back onto the brown wire from the relay assembly.
11. Verify outdoor thermostat setpoint. Factory default is 10°F.
12. Apply “This unit is equipped with CMH-23 control module” label to the inside of the inner control panel cover above the unit wiring diagram.
13. Re-install right side condenser inlet grille.
14. Re-install electrical cable duct cover.
15. Re-install inner and outer control panel covers.
16. Restore unit power.

FIGURE 1
Unit Control Panel

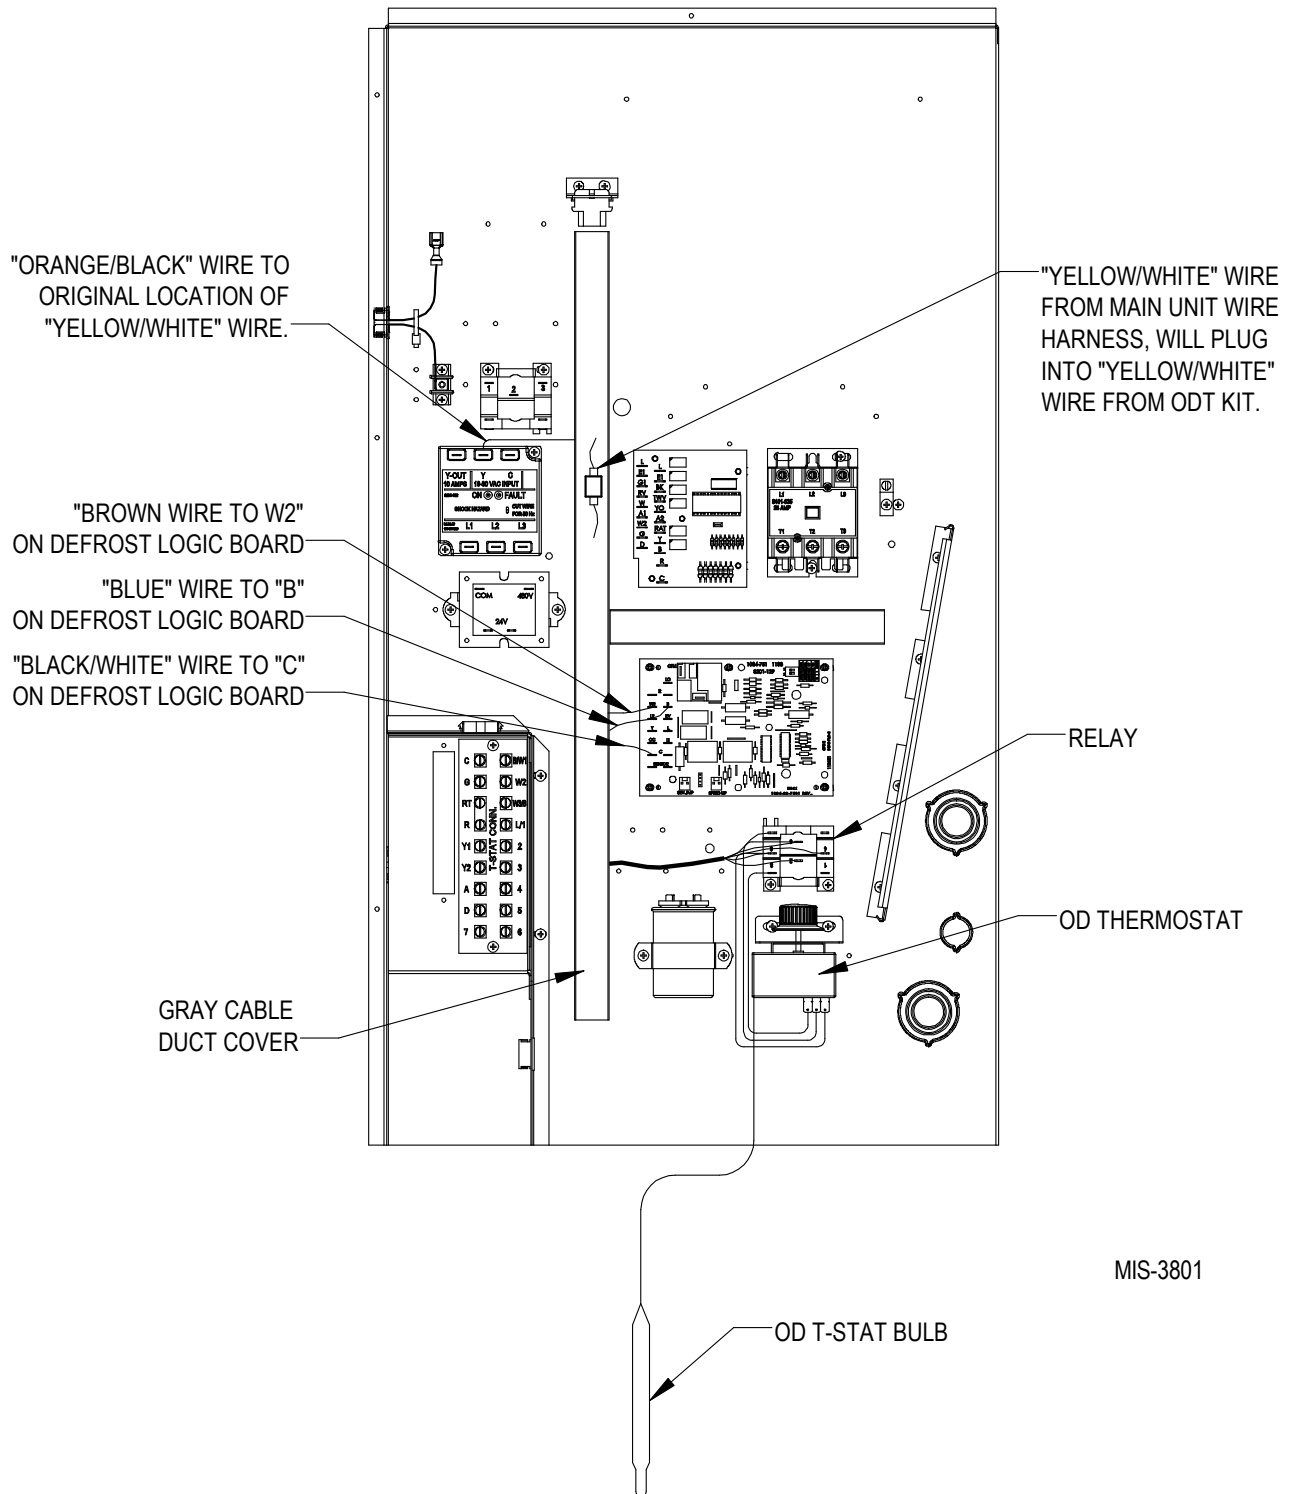

MIS-3801

FIGURE 2
Mounting Outdoor Thermostat Bulb and/or Low Ambient Fan Cycling Switch
(as applicable)

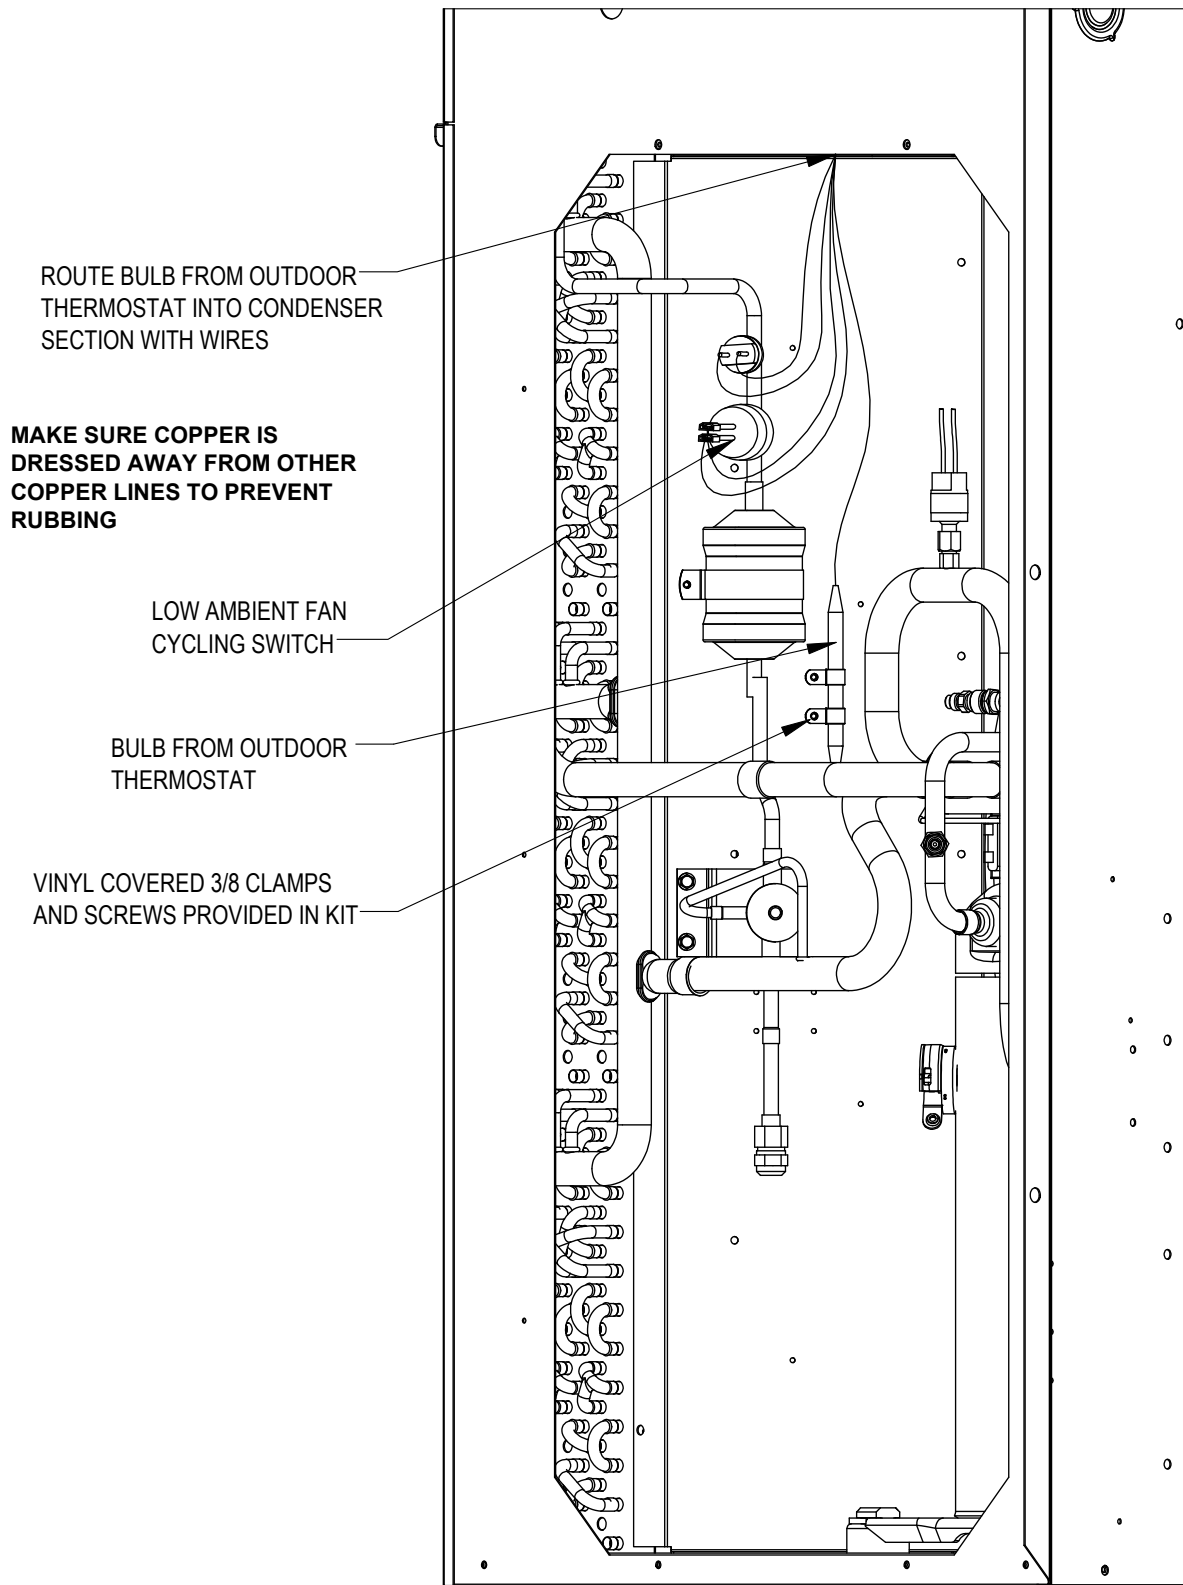

MIS-3799