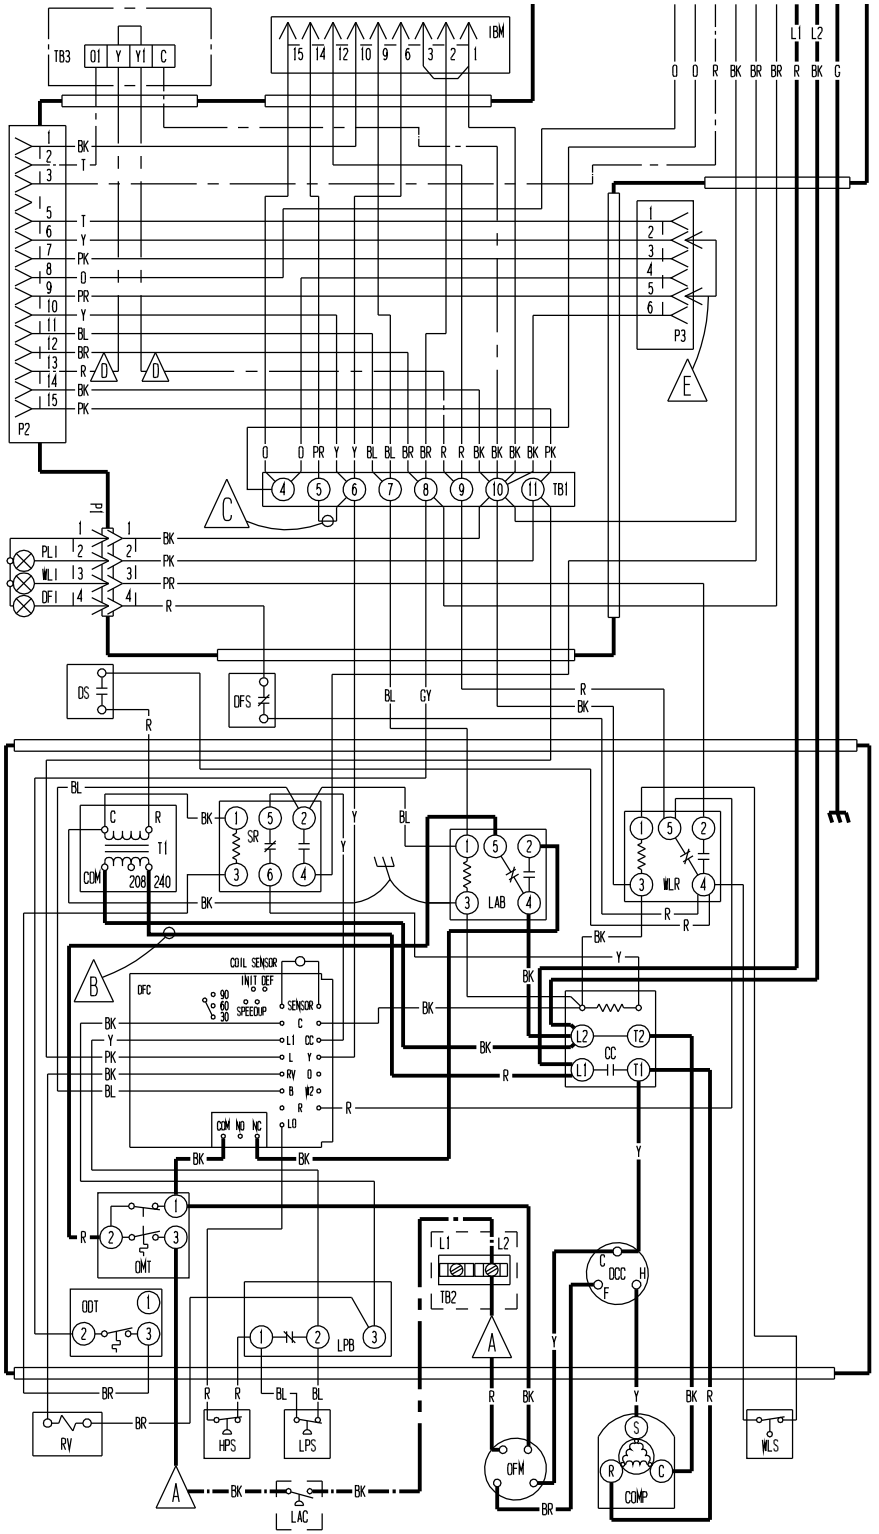

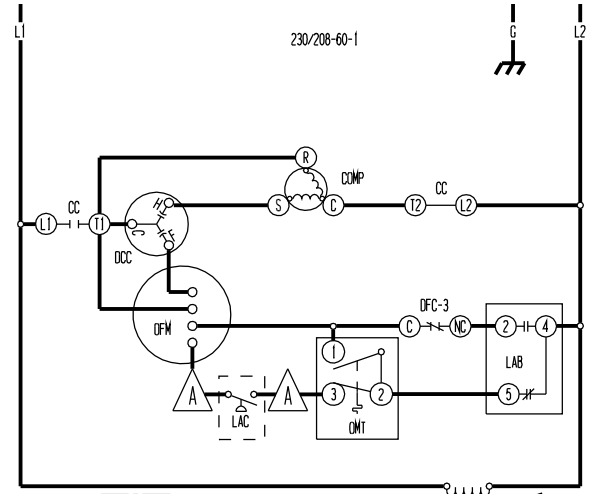

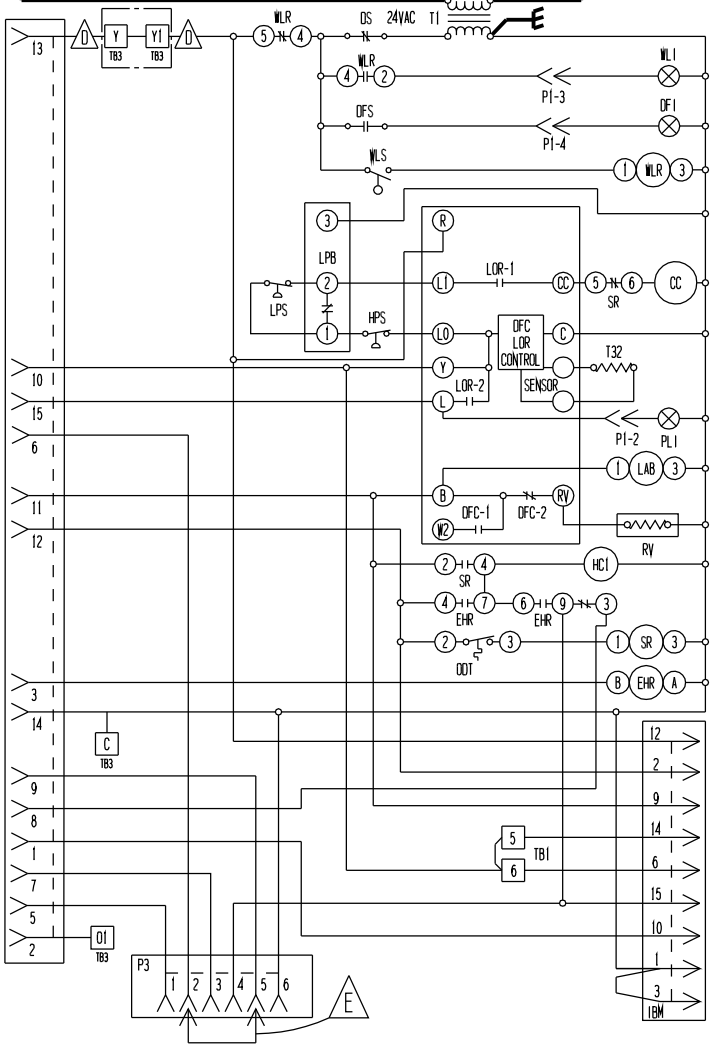

COMPONENT CODE

CB1	CIRCUIT BREAKER #1
CC	COMPRESSOR CONTACTOR
COMP	COMPRESSOR
DCC	DUAL CAN CAPACITOR
DFC	DEFROST CONTROL
DFI	DIRTY FILTER INDICATOR
DFS	DIRTY FILTER SWITCH
DS	DOOR SWITCH
EHR	EMERGENCY HEAT RELAY
GND	GROUND
HC1	HEATER CONTACTOR #1
HPS	HIGH PRESSURE SWITCH
HS1	HEAT STRIP #1
IBM	INDOOR BLOWER MOTOR
LAB	LOW AMBIENT BYPASS
LAC	LOW AMBIENT CONTROL
LPB	LOW PRESSURE BYPASS
LPS	LOW PRESSURE SWITCH
LS	LIMIT SWITCH
ODT	OUTDOOR THERMOSTAT
OFM	OUTDOOR FAN MOTOR
OMT	OUTDOOR MOTOR THERMOSTAT
P1	ACCESSORY PLUG #1
P2	ACCESSORY PLUG #2
P3	ACCESSORY PLUG #3
PLI	PRESSURE LOCKOUT INDICATOR
RV	REV. VALVE SOLINOID
SR	STAGING RELAY
T1	TRANSFORMER
TB1	TERMINAL BLOCK #1
TB2	TERMINAL BLOCK #2
TB3	TERMINAL BLOCK #3
WLI	HIGH WATER LEVEL INDICATOR
WLR	WATER LEVEL RELAY
WLS	WATER LEVEL SWITCH

USE COPPER CONDUCTORS ONLY
SUITABLE FOR AT LEAST 75°C

A D — LABELED WIRES CONNECT IF NO OPTIONS USED.

B — MOVE RED WIRE TO 208 V TAP FOR 208 V OPERATION

C — INSTALL JUMPER FOR HIGH SPEED BLOWER OPERATION ON MODELS 36 & 42

E — IF VENT OPTION IS INSTALLED, PLUG WITH JUMPER 2 TO 5 IS REMOVED & PLUG FROM VENT OPTION INSERTED

	FACTORY STD.	FIELD	OPTIONAL
HIGH VOLTAGE			
LOW VOLTAGE			
ACCESSORY			

BK - BLACK	G - GREEN	T - TAN
BN - BROWN	BL - BLUE	PK - PINK
R - RED	PR - PURPLE	L - LAVENDER
O - ORANGE	GY - GREY	
Y - YELLOW	W - WHITE	

4100-102 D