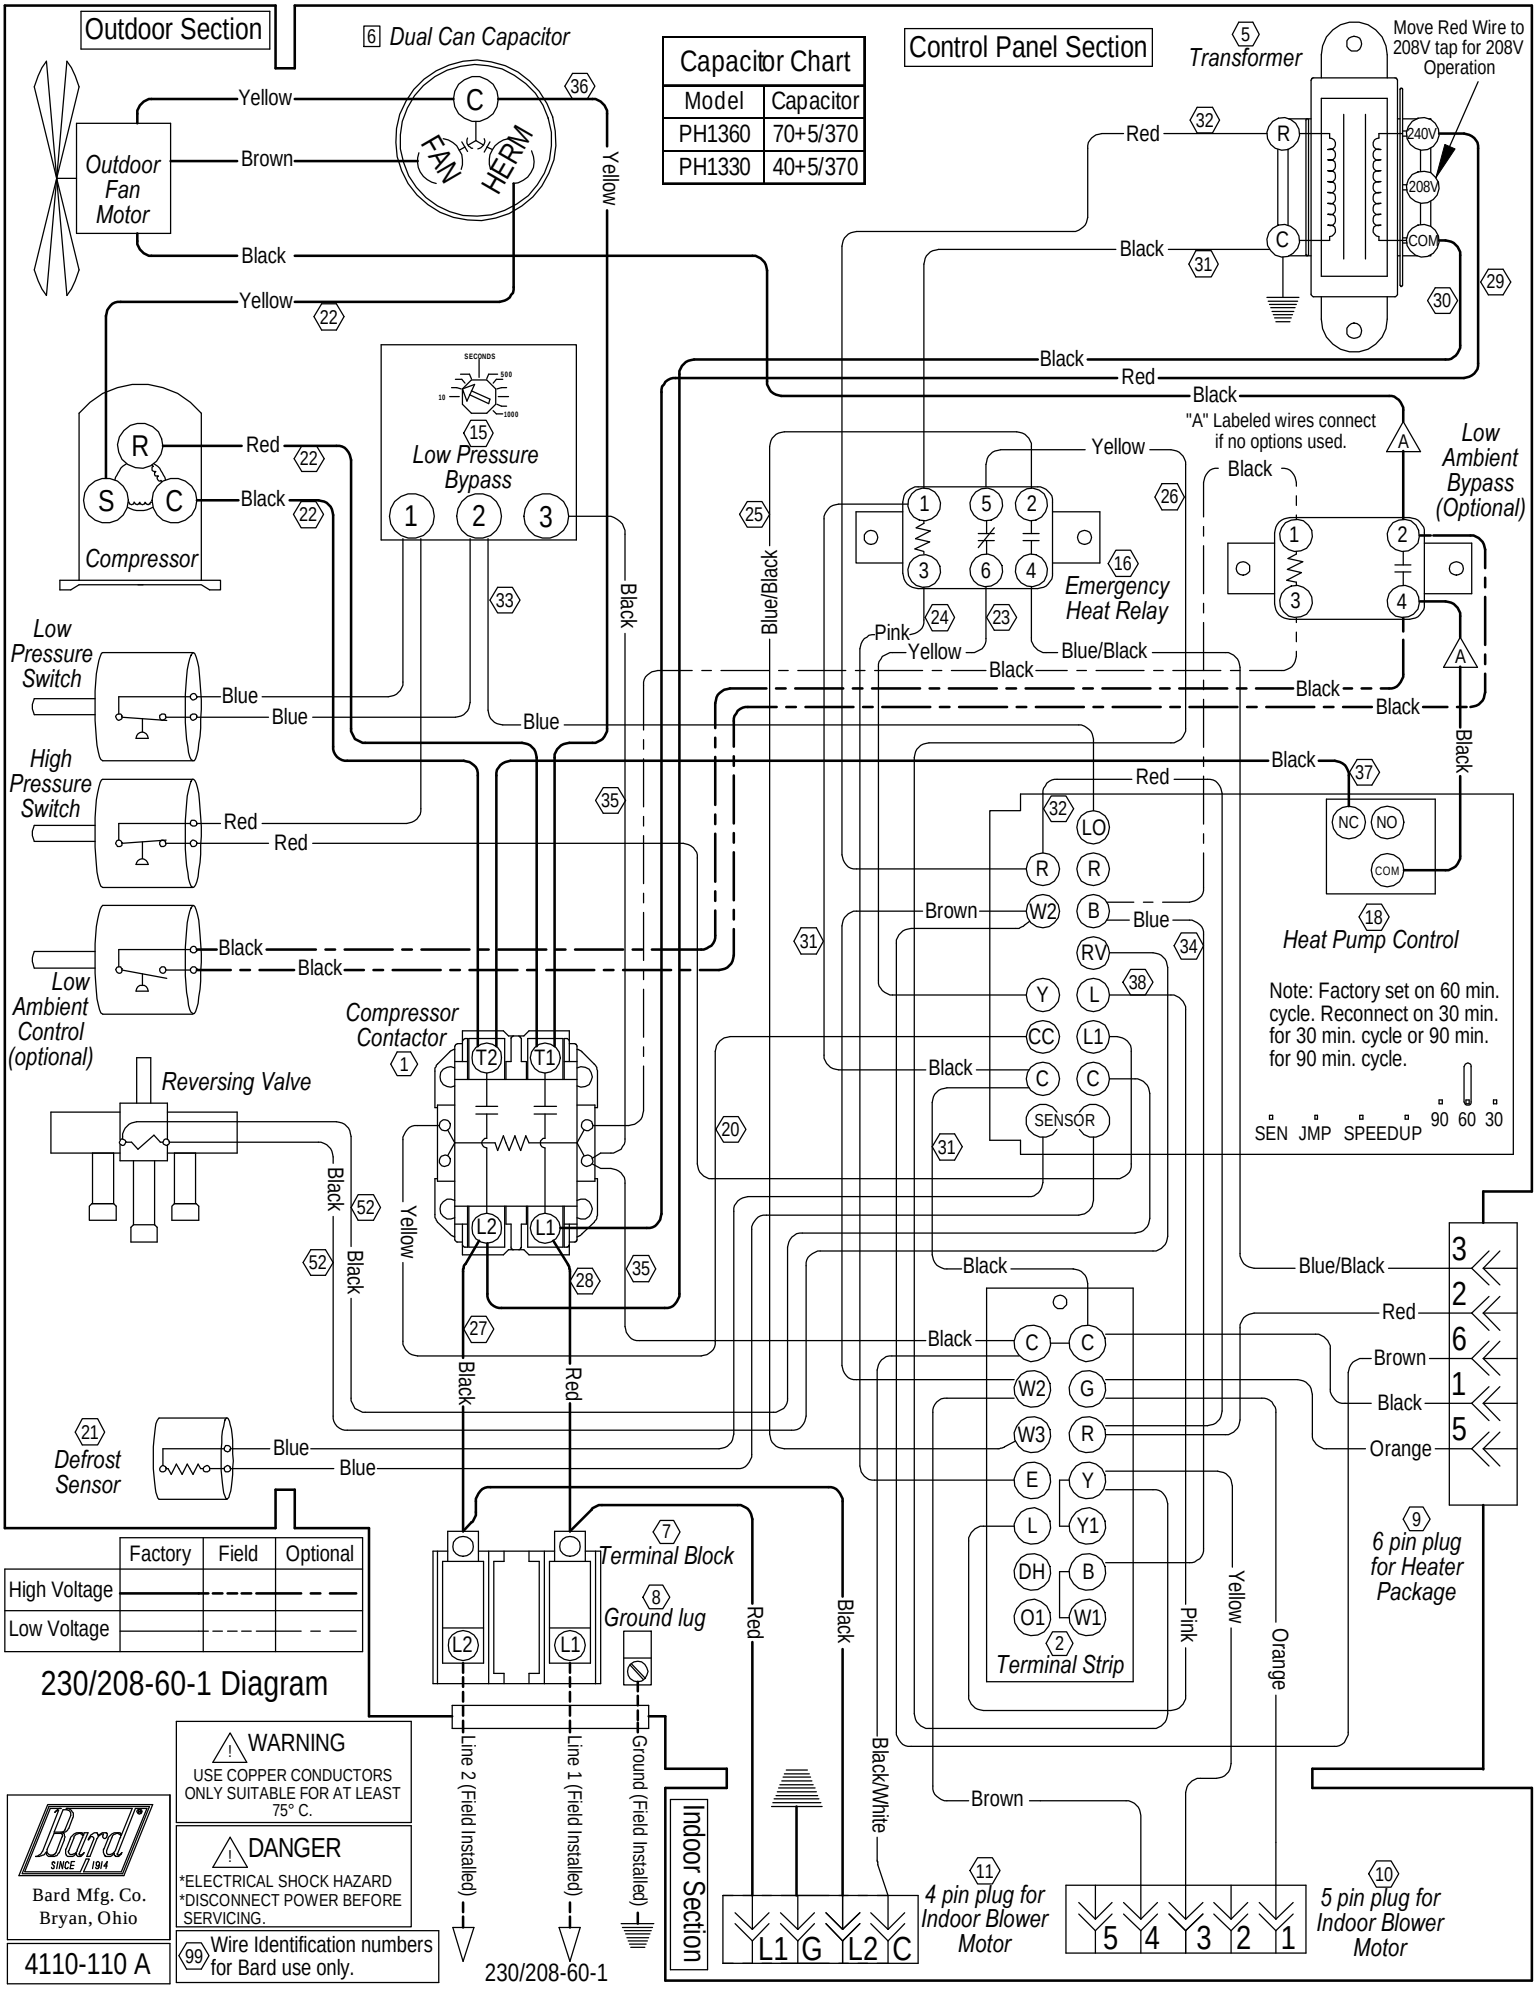
Outdoor Section
6 Dual Can Capacitor
Capacitor Chart
Model | Capacitor
PH1360 | 70+5/370
PH1330 | 40+5/370
Control Panel Section
5 Transformer
Move Red Wire to 208V tap for 208V Operation
Outdoor Fan Motor
Compressor
Low Pressure Bypass
Low Pressure Switch
High Pressure Switch
Low Ambient Control (optional)
Reversing Valve
Compressor Contactor
Emergency Heat Relay
Low Ambient Bypass (Optional)
"A" Labeled wires connect if no options used.
Heat Pump Control
Note: Factory set on 60 min. cycle. Reconnect on 30 min. for 30 min. cycle or 90 min. for 90 min. cycle.
SEN JMP SPEEDUP 90 60 30
Defrost Sensor
Terminal Block
Ground lug
Terminal Strip
6 pin plug for Heater Package
4 pin plug for Indoor Blower Motor
5 pin plug for Indoor Blower Motor
Indoor Section
Factory | Field | Optional
High Voltage
Low Voltage
230/208-60-1 Diagram
WARNING
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.
DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE SERVICING.
99 Wire Identification numbers for Bard use only.
Bard Mfg. Co.
Bryan, Ohio
4110-110 A
Line 2 (Field Installed)
Line 1 (Field Installed)
Ground (Field Installed)
230/208-60-1