
Split Air Conditioner

Replacement Parts Manual

Models: 2412UACSB
3012UACSB
3612UACSB
4212UACSB
4812UACSB
6012UACSB
3014UACSA
3614UACSA

General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.

Contents

Description	Page
Functional and Cabinet Components	
• Exploded View	1
• Usage List	2
• Usage List	3




BARD MANUFACTURING COMPANY
Bryan, Ohio 43506

Since 1914...Moving ahead, just as planned.

Manual: 2110-005G
Supersedes: H
Date: 07-03-97

CABINET and FUNCTIONAL COMPONENTS

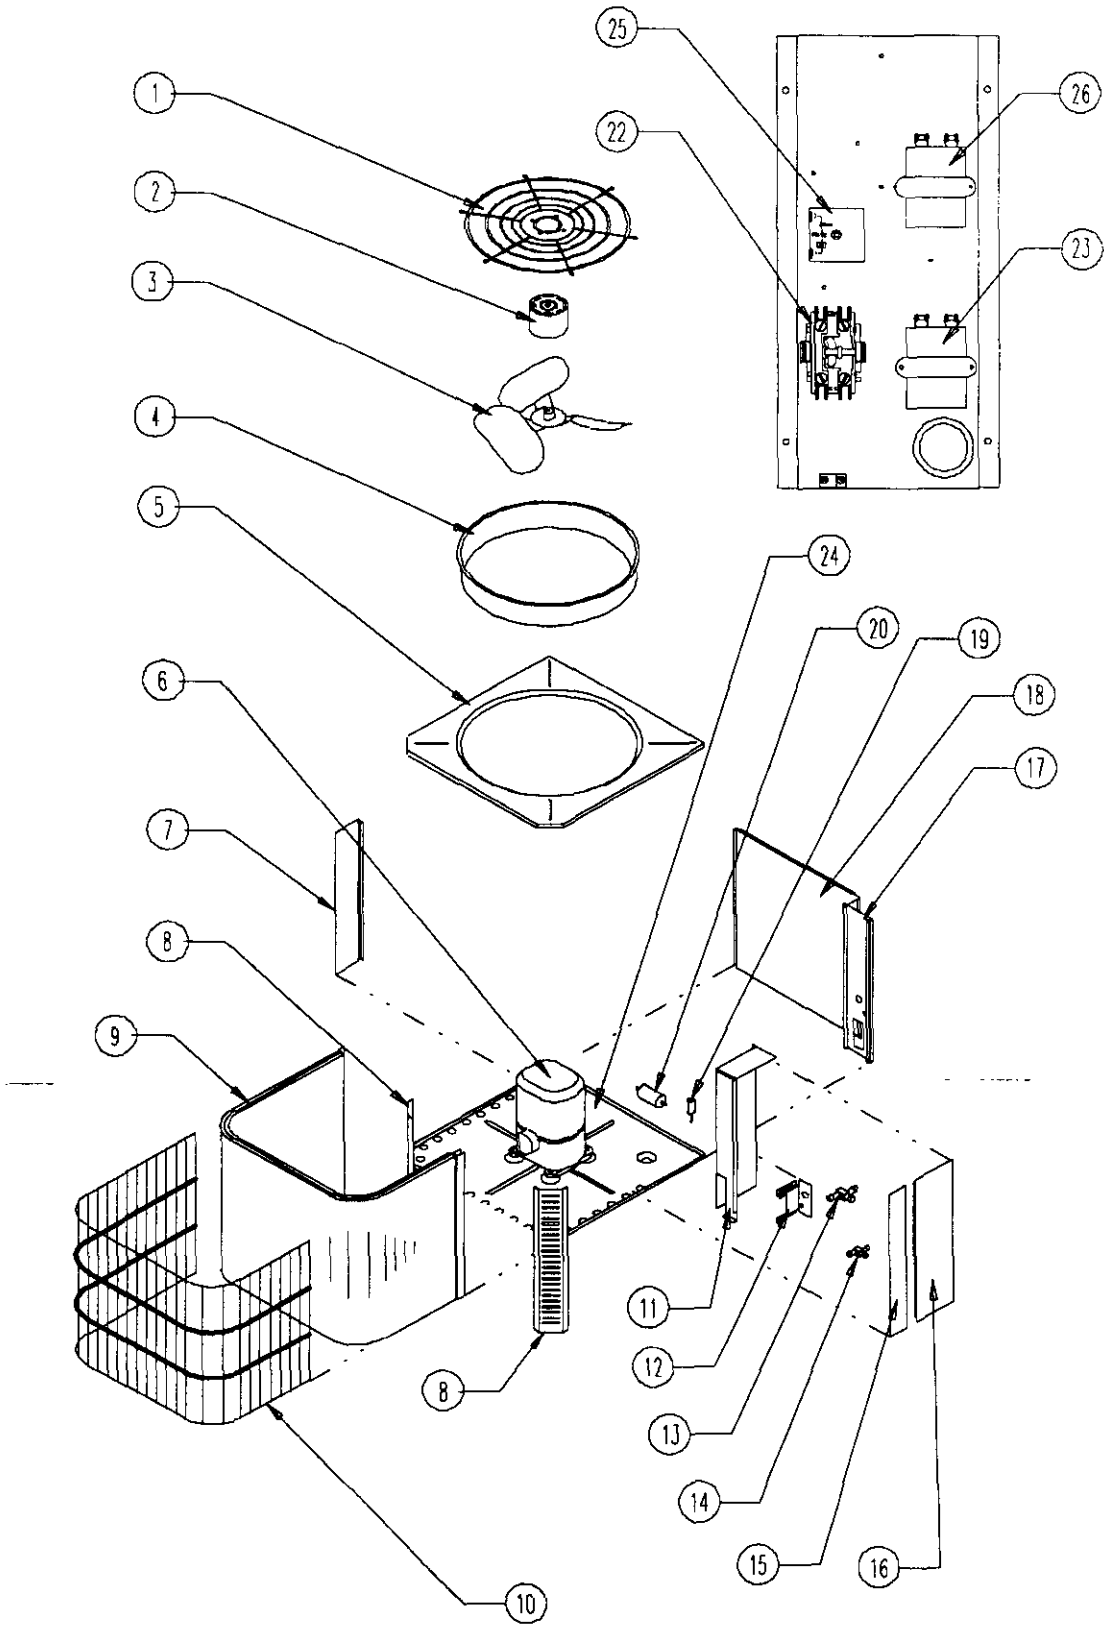

SEXP-129

FUNCTIONAL and CABINET COMPONENTS

Drawing No.	Part No.	Description	2412UACSB	3012UACSB	3612UACSB	4212UACSB	4812UACSB	6012UACSB	3014UACSA	3614UACSA
1	4051-018	Fan and Motor Mount Grille	X	X	X	X	X	X	X	X
2	8102-010	Motor — Fan	X	X	X					X
2	8104-010	Motor — Fan				X				
2	8105-028	Motor — Fan					X	X		
2	8105-044	Motor — Fan							X	
3	5151-036	Fan Blade				X				
3	5151-037	Fan Blade					X	X		
3	5151-039	Fan Blade	X	X	X				X	X
4	S166-014	Fan Venturi	X	X	X	X	X	X		X
4	S166-020	Fan Venturi							X	
5	106-093	Top	X	X	X	X	X	X	X	X
6	8000-176	Compressor ZR40K3-PFV				X				
6	8000-170	Compressor ZR22K3-PFV	X							
6	8000-171	Compressor ZR24K3-PFV							X	
6	8000-172	Compressor ZR28K3-PFV		X						X
6	8000-175	Compressor ZR34K3-PFV			X					
6	8000-149	Compressor ZR46K3-PFV-230					X			
6	8000-150	Compressor ZR57K3-PFV-230						X		
7	148-056	Left Rear Corner	X	X	X				X	
7	148-059	Left Rear Corner				X	X	X		X
8	148-055	Front Corner	X	X	X				X	
8	148-158	Front Corner				X	X	X		X
9	600-0017	Condenser Coil 5051-044	X	X						
9	600-0018	Condenser Coil 5051-046			X				X	
9	600-0016	Condenser Coil 5051-047				X				X
9	600-0030	Condenser Coil 5051-062					X	X		
10	7051-019	Coil Grille	X	X	X				X	
10	7051-020	Coil Grille				X	X	X		X
11	116-094	Control Panel Wrapper	X	X	X				X	
11	116-096	Control Panel Wrapper				X	X	X		X
12	140-194	Base Valve Support	X	X	X	X	X	X	X	X
13	5651-095	Base Valve 7/8"	X	X	X	X	X	X	X	X
14	5651-051	Base Valve 3/8"	X	X	X	X	X	X	X	X
15	100-146	Right Side	X	X	X				X	
15	100-147	Right Side				X	X	X		X

FUNCTIONAL and CABINETCOMPONENTS

Drawing No.	Part No.	Description	2412UACSB	3012UACSB	3612UACSB	4212UACSB	4812UACSB	6012UACSB	3014UACSA	3614UACSA
16	132-064	Control Panel Cover	X	X	X				X	
16	132-065	Control Panel Cover				X	X	X		X
17	148-054	Control Panel Cover	X	X	X				X	
17	148-057	Control Panel Cover				X	X	X		X
18	152-144	Service Door	X	X	X				X	
18	152-143	Service Door				X	X	X		X
19	8406-066	High Pressure Switch	X	X	X	X	X	X	X	X
20	5201-012	Drier	X	X	X	X	X	X	X	X
22	5401-007	Contactor 1P25A	X	X	X	X			X	X
22	8401-016	Contactor 1P35A					X	X		
23	8552-051	Capacitor 40+5/370	X							
23	8552-052	Capacitor 45+5/370		X						X
23	8552-063	Capacitor 50+5/370			X					
23	8552-054	Capacitor 55+5/440				X				
23	8552-050	Capacitor 40+5/370 (See Note)					C	C		
23	8552-062	Capacitor 60+5/370 (See Note)					D	D		
23	8552-061	Capacitor 80+5/370 (See Note)							X	
23	8552-035	Capacitor 40/370								
24	127-113	Base Assembly	X	X	X	X	X	X	X	X
25	8201-051	5 Min. Time Delay TDR-5B	X	X	X	X	X	X		
25	8201-079	Lock Out Relay							X	X
26	8201-033	Capacitor 20/370 (See Note)					C			
26	8204-035	Capacitor 40/370 (See Note)						C		
NS	4092-112	Wiring Diagram					X	X		
NS	4092-114	Wiring Diagram								X
NS	4092-115	Wiring Diagram							X	
NS	5625-061	Restrictor w/.061" Orifice	X							
NS	5625-067	Restrictor w/.067" Orifice		X						
NS	5625-072	Restrictor w/.072" Orifice			X					
NS	5625-081	Restrictor w/.081" Orifice				X				
NS	5625-063	Restrictor w/.063" Orifice							X	
NS	5625-069	Restrictor w/.069" Orifice								X
NS	8002-005	Compressor Sound Cover					X	X		

NOTE C: For units produced before date code A96

NOTE D: For units produced with date code A96 and after.

NS = Not Shown