
REPLACEMENT PARTS MANUAL

MULTI-TEC® WALL-MOUNT AIR CONDITIONER

Part of the Bard Free Cooling Unit System

Models:

W42LAPA	W48LAPA	W60LAPA	W72LBPA
W42LAPB	W48LAPB	W60LAPB	W72LBPB
W42LAPC	W48LAPC	W60LAPC	W72LBPC
W42LAPF	W48LAPF	W60LAPF	W72LBPF
	W48LAPQ	W60LAPQ	W72LBPQ

Contents


Description	Page	Description	Page
Cabinet Components		Freecooling Air Hood	
♦ Exploded View	2	♦ Exploded View	14
♦ Usage List	3, 4	♦ Usage List	14
Functional Components		Freecooling Damper Motor	
♦ Exploded View	5	♦ Exploded View	15
♦ Usage List	6, 7	♦ Usage List	15
Control Panel		General Notes	
♦ Layout View	8	➤ Revised and/or additional pages may be issued from time to time.	
♦ Usage List	9, 10	➤ A complete and current manual consists of pages shown in the following contents section.	
Blower Assembly		Important	
♦ Exploded View	11	➤ Contact the installing and/or local Bard distributor for all parts requirements. Make sure to have the complete model and serial number available from the unit rating plates.	
♦ Usage List	11		
♦ Exploded View	12		
♦ Usage List	12		
Freecooling Components			
♦ Exploded View	13		
♦ Usage List	13		



Bard Manufacturing Company, Inc.
Bryan, Ohio 43506
www.bardhvac.com

Manual: 2110-1439E
Supersedes: 2110-1439D
Date: 3-21-18

CABINET COMPONENTS

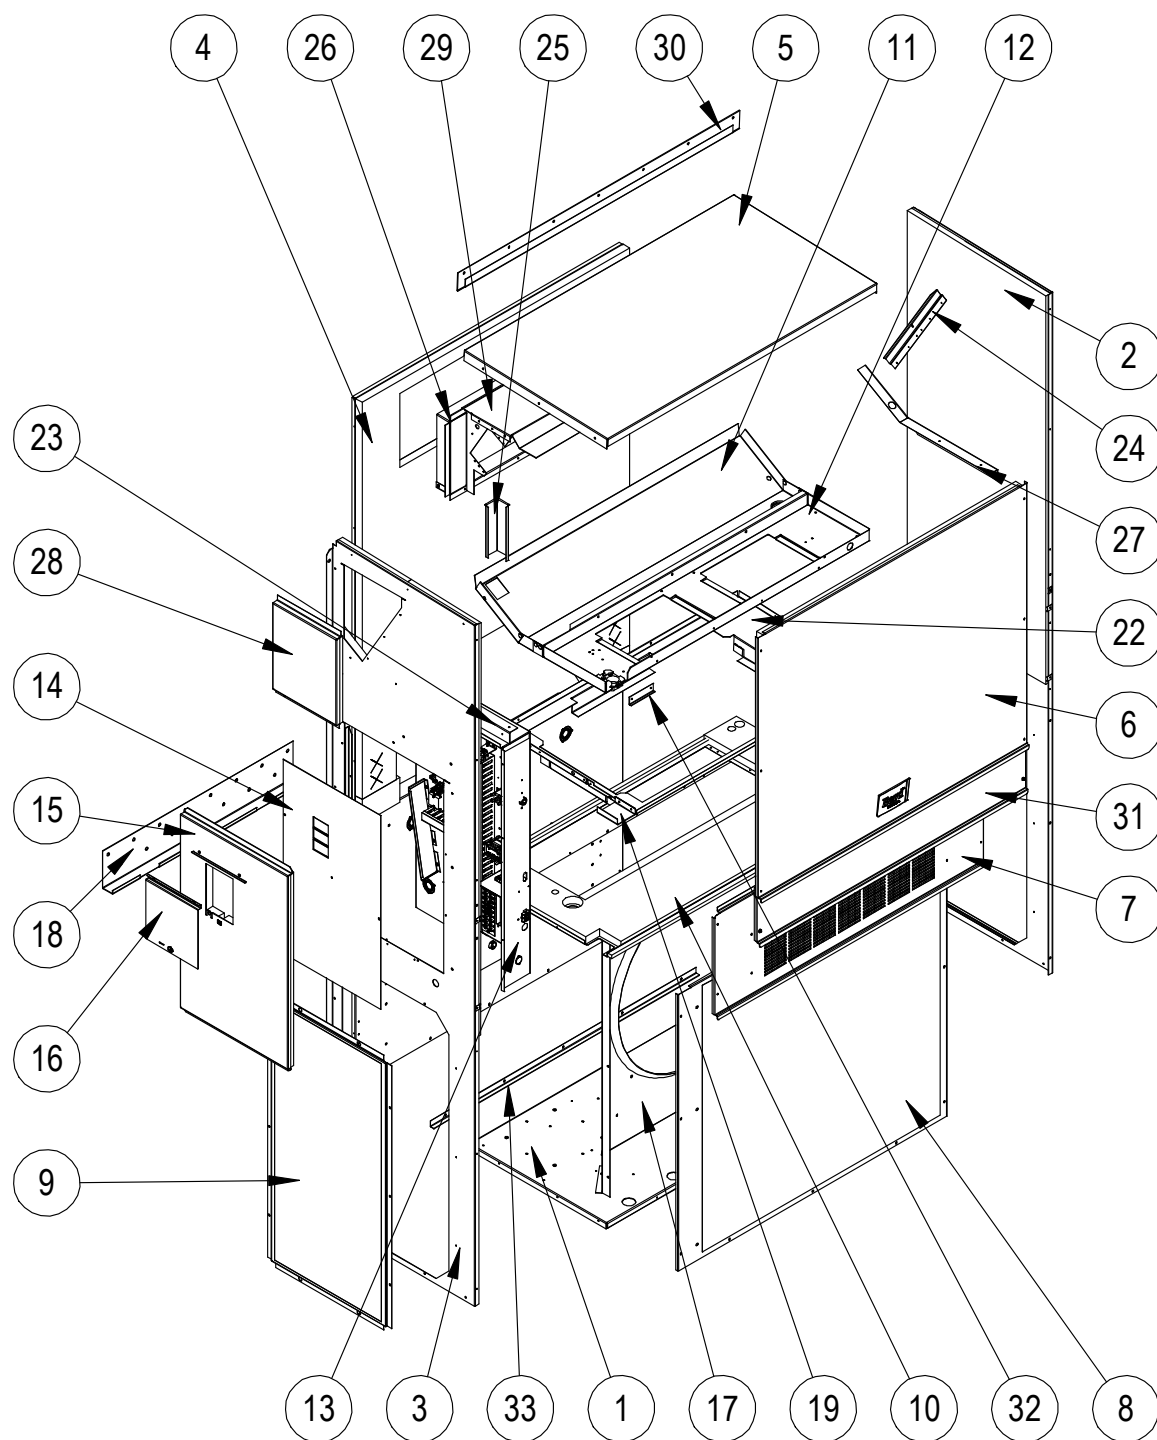

SEXP-875

This drawing is referenced in tables on pages 3 and 4

CABINET COMPONENTS

Dwg No.	Part Number	Description	W42LAPA,B	W42LAPC,F	W48LAPA,B	W48LAPC,F	W48LAPQ
1	127-554	Lower Base	X	X	X	X	X
1	S527-558 ③	Lower Base	X	X	X	X	X
2	S501-687-* ①	Right Side	X	X	X	X	X
2	S501-713 ②	Right Side	X	X	X	X	X
2	S501-1007 ③	Right Side	X	X	X	X	X
3	S501-842-* ①	Left Side	X	X	X	X	X
3	S501-927 ②	Left Side	X	X	X	X	X
3	S501-1008 ③	Left Side	X	X	X	X	X
4	S508-098	Back	X	X	X	X	X
4	S508-275 ②	Back	X	X	X	X	X
4	S508-395 ③	Back	X	X	X	X	X
5	S507-307-* ①	Top	X	X	X	X	X
5	S507-309 ②	Top	X	X	X	X	X
5	S507-310 ③	Top	X	X	X	X	X
6	S515-230-* ①	Upper Front	X	X	X	X	X
6	S514-231 ②	Upper Front	X	X	X	X	X
6	S515-232 ③	Upper Front	X	X	X	X	X
7	S553-522-* ①	Vent Option Door	X	X	X	X	X
7	S553-525 ②	Vent Option Door	X	X	X	X	X
7	S553-527 ③	Vent Option Door	X	X	X	X	X
8	118-049-* ①	Condenser Grille	X	X	X	X	X
8	118-065 ②	Condenser Grille	X	X	X	X	X
8	118-074 ③	Condenser Grille	X	X	X	X	X
9	118-057-* ①	Side Grille	2	2	2	2	2
9	118-063 ②	Side Grille	2	2	2	2	2
9	118-073 ③	Side Grille	2	2	2	2	2
10	S521Y517	Condenser Partition	X	X	X	X	X
10	S521-563 ③	Condenser Partition	X	X	X	X	X
11	S123-121	Drain Pan	X	X	X	X	X
11	S123-137 ②③	Drain Pan	X	X	X	X	X
12	121Y463	Blower Partition	X	X	X	X	X
13	Control Panel Assy.	See Control Panel Assy. Drawing & Parts List	X	X	X	X	X
14	S133-277	Control Panel Cover (Inner)	X		X		
14	S133-278	Control Panel Cover (Inner)		X		X	X
15	S533-280-* ①	Control Panel Cover (Outer)	X	X	X	X	X
15	S533-273 ②	Control Panel Cover (Outer)	X	X	X	X	X
15	S533-274 ③	Control Panel Cover (Outer)	X	X	X	X	X
16	S153-218-* ①	Disconnect Access Door	X	X	X	X	X
16	S153-387 ②	Disconnect Access Door	X	X	X	X	X
16	S153-405 ③	Disconnect Access Door	X	X	X	X	X
17	125-024	Fan Shroud	X	X	X	X	X
17	125-058 ③	Fan Shroud	X	X	X	X	X
18	113-140	Bottom Mounting Bracket	X	X	X	X	X
19	137-209	Fill	X	X	X	X	X
22	131Y099	Filter Tray	X	X	X	X	X
23	105Y878	Left Side Support	X	X	X	X	X
24	147-046	Left Evaporator Support	X	X	X	X	X
25	135-377	Raceway	2	2	2	2	2
26	S111Y034	Outlet Air Frame Assembly	X	X	X	X	X
27	105Y877	Right Side Support	X	X	X	X	X
28	S543-172-* ①	Right Side Cover Plate (Outer)	X	X	X	X	X
28	S543-176 ②	Right Side Cover Plate (Outer)	X	X	X	X	X
28	S543-177 ③	Right Side Cover Plate (Outer)	X	X	X	X	X
29	135-129	Heat Shield	X	X	X	X	X
30	113-150-* ①	Top Rain Flashing	X	X	X	X	X
30	113-359 ③	Top Rain Flashing	X	X	X	X	X
31	S553-521-* ①	Filter Door Assembly	X	X	X	X	X
31	S553-526 ②	Filter Door Assembly	X	X	X	X	X
31	S553-708 ③	Filter Door Assembly	X	X	X	X	X
32	105-1302	Grommet Retainer	X	X	X	X	X
33	105-1324	Close Off Angle	X	X	X	X	X
NS	BOP-5	Blank Off Plate	X	X	X	X	X
NS	S536-804	Cond. Partition Block Off Plate	X	X	X	X	X
NS	536-881 ③	Cond. Partition Block Off Plate	X	X	X	X	X

① Exterior cabinet parts are manufactured with various paint color options. To ensure the proper paint color is received, include the complete model and serial number of the unit for which cabinet parts are being ordered.

② Exterior cabinet parts are manufactured from aluminum Code "A"

NS – Not Shown

③ Exterior cabinet parts are manufactured from stainless steel Code "S"

CABINET COMPONENTS

Dwg No.	Part Number	Description	W60LAPA,B	W60LAPC,F	W60LAPQ	W72LBPA,B	W72LBPC,F	W72LBPQ
1	127-554	Lower Base	X	X	X	X	X	X
1	S527-558 ③	Lower Base	X	X	X	X	X	X
2	S501-912-* ①	Right Side	X	X	X	X	X	X
2	S501-932 ②	Right Side	X	X	X	X	X	X
2	S501-1011 ③	Right Side	X	X	X	X	X	X
3	S501-843-* ①	Left Side	X	X	X	X	X	X
3	S501-930 ②	Left Side	X	X	X	X	X	X
3	S501-1012 ③	Left Side	X	X	X	X	X	X
4	S508-251	Back	X	X	X	X	X	X
4	S508-252 ②	Back	X	X	X	X	X	X
4	S508-396 ③	Back	X	X	X	X	X	X
5	S507-307-* ①	Top	X	X	X	X	X	X
5	S507-309 ②	Top	X	X	X	X	X	X
5	S507-310 ③	Top	X	X	X	X	X	X
6	S515-246-* ①	Upper Front	X	X	X	X	X	X
6	S515-280 ②	Upper Front	X	X	X	X	X	X
6	S515-253 ③	Upper Front	X	X	X	X	X	X
7	S553-522-* ①	Vent Option Door	X	X	X	X	X	X
7	S553-525 ②	Vent Option Door	X	X	X	X	X	X
7	S553-527 ③	Vent Option Door	X	X	X	X	X	X
8	118-094-* ①	Condenser Grille	X	X	X	X	X	X
8	118-100 ②	Condenser Grille	X	X	X	X	X	X
8	118-099 ③	Condenser Grille	X	X	X	X	X	X
9	118-086-* ①	Side Grille	2	2	2	2	2	2
9	118-088 ②	Side Grille	2	2	2	2	2	2
9	118-090 ③	Side Grille	2	2	2	2	2	2
10	S521Y517	Condenser Partition	X	X	X	X	X	X
10	S521-563 ③	Condenser Partition	X	X	X	X	X	X
11	S123-121	Drain Pan	X	X	X	X	X	X
11	S123-137 ②③	Drain Pan	X	X	X	X	X	X
12	121Y463	Blower Partition	X	X	X	X	X	X
13	Control Panel Assy.	See Control Panel Assy. Drawing & Parts List	X	X	X	X	X	X
14	S133-277	Control Panel Cover (Inner)	X			X		
14	S133-278	Control Panel Cover (Inner)		X	X		X	X
15	S533-280-* ①	Control Panel Cover (Outer)	X	X	X	X	X	X
15	S533-273 ②	Control Panel Cover (Outer)	X	X	X	X	X	X
15	S533-274 ③	Control Panel Cover (Outer)	X	X	X	X	X	X
16	S153-218-* ①	Disconnect Access Door	X	X	X	X	X	X
16	S153-387 ②	Disconnect Access Door	X	X	X	X	X	X
16	S153-405 ③	Disconnect Access Door	X	X	X	X	X	X
17	125-070	Fan Shroud	X	X	X			
17	125-079 ③	Fan Shroud	X	X	X	X	X	X
17	125-084	Fan Shroud				X	X	X
18	113-140	Bottom Mounting Bracket	X	X	X	X	X	X
19	137-209	Fill	X	X	X	X	X	X
22	131Y099	Filter Tray	X	X	X	X	X	X
23	105Y878	Left Side Support	X	X	X	X	X	X
24	147-046	Left Evaporator Support	X	X	X	X	X	X
25	135-377	Raceway	2	2	2	2	2	2
26	S111Y034	Outlet Air Frame Assembly	X	X	X	X	X	X
27	105Y877	Right Side Support	X	X	X	X	X	X
28	S543-172-* ①	Right Side Cover Plate (Outer)	X	X	X	X	X	X
28	S543-176 ②	Right Side Cover Plate (Outer)	X	X	X	X	X	X
28	S543-177 ③	Right Side Cover Plate (Outer)	X	X	X	X	X	X
29	135-129	Heat Shield	X	X	X	X	X	X
30	113-150-* ①	Top Rain Flashing	X	X	X	X	X	X
30	113-359 ③	Top Rain Flashing	X	X	X	X	X	X
31	S553-521-* ①	Filter Door Assembly	X	X	X	X	X	X
31	S553-526 ②	Filter Door Assembly	X	X	X	X	X	X
31	S553-708 ③	Filter Door Assembly	X	X	X	X	X	X
32	105-1302	Grommet Retainer	X	X	X	X	X	X
33	105-1324	Close Off Angle	X	X	X	X	X	X
NS	BOP-5	Blank Off Plate	X	X	X	X	X	X
NS	S536-804	Cond. Partition Block Off Plate	X	X	X	X	X	X
NS	536-881 ③	Cond. Partition Block Off Plate	X	X	X	X	X	X


① Exterior cabinet parts are manufactured with various paint color options. To ensure the proper paint color is received, include the complete model and serial number of the unit for which cabinet parts are being ordered.

② Exterior cabinet parts are manufactured from aluminum Code "A"

NS – Not Shown

③ Exterior cabinet parts are manufactured from stainless steel Code "S"

FUNCTIONAL COMPONENTS

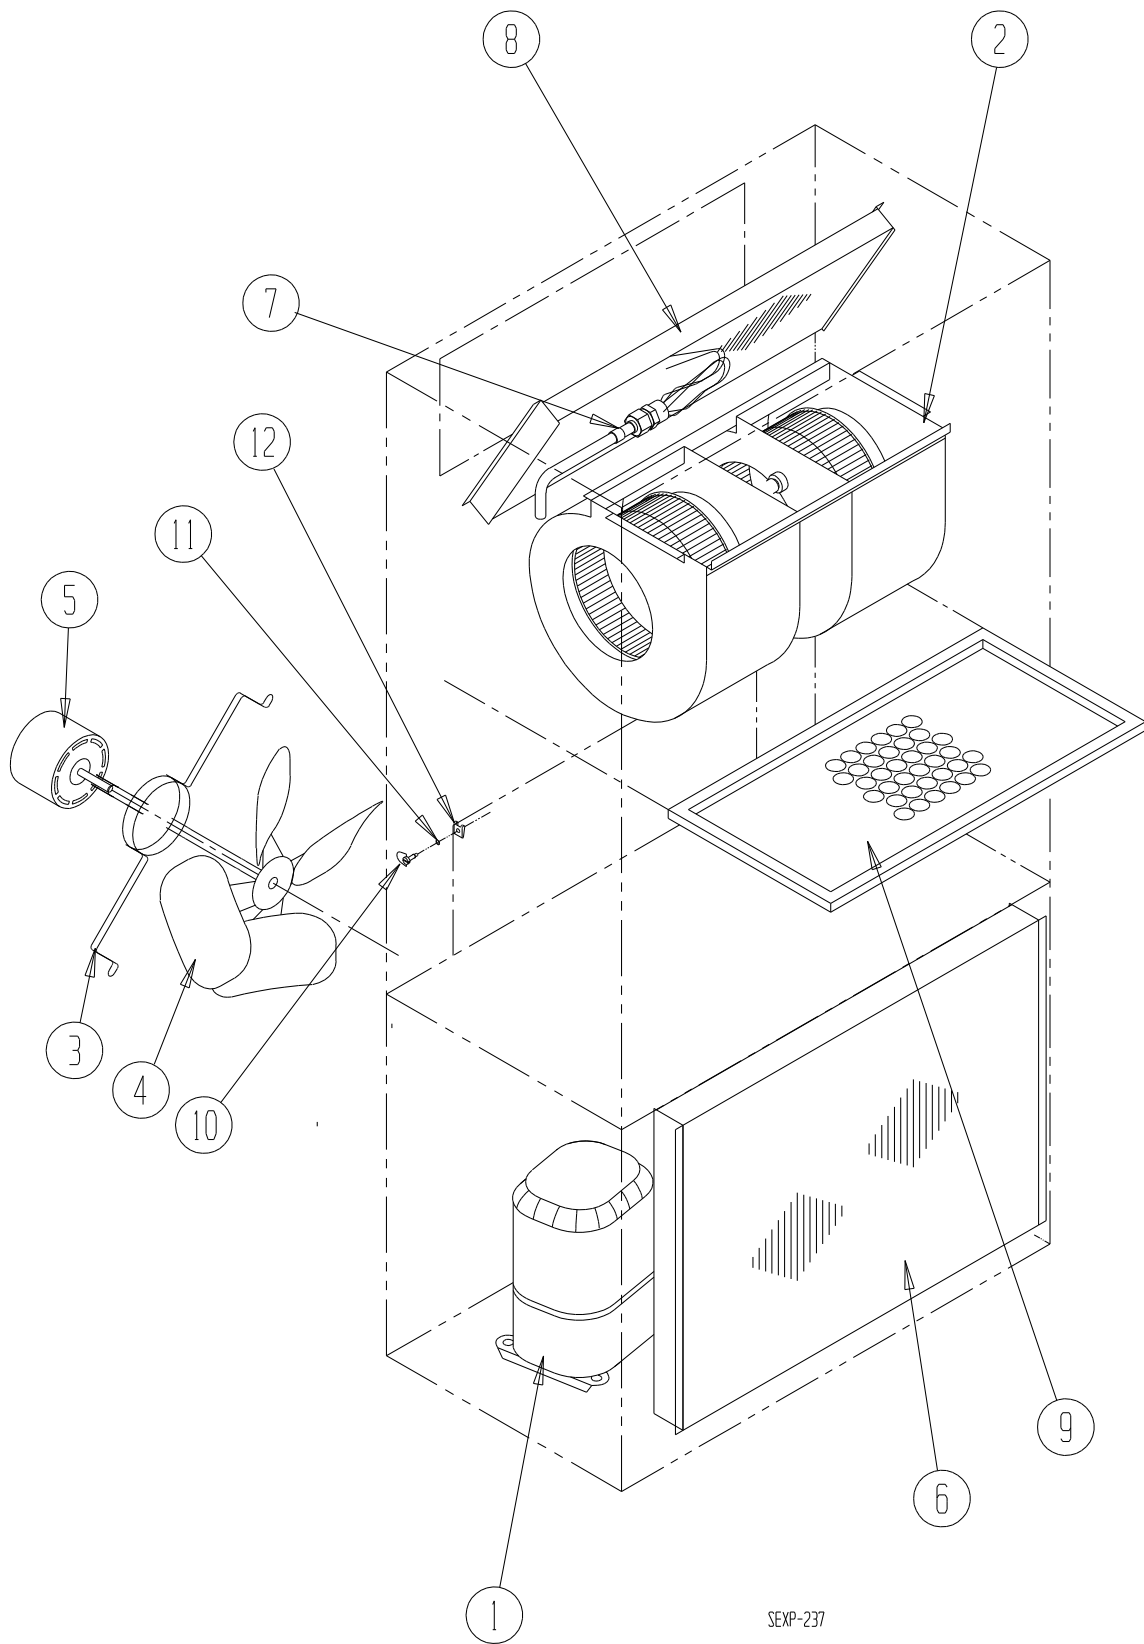

This drawing is referenced in tables on pages 6 and 7

FUNCTIONAL COMPONENTS

Dwg No.	Part Number	Description	W42LAPA	W42LAPB	W42LAPC	W42LAPF	W48LAPA	W48LAPB	W48LAPC	W48LAPF	W48LAPQ	W60LAPA	W60LAPB	W60LAPC	W60LAPF	W60LAPQ
1	8000-349	Compressor	X													
1	8000-350	Compressor		X												
1	8000-351	Compressor			X	X										
1	8000-343	Compressor					X									
1	8000-344	Compressor						X								
1	8000-345	Compressor							X	X						
1	8000-427	Compressor									X					
1	8000-415	Compressor										X				
1	8000-416	Compressor											X			
1	8000-417	Compressor												X	X	
1	8000-428	Compressor														X
2	S900-320	Blower Assembly	X	X		X	X	X		X	X					
2	S900-321	Blower Assembly			X				X							
2	S900-185	Blower Assembly										X	X		X	X
2	S900-186	Blower Assembly												X		
3	8200-004	Fan Motor Mount	X	X	X	X	X	X	X	X	X	X	X	X	X	X
3	8200-051 ①	Stainless Steel Fan Motor Mount	X	X	X	X	X	X	X	X	X	X	X	X	X	X
4	5151-060	Fan Blade	X	X	X	X	X	X	X	X	X	X	X	X	X	X
4	5151C060 ①	Coated Fan Blade	X	X	X	X	X	X	X	X	X	X	X	X	X	X
5	8105-030	Condenser Motor			X				X							
5	8105-066	Condenser Motor	X	X			X	X				X	X			X
5	8105-039	Condenser Motor				X				X					X	
6	5051-200BX	Condenser Coil	X	X	X	X										
6	5054-200BX	Condenser Coil - Coated	X	X	X	X										
6	5051-198BX	Condenser Coil										X	X	X	X	X
6	5054-198BX	Condenser Coil - Coated										X	X	X	X	X
6	5051-199BX	Condenser Coil					X	X	X	X	X					
6	5054-199BX	Condenser Coil - Coated					X	X	X	X	X					
7	800-0452	Distributor Assembly	X	X	X	X										
7	800-0451	Distributor Assembly					X	X	X	X	X					
7	800-0453	Distributor Assembly										X	X	X	X	X
8	917-0256BX	Evaporator Coil					X	X	X	X	X					
8	917-0266BX	Evaporator Coil - Coated					X	X	X	X	X					
8	917-0257BX	Evaporator Coil										X	X	X	X	X
8	917-0268BX	Evaporator Coil - Coated										X	X	X	X	X
8	917-0255BX	Evaporator Coil	X	X	X	X										
8	917-0265BX	Evaporator Coil - Coated	X	X	X	X										
9	7004-016	Air Filter 1" Throw-Away (20x30x1)	X	X	X	X	X	X	X	X	X	X	X	X	X	X
9	7003-030	Air Filter 1" Washable (20x30x1)	X	X	X	X	X	X	X	X	X	X	X	X	X	X
9	7004-027	Air Filter 2" Pleated (20x30x2)	X	X	X	X	X	X	X	X	X	X	X	X	X	X
10	1171-022	1/4 Turn Fastener	X	X	X	X	X	X	X	X	X	X	X	X	X	X
11	1171-024	1/4 Turn Retainer	X	X	X	X	X	X	X	X	X	X	X	X	X	X
12	1171-023	1/4 Receptacle	X	X	X	X	X	X	X	X	X	X	X	X	X	X
NS	5201-022	Filter Drier	X	X	X	X	X	X	X	X	X	X	X	X	X	X
NS	CMA-28	Low Ambient Control ②	X	X	X	X	X	X	X	X	X	X	X	X	X	X
NS	8406-142	High Pressure Switch	X	X	X	X	X	X	X	X	X	X	X	X	X	X
NS	8406-140	Low Pressure Switch	X	X	X	X	X	X	X	X	X	X	X	X	X	X
NS	5451-024	Tubing Isolation Grommet	2	2	2	2	2	2	2	2	2	2	2	2	2	2
NS	6031-009	Coremax Valve Core	2	2	2	2	2	2	2	2	2	2	2	2	2	2
NS	1171-028	Filter Door Clip	2	2	2	2	2	2	2	2	2	2	2	2	2	2
NS	1171-057	Filter Door Screw	2	2	2	2	2	2	2	2	2	2	2	2	2	2
NS	1171-027	Filter Door Screw Retainer	2	2	2	2	2	2	2	2	2	2	2	2	2	2
NS	8605-017	Crankcase Heater	X	X		X	X	X		X						
NS	8605-018	Crankcase Heater			X				X							
NS	8605-022	Crankcase Heater										X	X	X	X	X
NS	8605-021	Crankcase Heater 575V									X					

NS – Not Shown

① – Used with stainless steel cabinet option

② – Optional on these models

FUNCTIONAL COMPONENTS

Dwg No.	Part Number	Description	W72LBPA	W72LBPB	W72LBPC	W72LBPF	W72LBPG
1	8000-403	Compressor	X				
1	8000-404	Compressor		X			
1	8000-405	Compressor			X	X	
1	8000-418	Compressor					X
2	S900-348-001	Blower Assembly	X	X		X	X
2	S900-349-001	Blower Assembly			X		
3	8200-049	Fan Motor Mount	X	X	X	X	X
3	8200-052 ①	Stainless Steel Fan Motor Mount	X	X	X	X	X
4	5151-063	Fan Blade	X	X	X	X	X
4	5151C063 ①	Coated Fan Blade	X	X	X	X	X
5	8106-067	Condenser Motor			X		
5	8106-016	Condenser Motor	X	X		X	X
6	5051-197BX	Condenser Coil	X	X	X	X	X
6	5054-197BX	Condenser Coil - Coated	X	X	X	X	X
7	800-0454	Distributor Assembly	X	X	X	X	X
8	917-0347BX	Evaporator Coil	X	X	X	X	X
8	917-0348BX	Evaporator Coil - Coated	X	X	X	X	X
9	7004-016	Air Filter 1" Throw-Away (20x30x1)	X	X	X	X	X
9	7003-030	Air Filter 1" Washable (20x30x1)	X	X	X	X	X
9	7004-027	Air Filter 2" Pleated (20x30x2)	X	X	X	X	X
10	1171-022	1/4 Turn Fastener	X	X	X	X	X
11	1171-024	1/4 Turn Retainer	X	X	X	X	X
12	1171-023	1/4 Receptacle	X	X	X	X	X
NS	5201-022	Filter Drier	X	X	X	X	X
NS	CMA-28	Low Ambient Control (Flare) ②	X	X	X	X	X
NS	8406-142	High Pressure Switch	X	X	X	X	X
NS	8406-140	Low Pressure Switch	X	X	X	X	X
NS	5451-024	Tubing Isolation Grommet	2	2	2	2	2
NS	CMC-29	Freeze Thermostat Kit	X	X	X	X	X
NS	6031-009	Coremax Valve Core	2	2	2	2	2
NS	1171-028	Filter Door Clip	2	2	2	2	2
NS	1171-057	Filter Door Screw	2	2	2	2	2
NS	1171-027	Filter Door Screw Retainer	2	2	2	2	2
NS	8605-017	Crankcase Heater	X	X		X	
NS	8605-018	Crankcase Heater			X		
NS	8605-021	Crankcase Heater 575V					X


NS – Not Shown

① – Used with stainless steel cabinet option

② – Optional on these models

This table references drawing on page 5

CONTROL PANEL

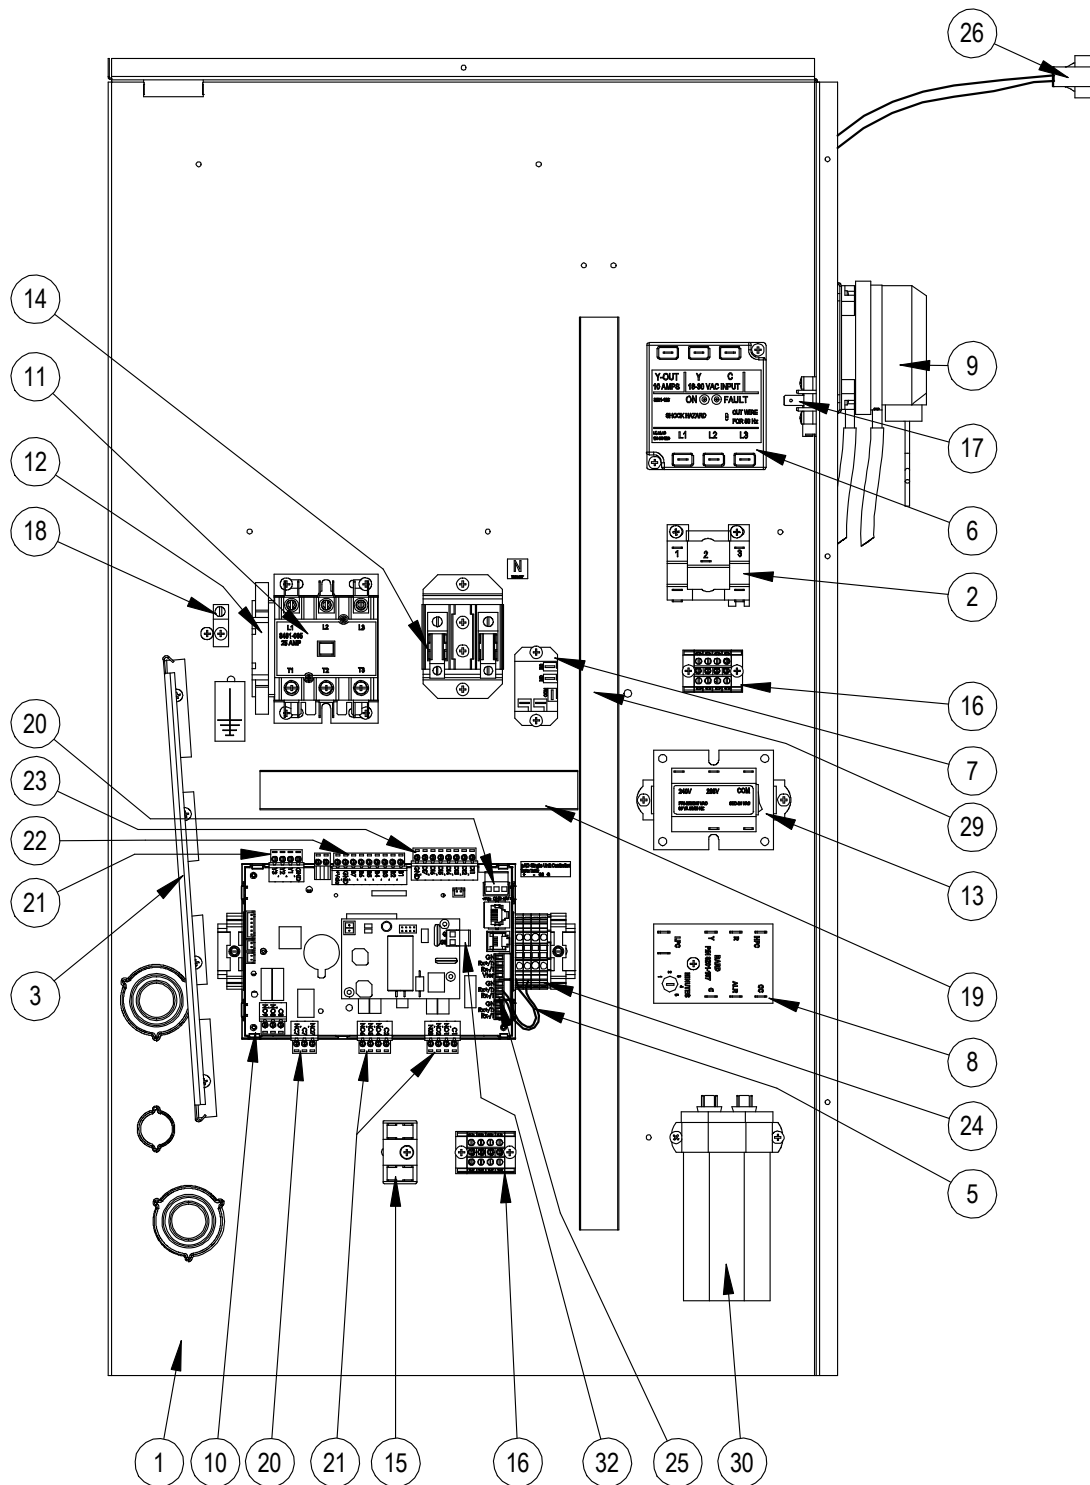

This drawing is referenced in tables on pages 9 and 10

SEXP-876

CONTROL PANEL

Dwg No.	Part Number	Description	W42LAPA	W42LAPB	W42LAPC	W42LAPF	W48LAPA	W48LAPB	W48LAPC	W48LAPF	W48LAPQ	W60LAPA	W60LAPB	W60LAPC	W60LAPF	W60LAPQ
1	517Y393	Control Panel Assembly	X	X	X	X	X	X	X	X	X	X		X	X	X
2	8201-032	Blower Relay	X	X	X	X	X	X	X	X	2	X	X	X	X	2
3	135-122	Wire Shield	X	X	X	X	X	X	X	X	X	X	X	X	X	X
5	3020-004	12" 2 Conductor Sheathed Cable	X	X	X	X	X	X	X	X	X	X	X	X	X	X
6	8201-126	3 Phase Line Monitor 50/60 Hz		X	X	X		X	X	X	X		X	X	X	X
7	8201-130	Alarm Relay	X	X	X	X	X	X	X	X	X	X	X	X	X	X
8	8201-157	Compressor Control Module	X	X	X	X	X	X	X	X	X	X	X	X	X	X
9	8301-057	Filter Switch w/Adjustment	X	X	X	X	X	X	X	X	X	X	X	X	X	X
10	8301-068-001*	UPC3-MULTI-TEC 2.0.0	X	X	X	X	X	X	X	X	X	X	X	X	X	X
11	8401-035	Contactor 3-Pole 25 Amp		X	X	X		X	X	X	X		X	X	X	X
11	8401-038	Contactor 2-Pole 40 Amp	X				X					X				
12	8401-042	Aux. NC Contact		X	X	X		X	X	X	X		X	X	X	X
13	8407-048	Transformer 208/240-24 75VA	X	X		X	X	X		X		X	X		X	
13	8407-050	Transformer 480/24VAC 75VA			X			X						X		
13	8407-066	Transformer 575/24VAC 100VA								X						X
14	8607-013	Terminal Block 2 Term. 240V				X				X					X	
15	8607-017	Terminal Block 240V 2 Terminal	X	X	X	X	X	X	X	X	X	X	X	X	X	X
16	8607-037	Terminal Block 4 Position	X	X	X	X	X	X	X	X	X	X	X	X	X	X
17	8607-041	Park Terminal	X	X	X	X	X	X	X	X	X	X	X	X	X	X
18	8611-006	Ground Terminal	X	X	X	X	X	X	X	X	X	X	X	X	X	X
19	8611-140-0800	2-1/4" x 1" Cable Duct x 8"	X	X	X	X	X	X	X	X	X	X	X	X	X	X
20	8611-147	3-Pin Circuit Board Connector	X	X	X	X	X	X	X	X	X	X	X	X	X	X
21	8611-148	4-Pin Circuit Board Connector	X	X	X	X	X	X	X	X	X	X	X	X	X	X
22	8611-149	9-Pin Circuit Board Connector	X	X	X	X	X	X	X	X	X	X	X	X	X	X
23	8611-185	8-Pin Circuit Board Connector	X	X	X	X	X	X	X	X	X	X	X	X	X	X
24	8611-150	Term. Block for DIN Rail RS485	X	X	X	X	X	X	X	X	X	X	X	X	X	X
25	8611-192	Small 3-Pin Circuit Board Connector	X	X	X	X	X	X	X	X	X	X	X	X	X	X
26	910-1935	Evap. Temp. Sensor Assembly	X	X	X	X	X	X	X	X	X	X	X	X	X	X
29	8611-139-2300	1-1/2" X 1-1/2" Cable Duct X 23"	X	X	X	X	X	X	X	X	X	X	X	X	X	X
30	8552-079	Compressor Capacitor	X													
30	8552-005	Outdoor Motor Capacitor		X		X		X		X	X		X		X	X
30	8552-026	Outdoor Motor Capacitor			X			X						X		
30	8552-059	Compressor Capacitor										X				
30	8552-089	Compressor Capacitor					X									
32	8611-183	2-Pin Circuit Board Connector	X	X	X	X	X	X	X	X	X	X	X	X	X	X
NS	3000-1222	Compressor Plug/Harness Wire Assembly	X				X									
NS	3000-1230	Compressor Plug/Harness Wire Assembly		X	X	X		X	X	X	X					
NS	3000-1508	Compressor Plug/Harness Wire Assembly										X				
NS	3000-1509	Compressor Plug/Harness Wire Assembly											X	X	X	X
NS	8301-075	USB Micro Cable Female to Male	X	X	X	X	X	X	X	X	X	X	X	X	X	X
NS	4207-100	Wiring Diagram	X				X					X				
NS	4207-200	Wiring Diagram		X				X					X			
NS	4207-300	Wiring Diagram			X			X						X		
NS	4207-600	Wiring Diagram				X				X					X	
NS	4207-703	Wiring Diagram									X					X

* Replacement part will have a letter attached to the end of the part number to designate software version (Example: 8301-068-001**A**).
A software upgrade of all PLCs onsite (units and controllers) should accompany any PLC replacement. Latest revisions of software, change log and instructions are available on the Bard website at <http://www.bardhvac.com/software-download/>

NS = Not Shown

CONTROL PANEL


Dwg No.	Part Number	Description	W72LBPA	W72LBPB	W72LBPC	W72LBPF	W72LBPG
1	517Y393	Control Panel Assembly	X	X	X	X	X
2	8301-032	Blower Relay	X	X	X	X	2
3	135-122	Wire Shield	X	X	X	X	X
5	3020-004	12" 2 Conductor Sheathed Cable	X	X	X	X	X
6	8201-126	3 Phase Line Monitor 50/60 Hz		X	X	X	X
7	8201-130	Alarm Relay	X	X	X	X	X
8	8201-157	Compressor Control Module	X	X	X	X	X
9	8301-057	Filter Switch w/Adjustment	X	X	X	X	X
10	8301-068-001*	UPC3-MULTI-TEC 2.0.0	X	X	X	X	X
11	8401-035	Contactor 3-Pole 25 Amp		X	X	X	X
11	8401-038	Contactor 2-Pole 40 Amp	X				
12	8401-042	Aux. NC Contact		X	X	X	X
13	8407-048	Transformer 208/240-24 75VA	X	X		X	
13	8407-050	Transformer 480/24VAC 75VA			X		
13	8407-066	Transformer 575/24VAC 100VA					X
14	8607-013	Terminal Block 2 Term. 240V				X	
15	8607-017	Terminal Block 240V 2 Terminal	X	X	X	X	X
16	8607-037	Terminal Block 4 Position	X	X	X	X	X
18	8611-006	Ground Terminal	X	X	X	X	X
19	8611-140-0800	2-1/4" x 1" Cable Duct x 8"	X	X	X	X	X
20	8611-147	3-Pin Circuit Board Connector	X	X	X	X	X
21	8611-148	4-Pin Circuit Board Connector	X	X	X	X	X
22	8611-149	9-Pin Circuit Board Connector	X	X	X	X	X
23	8611-185	8-Pin Circuit Board Connector	X	X	X	X	X
24	8611-150	Term. Block for DIN Rail RS485	X	X	X	X	X
25	8611-192	Small 3-Pin Circuit Board Connector	X	X	X	X	X
26	910-1935	Evap. Temp. Sensor Assembly	X	X	X	X	X
29	8611-139-2300	1-1/2" X 1-1/2" Cable Duct X 23"	X	X	X	X	X
30	8552-005	Outdoor Motor Capacitor			X		
30	8552-097	Compressor Capacitor	X				
30	8552-004	Outdoor Motor Capacitor		X		X	X
32	8611-183	2-Pin Circuit Board Connector	X	X	X	X	
NS	3000-1510	Compressor Plug/Harness Wire Assembly	X				
NS	3000-1511	Compressor Plug/Harness Wire Assembly		X	X	X	X
NS	3000-1512	Motor Power Harness	X	X	X	X	X
NS	3000-1513	Motor Control Harness	X	X	X	X	X
NS	8301-075	USB Micro Cable Female to Male	X	X	X	X	X
NS	4207-101	Wiring Diagram	X				
NS	4207-201	Wiring Diagram		X			
NS	4207-301	Wiring Diagram			X		
NS	4207-601	Wiring Diagram				X	
NS	4207-704	Wiring Diagram					X

* Replacement part will have a letter attached to the end of the part number to designate software version (Example: 8301-068-001A). A software upgrade of all PLCs onsite (units and controllers) should accompany any PLC replacement. Latest revisions of software, change log and instructions are available on the Bard website at <http://www.bardhvac.com/software-download/>

NS = Not Shown

This table references drawing on page 8


BLOWER ASSEMBLY

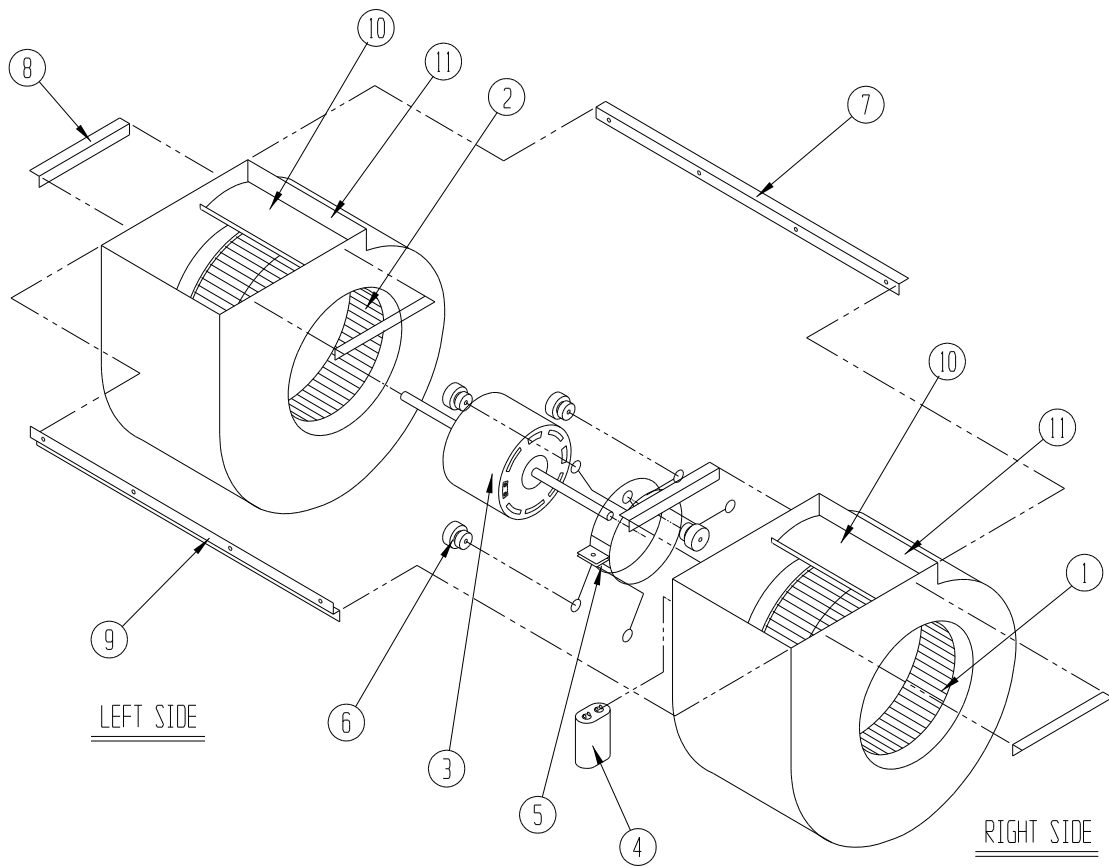

SEXP-178

Dwg No.	Part Number	Description	900-320	900-321	900-185	900-186
1	5152-011	10 Inch Wheel (CW)			X	X
1	5152-057	9 Inch Wheel (CW)	X	X		
2	5152-012	10 Inch Wheel (CW)			X	X
2	5152-058	9 Inch Wheel (CW)	X	X		
3	8105-061	Blower Motor (230/208)	X			
3	8105-062	Blower Motor (460)		X		
3	8106-046	Blower Motor (230/208)			X	
3	8106-025	Blower Motor (460)				X
4	8552-091	Capacitor	X	X	X	
4	8552-005	Capacitor				X
5	8200-040	Motor Mount	X	X	X	X
6	5451-011	Grommets	6	6	6	6
7	105-881	Back Brace	X	X	X	X
8	105-880	Side Angle	4	4	4	4
9	103-389	Front Brace	X	X	X	X
10	151-101	Housing	2	2	2	2
11	144-166	Diffuser	2	2	2	2


BLOWER ASSEMBLY

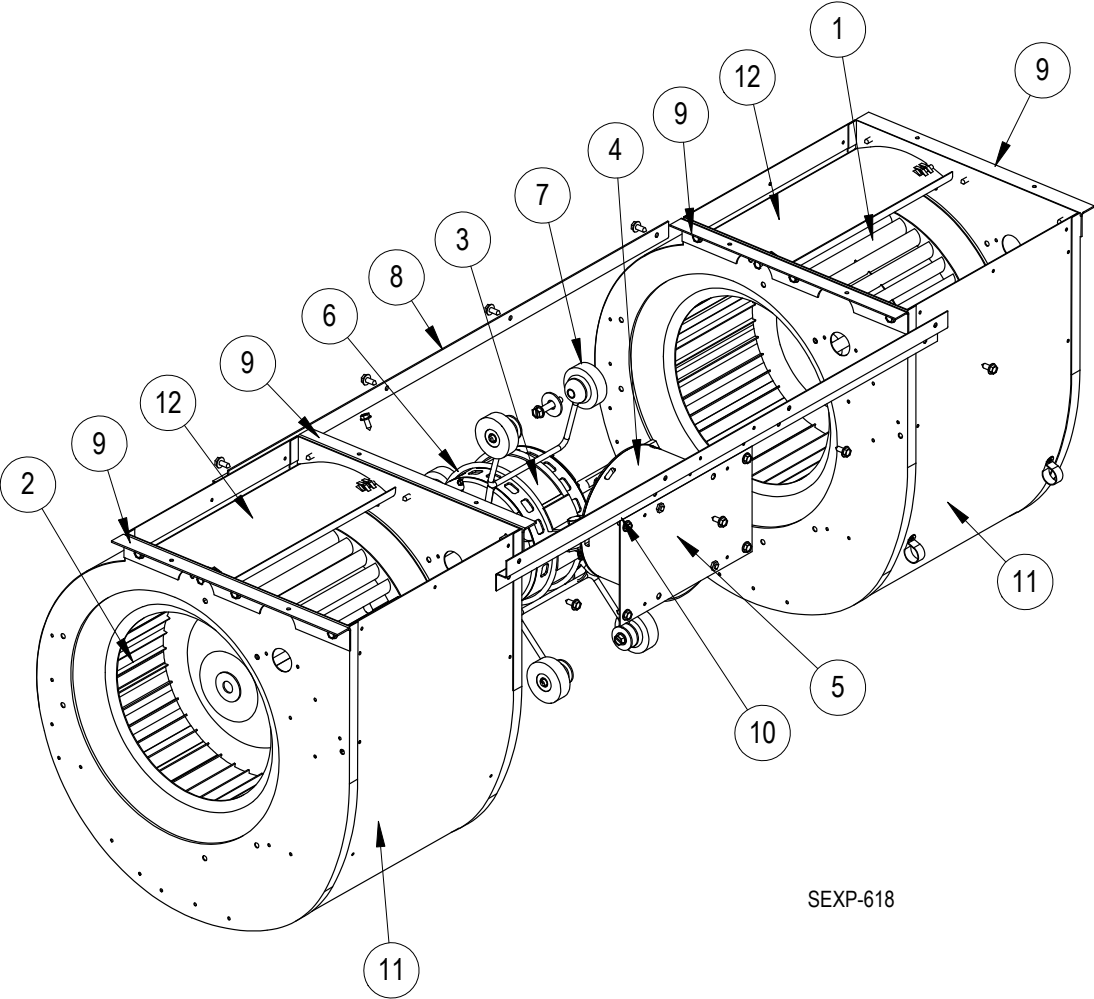

SEXP-618

Dwg. No.	Part Number	Description	S900-348-001	S900-349-001
1	5152-011	10-Inch Wheel (CW)	X	X
2	5152-012	10-Inch Wheel (CCW)	X	X
3	S8107-019-0135	3/4 HP Programmed Motor	X	
3	S8107-026-0136	3/4 HP Programmed Motor		X
4	C8107-019-0135	Programmed Motor Control Only	X	
4	C8107-026-0136	Programmed Motor Control Only		X
5	112-580	Blower Motor Control Bracket	X	X
6	8200-040	Motor Mount	X	X
7	5451-011	Grommets	6	6
8	105-881	Back Brace	X	X
9	105-880	Side Angle	4	4
10	103-389	Front Brace	X	X
11	151-101	Housing	2	2
12	144-166	Diffuser	2	2

FREECOOLING COMPONENTS

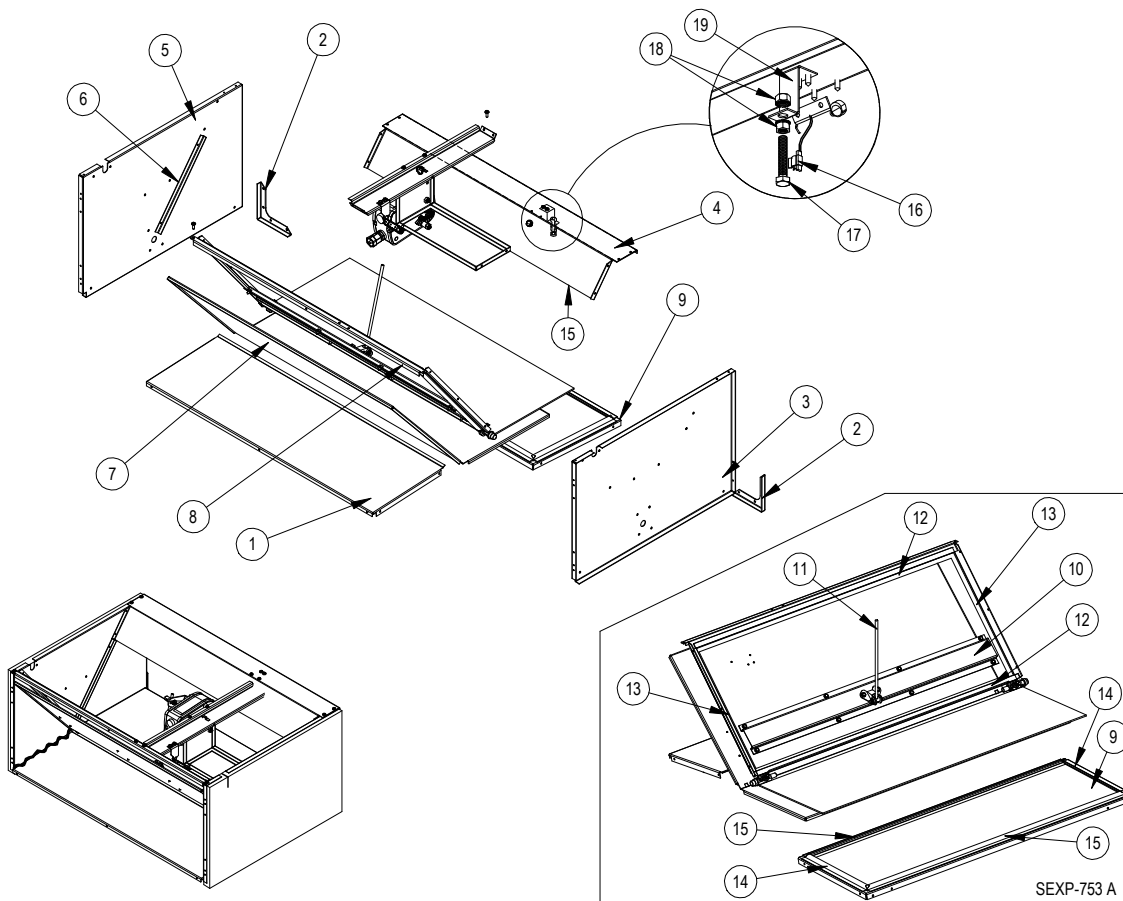


Dwg
No.

Part Number

Description

1	137-734	Lower Front Partition
2	113-526	Corner Bracket
3	S101X981	Right Side
4	S137-871	Upper Rear Partition
5	S101Y981	Left Side
6	S105-1341	Blade Seal Angle
7	S139-323	Blade
8	S137-870	Upper Front Partition
9	S137-736	Lower Rear Partition
10	141-426	Blade Support
11	8602-077	1/4 x 9" Rod
12	S1921-067-2909	29-9/16" Damper Blade Seal
13	S1921-067-1206	12-3/8" Damper Blade Seal
14	S1921-067-1011	10-11/16" Damper Blade Seal
15	S1921-067-2906	29-3/8" Damper Blade Seal
16	8408-044	Sensor 10K Ohm Curve J w/ 5/16" Clip
17	1012-052	Hex Head Bolt 5/16 - 18x1-3/4" 0.0005 Zinc w/ Yellow Chromate
18	1012-210	5/16" Nut 0.0005 Zinc w/ Yellow Chromate
19	113-541	Sensor Bracket

FREECOOLING AIR HOOD

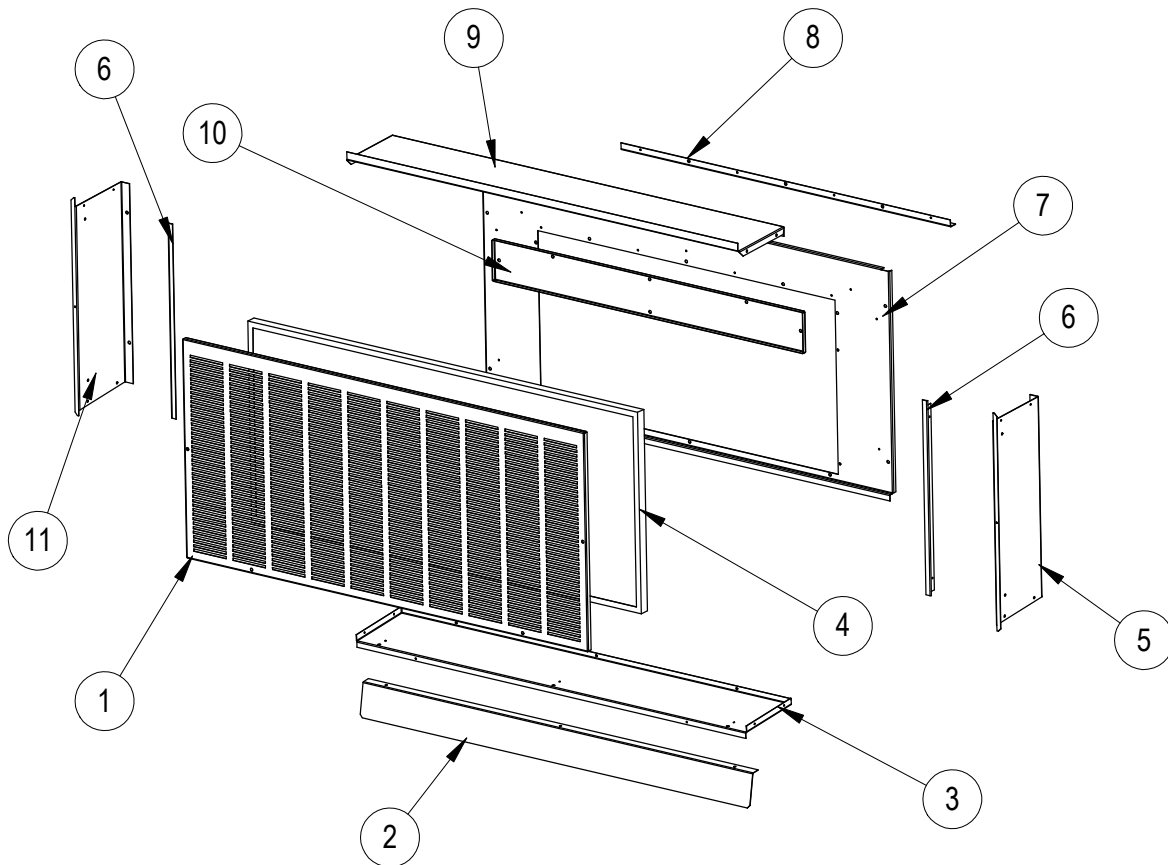


SEXP-752

Dwg. No.	Part Number	Description
1	115-283-* ①	Hooded Front Door
2	113-484-* ①	Bottom Divider Bracket
3	S127-489-* ①	Hood Bottom
4	7003-062	Mist Filter 40-1/4" x 17-7/8" x 7/8"
5	S101-870-* ①	Right Side
6	105-1342	Side Filter Angle
7	553-600-* ①	Hood Mounting Door
8	105-1343	Filter Door Angle
9	S107-344-* ①	Hood Top
10	553-596	Filter Door
11	S101-860-* ①	Left Side
	S920-0232	Complete Hood Assembly – Beige
	S920-0233	Complete Hood Assembly – White
	S920-0234	Complete Hood Assembly – Gray

① Exterior cabinet parts are manufactured with various paint color options. To ensure the proper paint color is received, reference the following codes:

Beige	-X	Buckeye Gray	-4
White	-1		

FREECOOLING DAMPER MOTOR

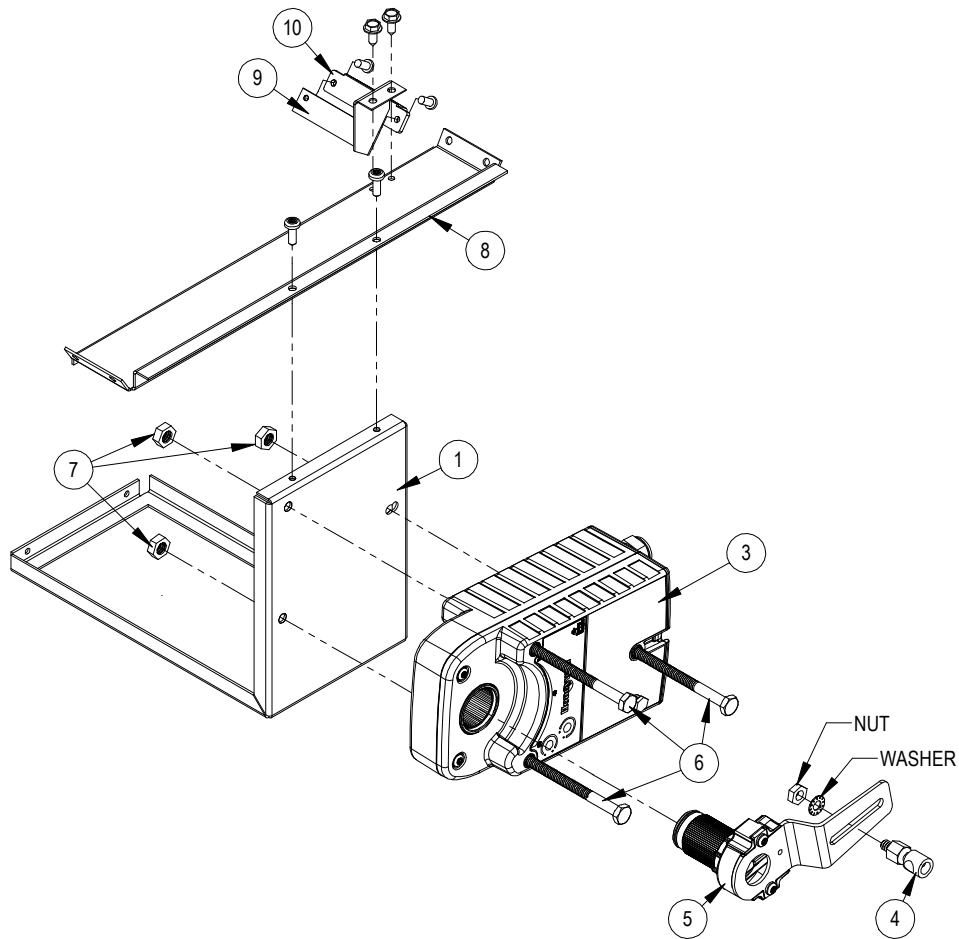

SEXP-879

Dwg.
No.

Part Number

Description

1	141-467	Actuator Support Plate
3	8602-067	Direct Coupled Actuator
4	8602-008	Ball Joints
5	8602-068	Crank Arm
6	1012-174	1/4" - 20x3 - 1/4 Hex Cap Screws
7	1012-201	1/4-20 Steel Keps Hex Nut Zinc
8	141-468	Actuator Support Bar
9	113-655	Blade Switch Bracket
10	8406-150	Lever Switch SPDT Sealed Pilot Duty
NS	910-2014	Outdoor Temperature Sensor