
INSTALLATION INSTRUCTIONS

ELECTRIC HEAT PACKAGES

Models:	EHWH02A-A04	EHW02A-A08
	EHWA24A-A04	EHW24H-A04
	EHW24H-A08	EHWH02A-A08
	EHWA02-A05	EHWA02A-A08
	EHWH24-B06	EHW24H-B06
	EHWH24B-C06	EHWA02A-A10
	EHWH30-A05	EHWA24-B06
	EHWH36-A05	EHWA03-A05
	EHWH30-A10	EHWA03-A08
	EHWH36-A10	EHWA03-A10
	EHWH36-A15	EHWA03-A15
	EHW36A-B06	EHW36H-B09
	EHW36H-B15	EHWH03-B06
	EHWA03-B06	EHWH03-B09
	EHWA03-B09	EHW36H-B06
	EHWH36-B15	EHWA03-B15
	EHWA37-B15	EHWA03A-C15
	EHWH31-C06	EHS31-A04
	EHWH03A-C15	EHS31-A08
	EHWC03A-C06	EHS31-B06
	EHWC03A-C09	EHS31-C06

**FOR USE WITH SH, WA AND WH SERIES
WALL MOUNTED AIR CONDITIONERS
AND HEAT PUMPS**

(See Tables 1A — 1F for Model Usage Matrix)



Bard Manufacturing Company, Inc.
Bryan, Ohio 43506
Since 1914...Moving, ahead just as planned.


Manual: 2100-268H
Supersedes: 2100-268G
File: Volume III, Tab 18
Date: 10-21-10

CONTENTS

Model Nomenclature Legend	3	Figures	
Description	3	Figure 1	Wiring - Main Power 9
Important	3	Figure 2	Electric Heat Access Panel & Control Panel Cover Locations 11
Shipping Damage	3	Figure 3	Screw Mounting Holes 11
Unpacking the Electric Heat Package	3	Figure 4	A through D 13
Wiring Main Power	3	Figure 4E	Install Heat Package with Two Heat Strips 14
Installation	3 & 10	Figure 5	Installing Heater Base and Connecting 15
		Figure 6	Serial Plate Showing Approved Heater Packages 16
		Tables	
		Table 1A	Approved Heater Usage Matrix 4
		Table 1B	Approved Heater Usage Matrix 5
		Table 1C	Approved Heater Usage Matrix 5
		Table 1D	Approved Heater Usage Matrix 6
		Table 1E	Approved Heater Usage Matrix 7
		Table 1F	Approved Heater Usage Matrix 7
		Table 2	Electrical Data and BTU Output 8
		Table 3	References to Figures 3 & 4 By Model Number 12

BARD MANUFACTURING COMPANY, INC.
BRYAN, OHIO 43506

MODEL NOMENCLATURE LEGEND

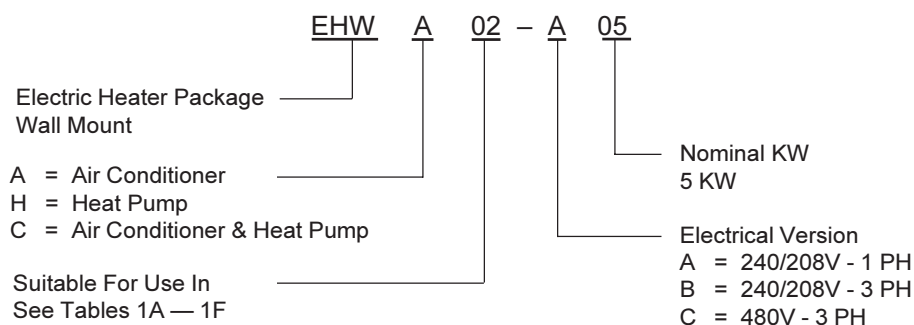

DESCRIPTION

The EHWA, EHWH and EHWC series electric heater packages are field installable heater packages suitable for use with Bard wall mount hi boy air conditioners and heat pumps. The packages consist of the electric heat strip, the heater control base which includes the heat contactors, and circuit breaker or pull disconnects, installation instructions and wiring diagrams. See Table 1 for nominal electrical data and BTU output. ***Before installation, check unit serial plate to insure the heater package model that you intend to install is a listed heater package that is suitable for use with the Bard wall mount hi boy unit.*** See Figure 6.

IMPORTANT

The equipment covered in this manual is to be installed by trained, experienced service and installation technicians.

SHIPPING DAMAGE

Upon receipt of equipment, the carton should be checked for external signs of shipping damage. If damage is found, the receiving party must contact the last carrier immediately, preferably in writing, requesting inspection by the carrier's agent.

UNPACKING THE ELECTRIC HEAT PACKAGE

Remove the heat package from the shipping carton. The heat package must consist of the following:

1. Basic heater
2. Electric heat control base and wiring.
3. Installation instructions.
4. Wiring diagram (2), one to be applied to unit.
5. Adhesive label to remark serial plate to indicate new model number. This is attached to the front of these instructions.

WIRING MAIN POWER

1. On all installations, size unit power supply wiring for the minimum circuit ampacity requirement for the unit and heater package combination listed on the unit serial plate.

WARNING

Install properly sized power supply leads for the unit/heater combination minimum circuit ampacity as listed on the unit serial plate. Hazard of fire. Failure to install properly sized conductors could result in fire causing damage, bodily injury or death.

TABLE 1A
R-22 APPROVED HEATER USAGE MATRIX

240/220 V 1 Phase	WA182-A	WA182-D	WA242-A	WA242-D	WA242HA	WA253-A	WA253-D	WA302-A	WA302-D	WA361-A	WA361-D	WA372-A	WA372-D	WE252-D	WE301-D	WE371-D	WH183-A	WH242-A	WH242DA	WH261-A	WH301-A	WH301DA	WH301LA	WH311-A	WH361-A	WH361DA	WH361HA	WH361LA	SH311DA	SH261DA	SH311-A	SH261-A	
	X	X	X	X		X	X								X		X																
	X	X	X	X		X	X								X																		
	X		X					X	X	X	X	X	X			X																	
								X	X	X	X	X	X	X		X																	
									X	X	X	X	X	X		X																	
									X	X	X	X	X	X		X																	

TABLE 1B
R-22 APPROVED HEATER USAGE MATRIX

240/220 V 230/208 V 3 Phase	WA242-B	WA242HB	WA242TB	WA253-B	WA302-B	WA361-B	WA361-E	WA361HB	WA361TB	WA372-B	WA372-E	WA372TB	WH242-B	WH242DB	WH262-B	WH301-B	WH301DB	WH301LB	WH311-B	WH361-B	WH361DB	WH361LB	SH311DB	SH261DB	SH261-B	SH311-B
EHWA03-B06					X	X	X		X	X	X	X						X				X				
EHWA03-B09					X	X			X			X										X				
EHWA03-B15					X	X			X																	
EHWA24-B06	X	X	X	X																						
EHWA37-B15										X																
EHWH03-B06																X	X				X					
EHWH03-B09																X	X				X					
EHWH24-B06													X													
EHWH36-B15																				X						
EHSH31-B06																										
EHW36-B06																										

TABLE 1C
R-22 APPROVED HEATER USAGE MATRIX

415 V 460 V 3 Phase	WA242-F	WA253-F	WA302-C	WA302-F	WA302TF	WA361-C	WA361-F	WA361TF	WA372-C	WA372-F	WA372TF	WE252-F	WE301-F	WE371-F	WH242-C	WH242DC	WH262-C	WH301-C	WH301DC	WH311-C	WH361-C	WH361DC	SH261-C	SH261DC	SH311-C	SH311-DC
EHWC03A-C06			X			X			X										X			X				
EHWC03A-C09			X	X	X	X	X	X	X	X	X		X	X				X	X	X	X	X				
EHWA03A-C15			X	X	X	X	X	X	X	X	X		X	X				X	X							
EHWH03A-C15																										
EHWH24B-C06	X	X													X					X						
EHWH31-C06																										
EHSH31-C06																										

WARNING

Only use factory provided heaters in approved combinations of heater models to unit models as shown in table 1A — 1F. Failure to use approved combinations as shown or modification to heaters could result in fire causing damage, bodily injury or death.

TABLE 1D
R-410A APPROVED HEATER USAGE MATRIX

240/220 V 1 Phase	W18A1-A	W24A1-A	W24A1-D	W30A1-A	W30A1-D	W36A1-A	W36A1-D	S26H1-A	S26H1DA	S31H1-A	S31H1DA	W18H1-A	W24H1-A	W24H1DA	W26H1-A	W30H1-A	W30H1DA	W31H1-A	W36H1-A	W36H1DA
EHS31-A04								X	X	X	X				X			X		
EHW02A-A08	X	X																		
EHW24H-A04													X	X						
EHW24H-A08													X	X						
EHWA02-A05	X	X	X																	
EHWA02A-A08			X																	
EHWA02A-A10	X	X																		
EHWA03-A05				X	X	X	X													
EHWA03-A08				X		X														
EHWA03-A10				X	X	X	X													
EHWA03-A15				X		X														
EHWA24A-A04		X																		
EHWH02A-A04												X								
EHWH02A-A08												X								
EHWH30-A05																X				
EHWH30-A10																X				
EHS31-A08								X	X	X	X				X			X		
EHWH36-A05																	X		X	X
EHWH36-A10																	X		X	X
EHWH36-A15																			X	

TABLE 1E
R-410A APPROVED HEATER USAGE MATRIX

240/220 V 230/208 V 3 Phase	W24A1-B	W30A1-B	W36A1-B	W36A1-E	S26H1-B	S26H1DB	S31H1-B	S31H1DB	W24H1-B	W24H1DB	W26H1-B	W30H1-B	W30H1DB	W31H1-B	W36H1-B	W36H1DB
EHS31-B06					X	X	X	X			X			X		
EHW24H-B06									X	X						
EHW36A-B06			X													
EHW36H-B06															X	X
EHW36H-B09												X				X
EHW36H-B15															X	
EHWA03-B06		X		X												
EHWA03-B09		X	X													
EHWA24-B06	X															
EHWA37-B15		X	X													
EHWH03-B06												X	X			
EHWH03-B09												X			X	


TABLE 1F
R-410A APPROVED HEATER USAGE MATRIX

415 V 460 V 3 Phase	W24A1-C	W24A1-F	W24H1-C	W24H1DC	W30A1-C	W30A1-F	W36A1-C	W36A1-F	S26H1-C	S26H1DC	S31H1-C	S31H1DC	W26H1-C	W30H1-C	W30H1DC	W31H1-C	W36H1-C	W36H1DC
EHS31-C06									X	X	X	X	X			X		
EHWA03A-C15					X	X	X	X										
EHWC03A-C06					X		X							X	X		X	X
EHWC03A-C09					X	X	X	X						X	X		X	X
EHWH03A-C15														X			X	
EHWH24B-C06	X	X	X	X														

**TABLE 2
ELECTRICAL DATA AND BTU OUTPUT**

Heater Package Model	Volts	Phase	Nominal KW	Nominal BTU
EHWA24A-A04	240/208	1	4 / 3	13,650 / 10,240
EHWA02-A05	240/208	1	5 / 3.75	17,065 / 12,800
EHWA02A-A08	240/208	1	8 / 6	27,300 / 20,475
EHWA02A-A10	240/208	1	10 / 7.5	34,130 / 25,600
EHWA24-B06	240/208	3	6 / 4.5	20,475 / 15,350
EHWH02A-A04	240/208	1	4 / 3	13,650 / 10,240
EHWH02A-A08	240/208	1	8 / 6	27,300 / 20,475
EHWH24-B06	240/208	3	6 / 4.5	20,475 / 15,350
EHWH24B-C09	480	3	9	30,715
EHWA03-A05	240/208	1	5 / 3.75	17,065 / 12,800
EHWA03-A08	240/208	1	8 / 6	27,300 / 20,475
EHWA03-A10	240/208	1	10 / 7.5	34,130 / 25,600
EHWA03-A15	240/208	1	15 / 11.25	51,195 / 23,035
EHWA03-B06	240/208	3	6 / 4.5	20,475 / 15,350
EHWA03-B09	240/208	3	9 / 6.75	30,715 / 23,035
EHWA03-B15	240/208	3	15 / 11.25	51,195 / 38,400
EHWA03A-C15	480	3	15	51,195
EHWA37-B15	240 / 208	3	15 / 11.25	51,195 / 38,400
EHWH30-A05	240/208	1	5 / 3.75	17,065 / 12,800
EHWH30-A10	240/208	1	10 / 7.5	34,130 / 25,600
EHWH36-A05	240/208	1	5 / 3.75	17,065 / 12,800
EHWH36-A10	240/208	1	10 / 7.5	34,130 / 25,600
EHWH36-A15	240/208	1	15 / 11.25	51,195 / 38,400
EHWH03-B06	240/208	3	6 / 4.5	20,475 / 15,350
EHWH03-B09	240/208	3	9 / 6.75	30,715 / 23,035
EHW36H-B06	240/208	3	6 / 4.5	20,475 / 15,350
EHWH36-B15	240/208	3	15 / 11.25	51,195 / 38,400
EHWC03A-C06	480	3	6	20,475
EHWC03A-C09	480	3	9	30,715
EHWH03A-C15	480	3	15	51,195
EHWH31-C06	480	3	6	20,475
EHS31-A04	240/208	1	4 / 3	13,650 / 10,240
EHS31-A08	240/208	1	8 / 6	27,300 / 20,475
EHS31-B06	240/208	3	6 / 4.5	20,475 / 15,350
EHS31-C06	480	3	6 / 4.5	20,475
EHW24H-A04	240/208	1	4 / 3	13,650 / 10,240
EHW24H-A08	240/208	1	8 / 6	27,300 / 20,475
EHW24H-B06	240/208	3	6 / 4.5	20,475 / 15,350
EHW36H-B09	240/208	3	9 / 6.75	20,475 / 15,350
EHW36H-B15	240/208	3	15 / 11.25	51,195 / 38,400
EHW36A-B06	240/208	3	6 / 4.5	20,475 / 15,350
EHW02A-A08	240/208	1	8 / 6	27,300 / 20,475

FIGURE 1
WIRING – MAIN POWER

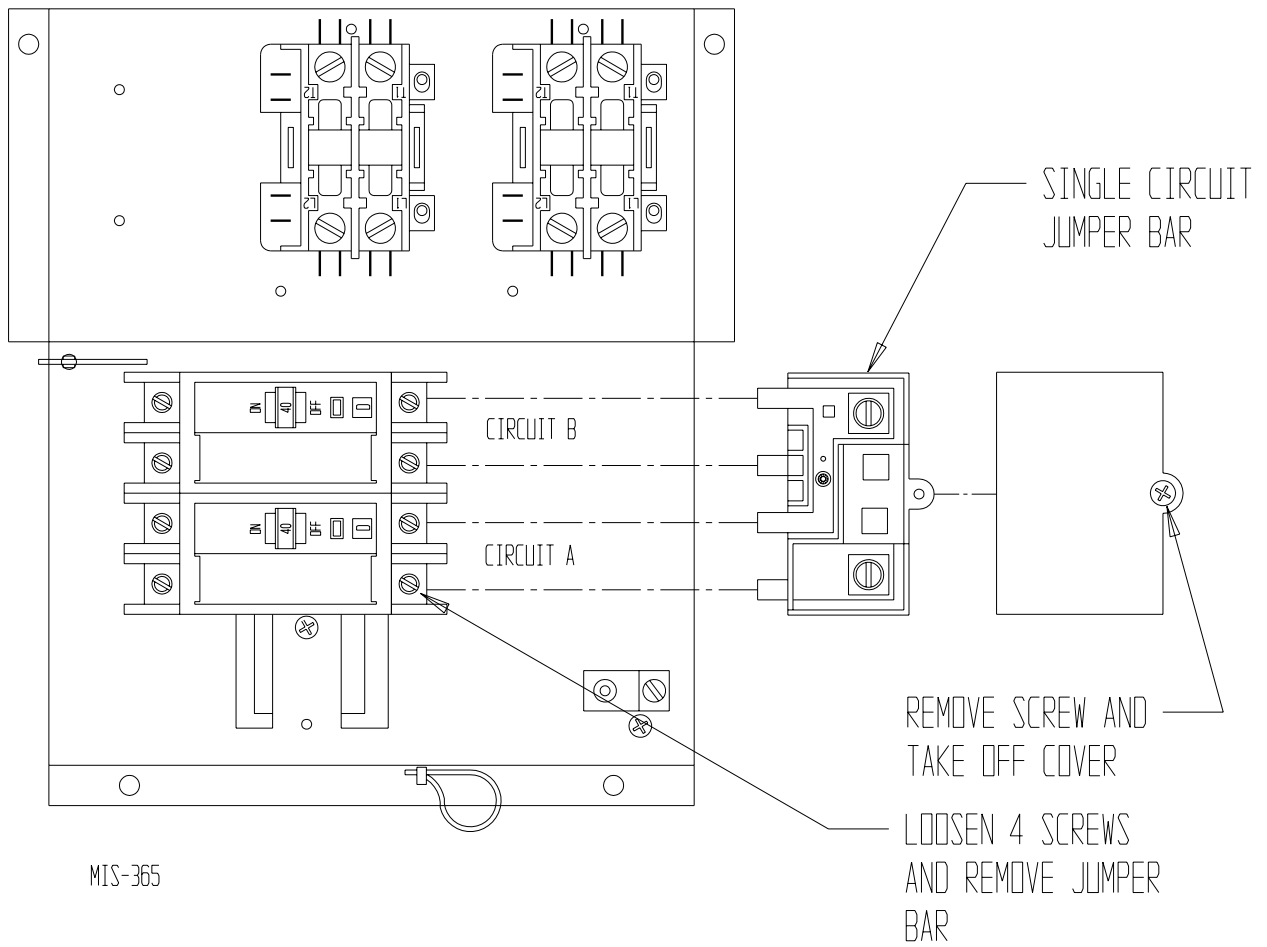

2. All heater packages covered by this manual are factory wired for single supply circuit. The following heater packages are field convertible to a dual supply circuit if required or desired:

EHWA03-A15

EHWH30-A10

EHWH36-A10

EHWH36-A15

3. To convert the above heater packages to dual circuit configuration before installation, loosen four (4) screws holding jumper bar in place. Remove jumper bar. Circuits A + B are now identified on the heater package. See Figure 1.

Wire should be sized to the minimum circuit ampacity as specified on the serial plates of units that accept these heater packages for circuits A + B.

INSTALLATION

1. Disconnect all power to unit before installation.

WARNING

Disconnect all power to unit before installing heater package. Hazard of electrical shock. Failure to disconnect power could result in injury or death.

2. Before installation, check unit serial plate to insure that the heater package model that you intend to install is listed as a heater package suitable for use with the unit.

Under no circumstance shall a heater package be installed in a unit if the model number of the heater package does not appear on the unit serial plate.

WARNING

Install only heater packages listed on unit serial plate. Hazard of fire or electrical shock. Failure to install listed heater package could result in fire, injury or death.

3. Remove electric heater access panel and control panel cover, both inner and outer. See Figure 2.
4. All heaters are installed with the thermal cutoffs positioned to the top of the unit. Install heat strip(s) through heater access opening. Position heat strip support rod in heater support hole 1, 2 or 3 as indicated in Table 1 and Figure 3.

On heater packages with two (2) heat strips, install 9KW heater first in position closest to the outlet air frame. See Figure 4E.

5. Install heater control base into top of control panel as shown in Figure 4. Secure with four (4) sheet metal screws provided.
6. Plug mail six (6) pin connector into mating connector mounted in control panel. See Figure 5.
7. Connect red compressor supply lead to L1 of terminal block. Connect black compressor supply lead to L2 of terminal block. If three phase, connect yellow supply lead to L3 of terminal block. See Figure 4 and wiring diagram.
8. Route wires from heater control base up through raceway in top right corner of control panel to the heaters. See Figure 5.
9. Wire heater package per wiring diagram supplied with this heater package. All wires are stamped with wire numbers that correspond with terminal numbers on the wiring diagram and stamped numbers on the heat strip. Limit switch wires are terminated with insulated quick connect terminals. See Figure 4.
10. Attach adhesive wiring diagram directly above unit wiring diagram on inner control panel cover.
11. Recheck all wiring. Break out appropriate circuit breaker tabs on inner control panel cover to allow trip lever to protrude. Replace control panel and heater access panels.
12. Resupply power to the unit and check for proper operation.
13. Remark serial plate with self-adhesive label attached to the front of this manual. See Figure 6.

FIGURE 2
ELECTRIC HEATER ACCESS PANEL
AND CONTROL PANEL COVER LOCATIONS

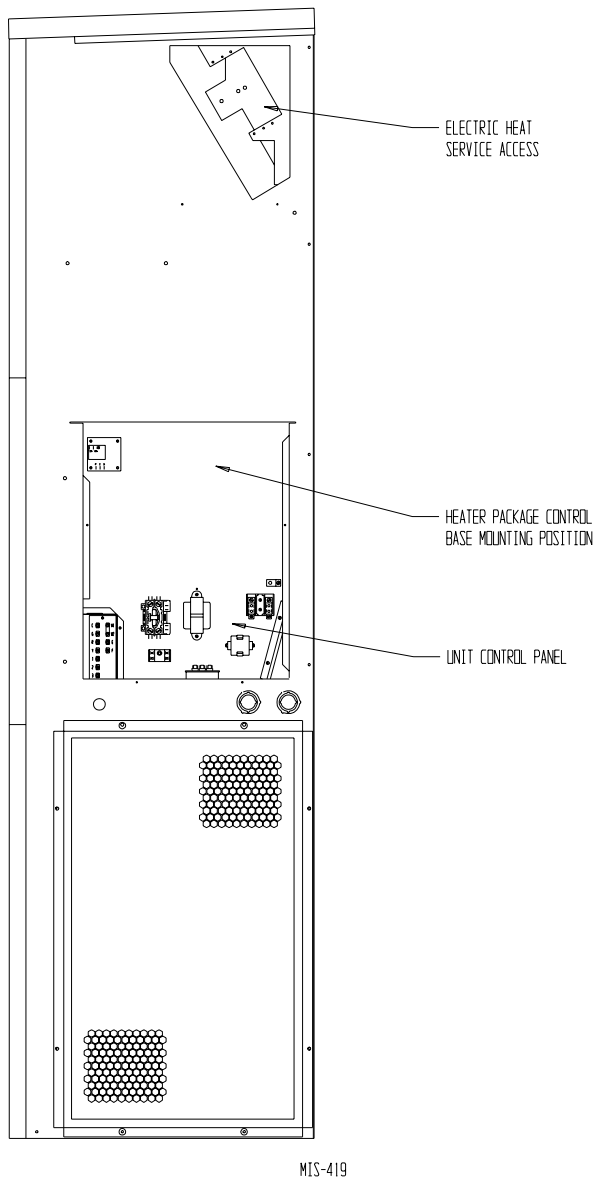


FIGURE 3
SCREW MOUNTING HOLES


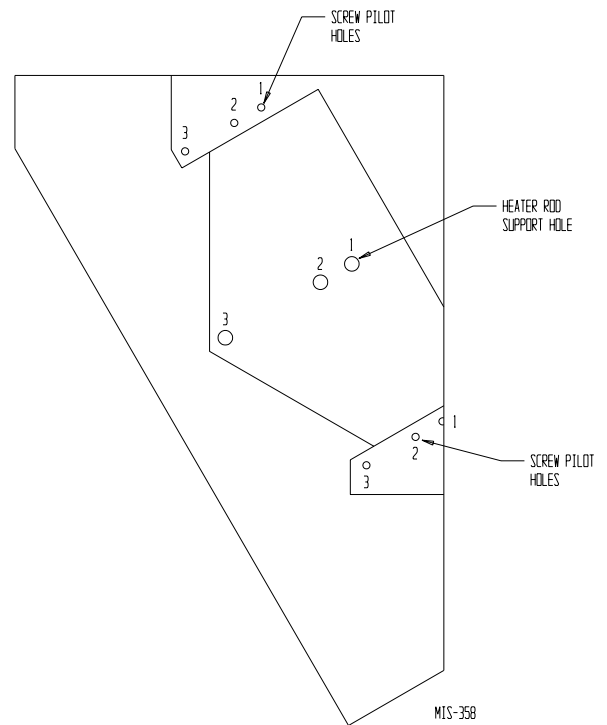


TABLE 3
REFERENCES TO FIGURES 3 AND 4
FOR MODEL NUMBER

	Heater Package Model Number	Figure 4 Heater Terminal Identification Drawing	Figure 3 Rod Support and Screw Mounting Position
1.	EHWA02-A05	4A	1
2.	EHWA02A-A08	4B	1
3.	EHWA02A-A10	4B	1
4.	EHWA03-A05	4A	1
5.	EHWA03-A08	4B	1
6.	EHWA03-A10	4B	1
7.	EHWA03-A15	4D	2
8.	EHWA03-B06	4C	1
9.	EHWA03-B09	4C	1
10.	EHWA03-B15	4D	2
11.	EHWA03A-C15	4E	1 + 3
12.	EHWA24-B06	4C	1
13.	EHWA37-B15	4D	1 + 3
14.	EHWC03A-C06	4C	1
15.	EHWC03A-C09	4C	1
16.	EHWH02A-A04	4A	1
17.	EHWH02A-A08	4B	1
18.	EHWH03-B06	4C	1
19.	EHWH03-B09	4C	1
20.	EHWH03A-C15	4E	1 + 3
21.	EHWH24-B06	4C	1
22.	EHWH24B-C06	4C	1
23.	EHWH30-A05	4A	1
24.	EHWH30-A10	4B	1
25.	EHWH36-A05	4A	1
26.	EHWH36-A10	4B	1
27.	EHWH36-A15	4D	2
28.	EHW36H-B06	4C	1
29.	EHWH36-B15	4E	1 + 3
30.	EHWA24A-A04	4A	1
31.	EHWH31-C06	4C	1
32.	EHS31-A04	4A	1
33.	EHS31-A08	4B	1
34.	EHS31-B06	4C	1
35.	EHS31-C06	4C	1
36.	EHW24H-A04	4A	1
37.	EHW24H-A08	4B	1
38.	EHW24H-B06	4C	1
39.	EHW36H-B09	4C	1
40.	EHW36H-B15	4E	1 + 3
41.	EHW36A-B06	4C	1
42.	EHW02A-A08	4B	1


**FIGURE 4
A THROUGH D**

FIGURE 4A

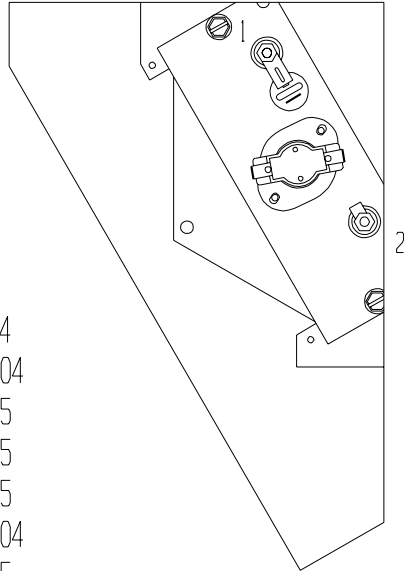


EHSH31-A04
EHW24A-A04
EHW36-A05
EHW30-A05
EHW24-A05
EHW24A-A04
EHW24H-A04

FIGURE 4C

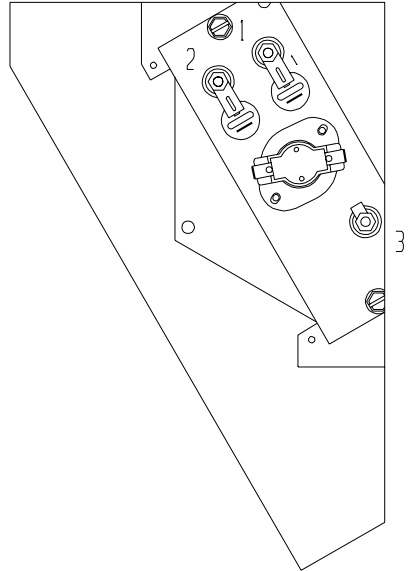


EHW24H-B06
EHW24H-B09
EHW24H-C06
EHW24H-C09
EHW24H-B06
EHW24H-B09
EHW24H-C06
EHW24H-C09
EHW24H-B06
EHW24H-B09
EHW24H-C06
EHW24H-C09
EHW24H-B06
EHW24H-B09
EHW24H-C06
EHW24H-C09

FIGURE 4B

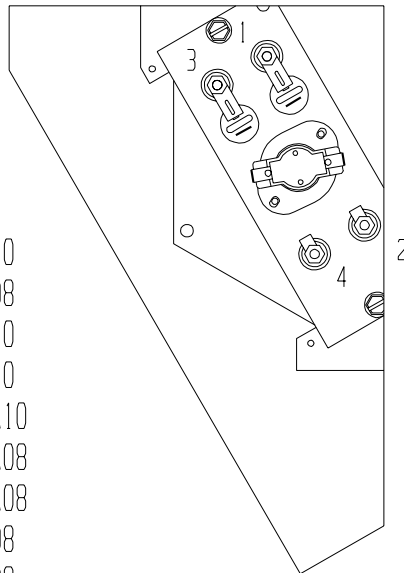

EHW24H-A10
EHW24H-A08
EHW24H-A10
EHW24H-A08
EHW24H-A10
EHW24H-A08
EHW24H-A10
EHW24H-A08
EHW24H-A10
EHW24H-A08

FIGURE 4D

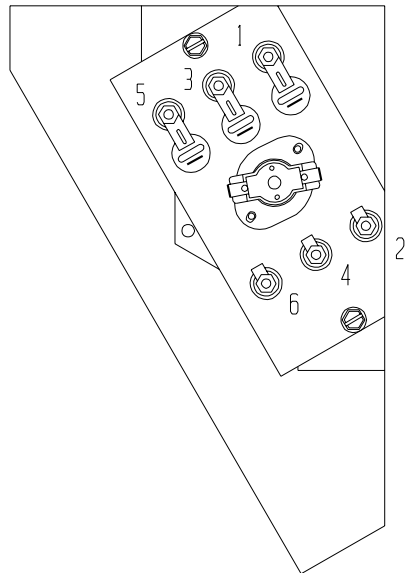

EHW24H-A15
EHW24H-A15
EHW24H-B15
EHW24H-B15

NOTE: THERMAL CUTOFFS TO BE AT
TOP OF AIR FRAME WHEN INSTALLING.

MIS-363 E

FIGURE 4E
INSTALL HEATER PACKAGE WITH
TWO HEAT STRIPS


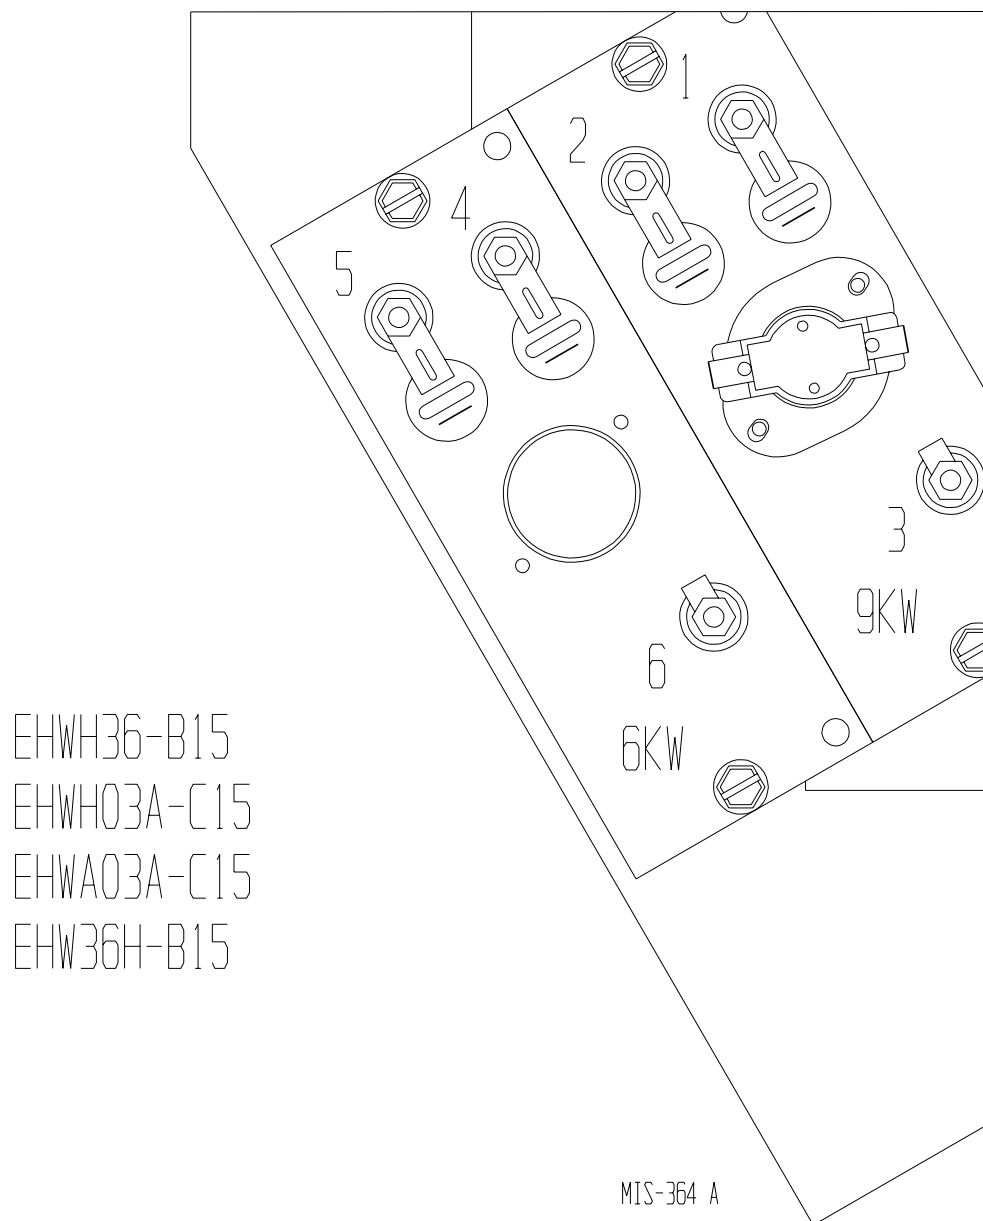


**FIGURE 5
INSTALLING HEATER BASE
AND CONNECTING**

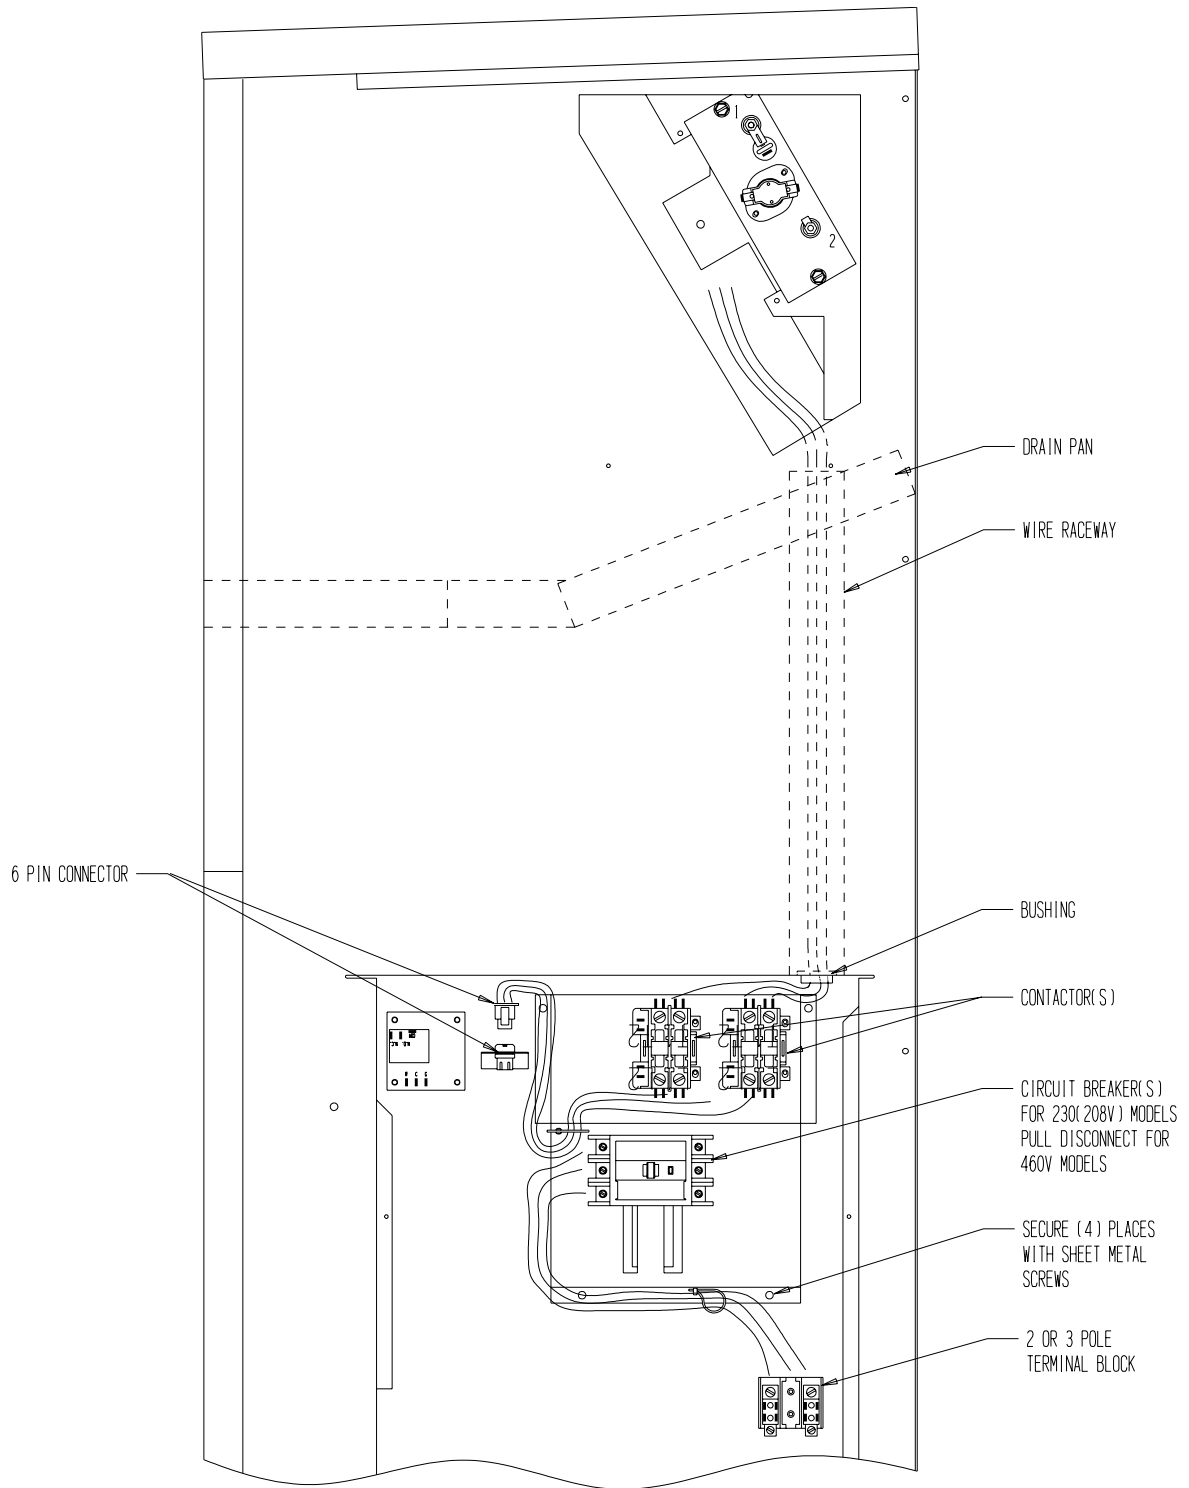

MIS-422

FIGURE 6
SERIAL PLATE SHOWING
APPROVED HEATER PACKAGES

INSTALL ONLY HEATER PACKAGES LISTED HERE.

(X)	()	()	()	()	()
()	(X)	()	()	()	()
()	()	()	(X)	()	()
()	()	()	()	(X)	()
()	()	()	()	()	(X)

BARD MANUFACTURING COMPANY, 1914 RANDOLPH DRIVE

↓

(1)
APPROVED
HEATER
PACKAGE

MODEL	VAC	HZ	APPROVED HEATER PACKAGE
WA361-A0012345	230/208	60	NONE
WA361-A0512345	230/208	60	EHWA03-A05
WA361-A0812345	230/208	60	EHWA03-A08
WA361-A1012345	230/208	60	EHWA03-A10
WA361-A1512345	230/208	60	EHWA03-A15

BRANCH CIRCUIT SELECT CURRENT 17 OPERATION

SERIAL NUMBER 125H920711193-01 UL FILE NO.

SUITABLE FOR OUTDOOR USE

COMPRESSOR	VAC	HZ	PH	ELECTRICAL	KW
OUTDOOR MOTOR	230/208	60	1	1/5	5/3.75
INDOOR MOTOR	230/208	60	1	1/3	8/6
HEATER PACKAGE	240/208	60	1	1	10/7.5
EHWA03-A05	240/208	60	1	1	15/11.25
EHWA03-A08	240/208	60	1	1	
EHWA03-A10	240/208	60	1	1	
EHWA03-A15	240/208	60	1	1	

-- FACTORY

FACTORY CHARGED R22: 68 OZ. DESI

-- CLEAR

ASSURE THAT SERIAL PLATE
IS CLEAN AND DRY,
REMOVE APPROPRIATE LABEL STRIP
FOR KW REQUIRED AND REMARK
SERIAL PLATE AS SHOWN FOR
THE HEATER PACKAGE THAT
IS INSTALLED

MS-384