
REPLACEMENT PARTS MANUAL

Q-TEC™ SERIES PACKAGED HEAT PUMP

Models:

Q24H3-A Q30H3-A Q36H3-A Q43H3-A Q48H3-A Q60H3-A
Q24H3-B Q30H3-B Q36H3-B Q43H3-B Q48H3-B Q60H3-B
Q24H3-C Q30H3-C Q36H3-C Q43H3-C Q48H3-C Q60H3-C

Contents

Description	Page	Description	Page
Cabinet Components		Lower Control Panel Components	
♦ Exploded View	2	♦ Layout View	18
♦ Usage List	3	♦ Usage List	19
♦ Usage List	4	Blower Assembly Components	
♦ Usage List	5	♦ Exploded View	20
♦ Usage List	6	♦ Usage List	21
Functional Components		Optional Climate Control Components	
♦ Exploded View	8	♦ Layout View	22
♦ Usage List	9	♦ Usage List	23
♦ Usage List	10	Wall Sleeve Cabinet Components	
♦ Usage List	11	♦ Exploded View	24
♦ Usage List	12	♦ Usage List	25
Upper Control Panel Components			
♦ Layout View	14		
♦ Usage List	15		
♦ Usage List	16		
♦ Usage List	17		

General Notes


- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.



Bard Manufacturing Company, Inc.
Bryan, Ohio 43506
www.bardhvac.com

Manual: 2110-1529A
Supersedes: 2110-1529
Date: 10-11-17

CABINET COMPONENTS

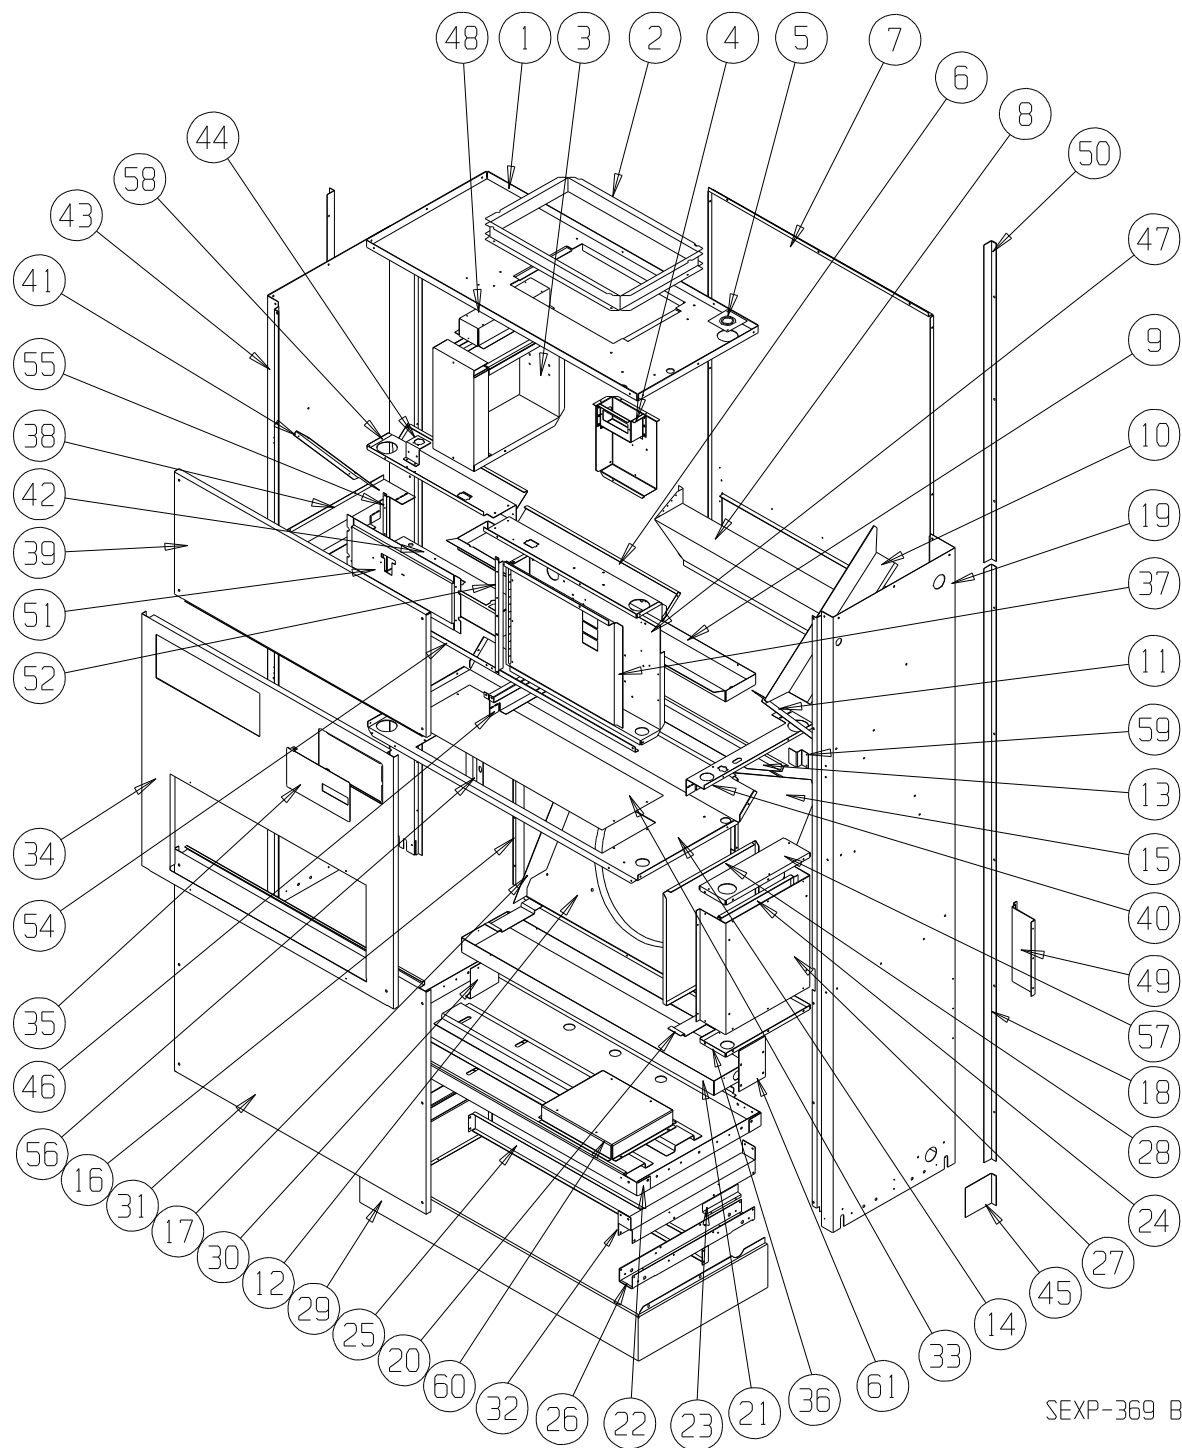

SEXP-369 B

This exploded view is referenced in tables on pages 3, 4, 5 and 6

CABINET COMPONENTS

Drawing No.	Part No.	Description	Q24H3-A, B	Q24H3-C	Q30H3-A, B	Q30H3-C	Q36H3-A, -B	Q36H3-C
1	506-225	Top Assembly	X	X	X	X	X	X
2	110-044	Outlet Duct Flange	2	2	2	2	2	2
3	See page 14	Heater Package Assembly (Optional)	X	X	X	X	X	X
4	117-283	Low Voltage Box Assembly (Optional)	X	X	X	X	X	X
5	136-359	T.K.O. Plate	X	X	X	X	X	X
6	534-191	Evaporator Coil Shield – Right	X	X	X	X	X	X
7	508-133	Back Assembly	X	X	X	X	X	X
8	S538-215	Fresh Air Damper Assembly	X	X	X	X	X	X
9	S523-104	Evaporator Drain Pan Assembly	X	X	X	X	X	X
10	134-154	Wire Channel	X	X	X	X	X	X
11	140X277	Right Evaporator Support	X	X	X	X	X	X
12	125-032	Fan Shroud Back	X	X	X	X	X	X
13	142-055	Condenser Coil Fill	X	X	X	X	X	X
14	520-346	Condenser Partition Assembly	X	X	X	X	X	X
15	124X043	Fan Shroud Right Side	X	X	X	X	X	X
16	124Y043	Fan Shroud Left Side	X	X	X	X	X	X
17	140-229	Condenser Coil Support	2	2	2	2	2	2
18	S135-177-* ①	Side Trim – Lower	2	2	2	2	2	2
19	500-392-* ①	Right Side Assembly	X	X	X	X	X	X
20	140-227	Subcooling Loop Hold Down	3	3	3	3	3	3
21	123-094	Condenser Drain Pan Assembly	X	X	X	X	X	X
22	527-309-X	Lower Base Assembly	X	X	X	X	X	X
23	102-415	Pile Seal Offset	2	2	2	2	2	2
24	117-240	Lower Control Panel Plate	X	X	X	X	X	X
25	135-189	Base Shield	X	X	X	X	X	X
26	140-276	Lower Roller Support	2	2	2	2	2	2
27	See page 18	Control Panel Components	X	X	X	X	X	X
28	133-164	Control Panel Door – Lower	X	X	X	X	X	X
29	534-155-6	Base Trim Assembly	X	X	X	X	X	X
30	140-230	Drain Pan Support	X	X	X	X	X	X
31	552-332-* ①	Condenser Door Assembly	X	X	X	X	X	X
32	140-280	Upper Roller Support	2	2	2	2	2	2
33	536-351	Condenser Blank Off Plate	X	X	X	X	X	X
Continued on page 4								

① Exterior cabinet parts are manufactured with various paint color options. To ensure the proper paint color is received, reference the following codes:

Beige -X
 Buckeye Gray -4
 Vinyl – Slate Finish -6
 Vinyl – Platinum Finish -7

CABINET COMPONENTS

Drawing No.	Part No.	Description	Q24H3-A, B	Q24H3-C	Q30H3-A, B	Q30H3-C	Q36H3-A, -B	Q36H3-C
Continued from page 3								
34	552-330-* ①	Filter Door Assembly	X	X	X	X	X	X
35	153-336-* ①	Circuit Breaker Door	X	X	X	X	X	X
36	117-238	Lower Control Panel Bottom	X	X	X	X	X	X
37	132-173	Disconnect Door Inner		X		X		X
37	132-165	Circuit Breaker Door Inner	X		X		X	
38	113-281	Left Filter Bracket	X	X	X	X	X	X
39	552-331-* ①	Blower Door Assembly	X	X	X	X	X	X
40	113-282	Right Filter Bracket	X	X	X	X	X	X
41	140Y277	Left Evaporator Support	X	X	X	X	X	X
43	500-391-* ①	Left Side Assembly	X	X	X	X	X	X
45	135-165-* ①	Base Trim Extension	2	2	2	2	2	2
46	112X283	Center Right Filter Bracket	X	X	X	X	X	X
46	112Y283	Center Left Filter Bracket	X	X	X	X	X	X
47	See page 14	Pull Disconnect Assembly		X		X		X
47	See page 14	Circuit Breaker Box Assembly	X		X		X	
48	112-229	Heat Strip Bracket	X	X	X	X	X	X
49	112-234	Mounting Bracket	2	2	2	2	2	2
50	S135-178-* ①	Side Trim – Upper	2	2	2	2	2	2
51	See page 22	Thermostat Mounting Plate	X	X	X	X	X	X
52	104-1096	Left Thermostat Support Angle	X	X	X	X	X	X
54	104-1097	Front Filter Angle	X	X	X	X	X	X
55	104-1096	Right Thermostat Support Angle	X	X	X	X	X	X
56	102-434	Sleeve Offset	X	X	X	X	X	X
57	117-237	Lower Control Panel Top	X	X	X	X	X	X
58	534-190	Evaporator Coil Shield – Left	X	X	X	X	X	X
59	103-443	Door Latch Offset	X	X	X	X	X	X
60	140-282	Transformer Support		X		X		X

① Exterior cabinet parts are manufactured with various paint color options. To ensure the proper paint color is received, reference the following codes:

Beige	-X
Buckeye Gray	-4
Vinyl – Slate Finish	-6
Vinyl – Platinum Finish	-7

This table references exploded view on page 2

CABINET COMPONENTS

Drawing No.	Part No.	Description	Q43H3-A, -B	Q43H3-C	Q48H3-A, -B, Q60H3-A, -B	Q48H3-C, Q60H3-C
1	506-226	Top Assembly	X	X	X	X
2	110-044	Outlet Duct Flange	2	2	2	2
3	See page 14	Heater Package Assembly (Optional)	X	X	X	X
4	117-283	Low Voltage Box Assembly (Optional)	X	X	X	X
5	136-359	T.K.O. Plate	X	X	X	X
6	534-195	Evaporator Coil Shield – Right	X	X	X	X
7	508-149	Back Assembly	X	X	X	X
8	S538-215	Fresh Air Damper Assembly	X	X	X	X
9	S523-105	Evaporator Drain Pan Assembly	X	X	X	X
10	134-154	Wire Channel	X	X	X	X
11	140X277	Right Evaporator Support	X	X	X	X
12	125-046	Fan Shroud Back	X	X	X	X
13	143-066	Condenser Coil Fill	X	X	X	X
14	520-347	Condenser Partition Assembly	X	X	X	X
15	125-041	Fan Shroud Right Side	X	X	X	X
16	125-045	Fan Shroud Left Side	X	X	X	X
17	140-229	Condenser Coil Support	2	2	2	2
18	S135-177-* ①	Side Trim - Lower	2	2	2	2
19	500-392-* ①	Right Side Assembly	X	X	X	X
20	140-227	Subcooling Loop Hold Down	3	3	3	3
21	123-099	Condenser Drain Pan Assembly	X	X	X	X
22	527-294-X	Lower Base Assembly	X	X	X	X
23	102-415	Pile Seal Offset	2	2	2	2
24	117-240	Lower Control Panel Plate	X	X	X	X
25	135-194	Base Shield	X	X	X	X
26	140-225	Lower Roller Support	2	2	2	2
27	See page 18	Control Panel Components	X	X	X	X
28	133-164	Control Panel Door - Lower	X	X	X	X
29	534-174-6	Base Trim Assembly	X	X	X	X
31	552-334-* ①	Condenser Door Assembly	X	X	X	X
32	140-224-X	Upper Roller Support	2	2	2	2
33	536-351	Condenser Blank Off Plate	X	X	X	X
Continued on page 6						

① Exterior cabinet parts are manufactured with various paint color options. To ensure the proper paint color is received, reference the following codes:

Beige -X
 Buckeye Gray -4
 Vinyl – Slate Finish -6
 Vinyl – Platinum Finish -7

This table references exploded view on page 2

CABINET COMPONENTS

Drawing No.	Part No.	Description	Q43H3-A, -B	Q43H3-C	Q48H3-A, -B, Q60H3-A, -B	Q48H3-C, Q60H3-C
<i>Continued from page 5</i>						
34	552-335-* ①	Filter Door Assembly	X	X	X	X
35	153-336-* ①	Circuit Breaker Door	X	X	X	X
36	117-238	Lower Control Panel Bottom	X	X	X	X
37	132-173	Disconnect Door Inner		X		X
37	132-165	Circuit Breaker Door Inner	X		X	
38	113-281	Left Filter Bracket	X	X	X	X
39	552-333-* ①	Blower Door Assembly	X	X	X	X
40	113-286	Right Filter Bracket	X	X	X	X
41	140Y277	Left Evaporator Support	X	X	X	X
43	500-393-* ①	Left Side Assembly	X	X	X	X
45	134-165-* ①	Base Trim Extension	2	2	2	2
46	112X283	Center Right Filter Bracket	X	X	X	X
46	112Y283	Center Left Filter Bracke	X	X	X	X
47	See page 14	Pull Disconnect Assembly		X		X
47	See page 14	Circuit Breaker Box Assembly	X		X	
48	112-229	Heat Strip Bracket	X	X	X	X
49	112-245	Right Mounting Bracket	X	X	X	X
49	112-246	Left Mounting Bracket	X	X	X	X
50	S135-178-* ①	Side Trim – Upper	2	2	2	2
51	See page 22	Thermostat Mounting Plate	X	X	X	X
52	104-1096	Left Thermostat Support Angle	X	X	X	X
54	104-1101	Front Filter Angle	X	X	X	X
55	104-1096	Right Thermostat Support Angle	X	X	X	X
56	102-434	Sleeve Offset	X	X	X	X
57	117-237	Lower Control Panel Top	X	X	X	X
58	534-190	Evaporator Coil Shield – Left	X	X	X	X
59	103-443	Door Latch Offset	X	X	X	X
60	140-282	Transformer Support		X		X
61	112-372	Motor Control Bracket	X	X	X	X


① Exterior cabinet parts are manufactured with various paint color options. To ensure the proper paint color is received, reference the following codes:

Beige -X
 Buckeye Gray -4
 Vinyl – Slate Finish -6
 Vinyl – Platinum Finish -7

This table references exploded view on page 2

This page intentionally left blank

FUNCTIONAL COMPONENTS

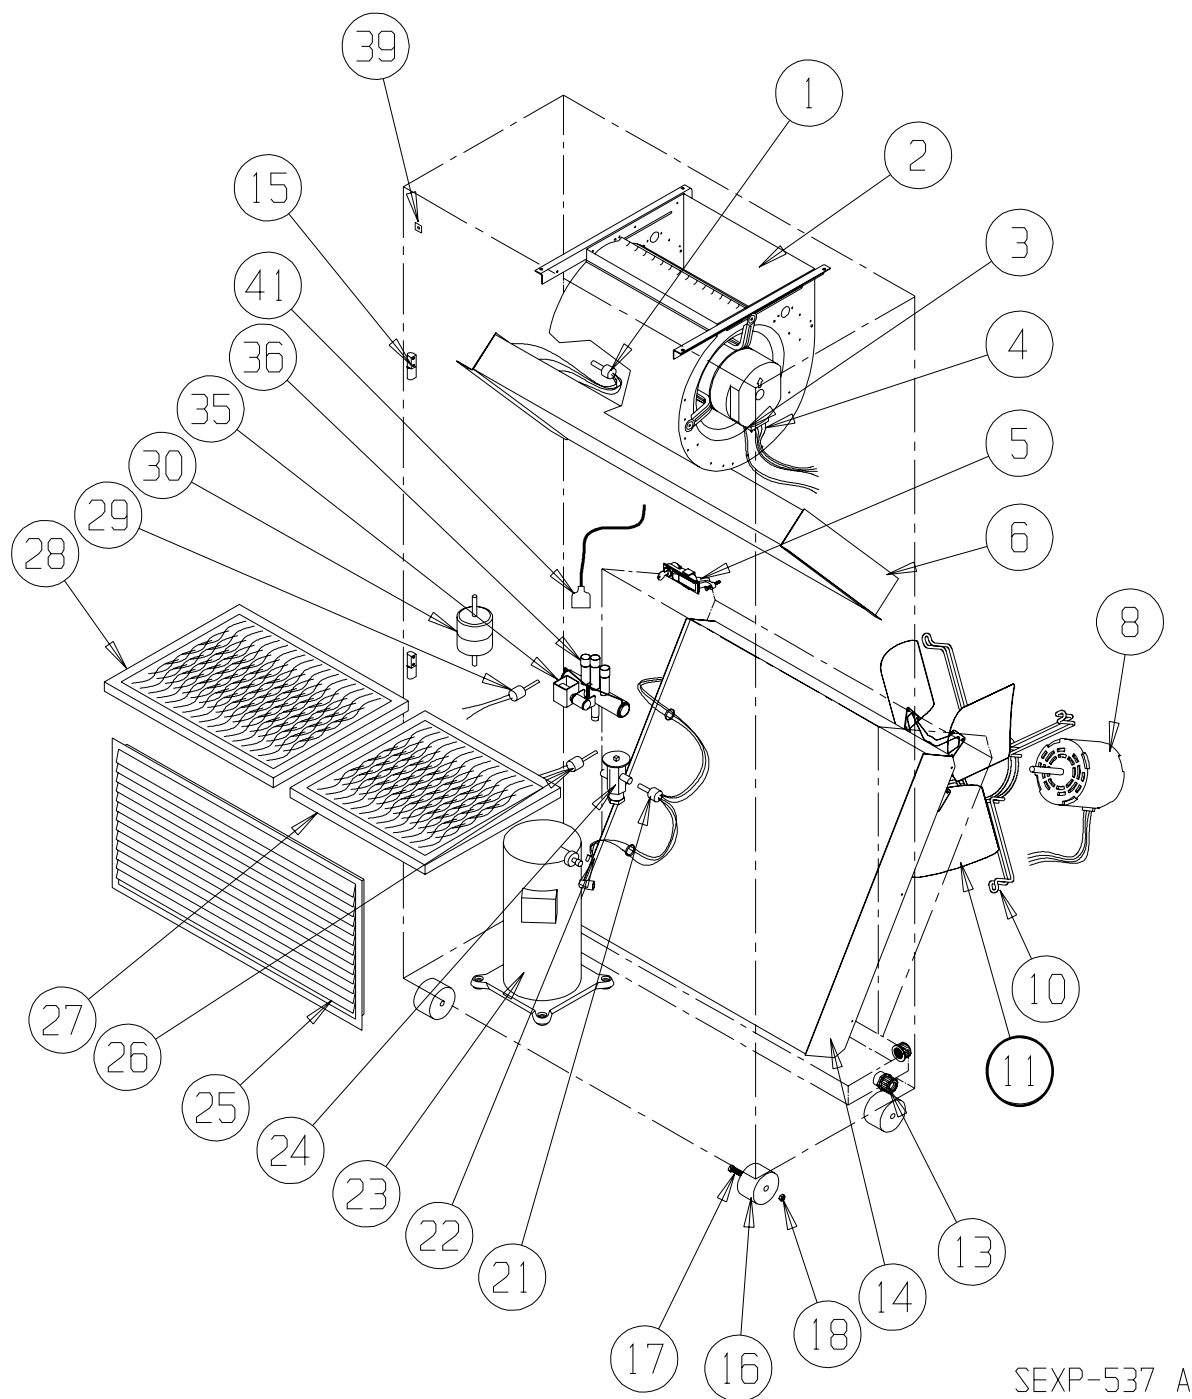

This exploded view is referenced in tables on pages 9, 10, 11 and 12

FUNCTIONAL COMPONENTS

Drawing No.	Part No.	Description	Q24H3-A	Q24H3-B	Q24H3-C	Q30H3-A	Q30H3-B	Q30H3-C	Q36H3-A	Q36H3-B	Q36H3-C
1	5625-090	Distributor Cooling	X	X	X						
1	5625-050	Distributor Cooling				X	X	X			
1	5625-045	Distributor Cooling							X	X	X
2	S900-225-001	Blower Assembly	X	X	X						
2	S900-225-002	Blower Assembly				X	X	X			
2	S900-225-004	Blower Assembly							X	X	X
3	3000-1145	Wire Harness High Voltage			X			X			X
3	3000-1046	Wire Harness High Voltage	X	X		X	X		X	X	
4	3000-1292	Wire Harness Low Voltage	X	X	X	X	X	X	X	X	X
5	1171-049	Keylatch/Circuit Breaker Door	X	X	X	X	X	X	X	X	X
6	5060-093BX	Evaporator Coil	X	X	X						
6	5060-107BX	Evaporator Coil				X	X	X			
6	5060-090BX	Evaporator Coil							X	X	X
8	8103-037	Motor	X	X		X	X				
8	8103-038	Motor			X			X			
8	8105-051	Motor							X	X	
8	8105-052	Motor									X
10	8200-001	Motor Mount	X	X	X	X	X	X	X	X	X
11	5151-050	Fan Blade	X	X	X	X	X	X			
11	5151-055	Fan Blade							X	X	X
13	6094-003	Drain Fitting	1	1	1	1	1	1	1	1	1
14	5051-095BX	Condenser Coil	X	X	X						
14	5051-211BX	Condenser Coil				X	X	X	X	X	X
15	5400-005	Hinge	2	2	2	2	2	2	2	2	2
16	1171-035	Wheel	4	4	4	4	4	4	4	4	4
17	1012-129	Bolt – Shoulder	4	4	4	4	4	4	4	4	4
18	1012-224	Nut – Locking	4	4	4	4	4	4	4	4	4
21	5625-008	Distributor – Heating	X	X	X	X	X	X			
21	5625-010	Distributor – Heating							X	X	X
22	8620-224	Defrost Sensor	X	X	X	X	X	X	X	X	X
23	8000-314	Compressor	X								
23	8000-315	Compressor		X							
23	8000-316	Compressor			X						
23	8000-346	Compressor				X					
23	8000-347	Compressor					X				
23	8000-348	Compressor						X			
23	8000-278	Compressor							X		
23	8000-283	Compressor								X	
23	8000-342	Compressor									X
24	5651-191	TXV Heating	X	X	X						
24	5651-177	TXV Heating				X	X	X			
24	5651-178	TXV Heating							X	X	X

Continued on page 10

FUNCTIONAL COMPONENTS

Drawing No.	Part No.	Description	Q24H3-A	Q24H3-B	Q24H3-C	Q30H3-A	Q30H3-B	Q30H3-C	Q36H3-A	Q36H3-B	Q36H3-C
<i>Continued from page 9</i>											
25	7051-034	Return Air Grille (for Beige & Buckeye Gray Units)	X	X	X	X	X	X	X	X	X
25	7051-061	Return Air Grille (for Vinyl Units)	X	X	X	X	X	X	X	X	X
26	1804-0462	High Pressure Control	X	X	X	X	X	X	X	X	X
27	7004-009	Air Filter	X	X	X	X	X	X	X	X	X
27	7004-032	Filter 2" Fiberglass (Optional)	X	X	X	X	X	X	X	X	X
27	7004-034	Filter 2" Pleated (Optional)	X	X	X	X	X	X	X	X	X
28	7004-010	Air Filter	X	X	X	X	X	X	X	X	X
28	7004-033	Filter 2" Fiberglass (Optional)	X	X	X	X	X	X	X	X	X
28	7004-035	Filter 2" Pleated (Optional)	X	X	X	X	X	X	X	X	X
29	1804-0107	Low Pressure Control	X	X	X	X	X	X	X	X	X
30	5201-009	Filter/Drier	X	X	X	X	X				
30	5201-010	Filter/Drier							X	X	X
35	5650-038	Reversing Valve with Solenoid	X	X	X						
35	5650-039	Reversing Valve with Solenoid				X	X	X			
35	5650-040	Reversing Valve with Solenoid							X	X	X
36	5650-042	Rev. Valve Solenoid, Red Casing (Ranco)	X	X	X	X	X	X	X	X	X
36	5650-043	Rev. Valve Solenoid, Black Casing (Wilspec)	X	X	X	X	X	X	X	X	X
36	5650-046	Rev. Valve Solenoid, Black Casing (San Hua)	X	X	X	X	X	X	X	X	X
39	1012-315	"U" Clip Fastener	10	10	10	10	10	10	10	10	10
41	5650-037	Molded Plug 36" Lead	X	X	X	X	X	X	X	X	X
NS	CMA-28	Low Ambient Control	X	X	X	X	X	X	X	X	X
NS	8002-012	Sound Cover	X	X	X	X	X	X	X	X	X
NS	3000-1290	Compressor Wire Harness	X			X			X		
NS	3000-1291	Compressor Wire Harness		X	X		X	X		X	X
NS	6031-009	Coremax Valve Core	X	X	X	X	X	X	X	X	X
NS	4100-121	Unit Wiring Diagram	X			X			X		
NS	4100-221	Unit Wiring Diagram		X			X			X	
NS	4100-321	Unit Wiring Diagram			X			X			X

NS = Not Shown

This table references exploded view on page 8

FUNCTIONAL COMPONENTS

Drawing No.	Part No.	Description	Q43H3-A	Q43H3-B	Q43H3-C	Q48H3-A	Q48H3-B	Q48H3-C	Q60H3-A	Q60H3-B	Q60H3-C
1	5625-152	Cooling Distributor	X	X	X						
1	5625-153	Cooling Distributor				X	X	X			
1	5625-086	Cooling Distributor							X	X	X
2	S900-225-005	Blower Assembly				X	X	X			
2	S900-254-001	Blower Assembly							X	X	X
2	S900-225-004	Blower Assembly	X	X	X						
3	3000-1145	Wire Harness High Voltage			X			X			X
3	3000-1046	Wire Harness High Voltage	X	X		X	X		X	X	
4	3000-1292	Wire Harness Low Voltage	X	X	X	X	X	X	X	X	X
5	1171-049	Keylatch/Circuit Breaker Door	X	X	X	X	X	X	X	X	X
6	5060-095BX	Evaporator Coil	X	X	X	X	X	X			
6	5060-108BX	Evaporator Coil							X	X	X
8	8103-051	Motor	X	X		X	X				
8	8103-052	Motor			X			X			
8	8106-047	ECM Motor							X	X	X
10	8200-001	Motor Mount	X	X	X	X	X	X	X	X	X
11	5151-055	Fan Blade	X	X	X	X	X	X	X	X	X
13	6094-003	Drain Fitting	1	1	1	1	1	1	1	1	1
14	5051-210BX	Condenser Coil 28 x 36	X	X	X	X	X	X	X	X	X
NS	5051-161BX	Condenser Coil 8 x 36							X	X	X
15	5400-005	Hinge	2	2	2	2	2	2	2	2	2
16	1171-035	Wheel	4	4	4	4	4	4	4	4	4
17	1012-129	Bolt – Shoulder	4	4	4	4	4	4	4	4	4
18	1012-224	Nut – Locking	4	4	4	4	4	4	4	4	4
21	5625-024	Distributor – Heating	X	X	X	X	X	X	X	X	X
22	8620-224	Defrost Sensor	X	X	X	X	X	X	X	X	X
23	8000-362	Compressor	X								
23	8000-363	Compressor		X							
23	8000-364	Compressor			X						
23	8000-343	Compressor				X					
23	8000-344	Compressor					X				
23	8000-345	Compressor						X			
23	8000-421	Compressor							X		
23	8000-422	Compressor								X	
23	8000-423	Compressor									X
24	5651-178	TXV Heating	X	X	X	X	X	X			
24	5651-184	TXV Heating							X	X	X
25	7051-039	Return Air Grille (for Beige & Buckeye Gray Units)	X	X	X	X	X	X	X	X	X
25	7051-063	Return Air Grille (for Vinyl Units)	X	X	X	X	X	X	X	X	X
26	1804-0462	High Pressure Control	X	X	X	X	X	X	X	X	X
27	7004-009	Air Filter	X	X	X	X	X	X	X	X	X
27	7004-032	Filter 2" Fiberglass (Optional)	X	X	X	X	X	X	X	X	X
27	7004-034	Filter 2" Pleated (Optional)	X	X	X	X	X	X	X	X	X
28	7004-011	Air Filter	X	X	X	X	X	X	X	X	X
28	7004-036	Filter 2" Fiberglass (Optional)	X	X	X	X	X	X	X	X	X
28	7004-025	Filter 2" Pleated (Optional)	X	X	X	X	X	X	X	X	X

Continued on page 12

This table references exploded view on page 8

FUNCTIONAL COMPONENTS


Drawing No.	Part No.	Description	Q43H3-A	Q43H3-B	Q43H3-C	Q48H3-A	Q48H3-B	Q48H3-C	Q60H3-A	Q60H3-B	Q60H3-C
Continued from page 11											
29	1804-0107	Low Pressure Control	X	X	X	X	X	X	X	X	X
30	5201-010	Filter/Drier	X	X	X	X	X	X	X	X	X
35	5650-040	Reversing Valve	X	X	X	X	X	X	X	X	X
36	5650-042	Rev. Valve Solenoid, Red Casing (Ranco)	X	X	X	X	X	X	X	X	X
36	5650-043	Rev. Valve Solenoid, Black Casing (Wilspec)	X	X	X	X	X	X	X	X	X
36	5650-046	Rev. Valve Solenoid, Black Casing (San Hua)	X	X	X	X	X	X	X	X	X
39	1012-315	"U" Clip Fastener	10	10	10	10	10	10	10	10	10
41	5650-037	Molded Plug 36" Lead	X	X	X	X	X	X	X	X	X
NS	CMA-28	Low Ambient Control	X	X	X	X	X	X	X	X	X
NS	5202-026	Suction Accumulator							X	X	X
NS	8002-012	Sound Cover	X	X	X	X	X	X	X	X	X
NS	3000-1290	Compressor Wire Harness	X		X	X		X			X
NS	3000-1291	Compressor Wire Harness		X	X		X	X		X	X
NS	6031-009	Coremax Valve Core	X	X	X	X	X	X	X	X	X
NS	4100-121	Unit Wiring Diagram	X			X					
NS	4100-221	Unit Wiring Diagram		X			X				
NS	4100-321	Unit Wiring Diagram			X			X			
NS	4100-123	Unit Wiring Diagram							X		
NS	4100-223	Unit Wiring Diagram								X	
NS	4100-323	Unit Wiring Diagram									X

NS = Not Shown

This table references exploded view on page 8

This page intentionally left blank

UPPER CONTROL PANEL COMPONENTS

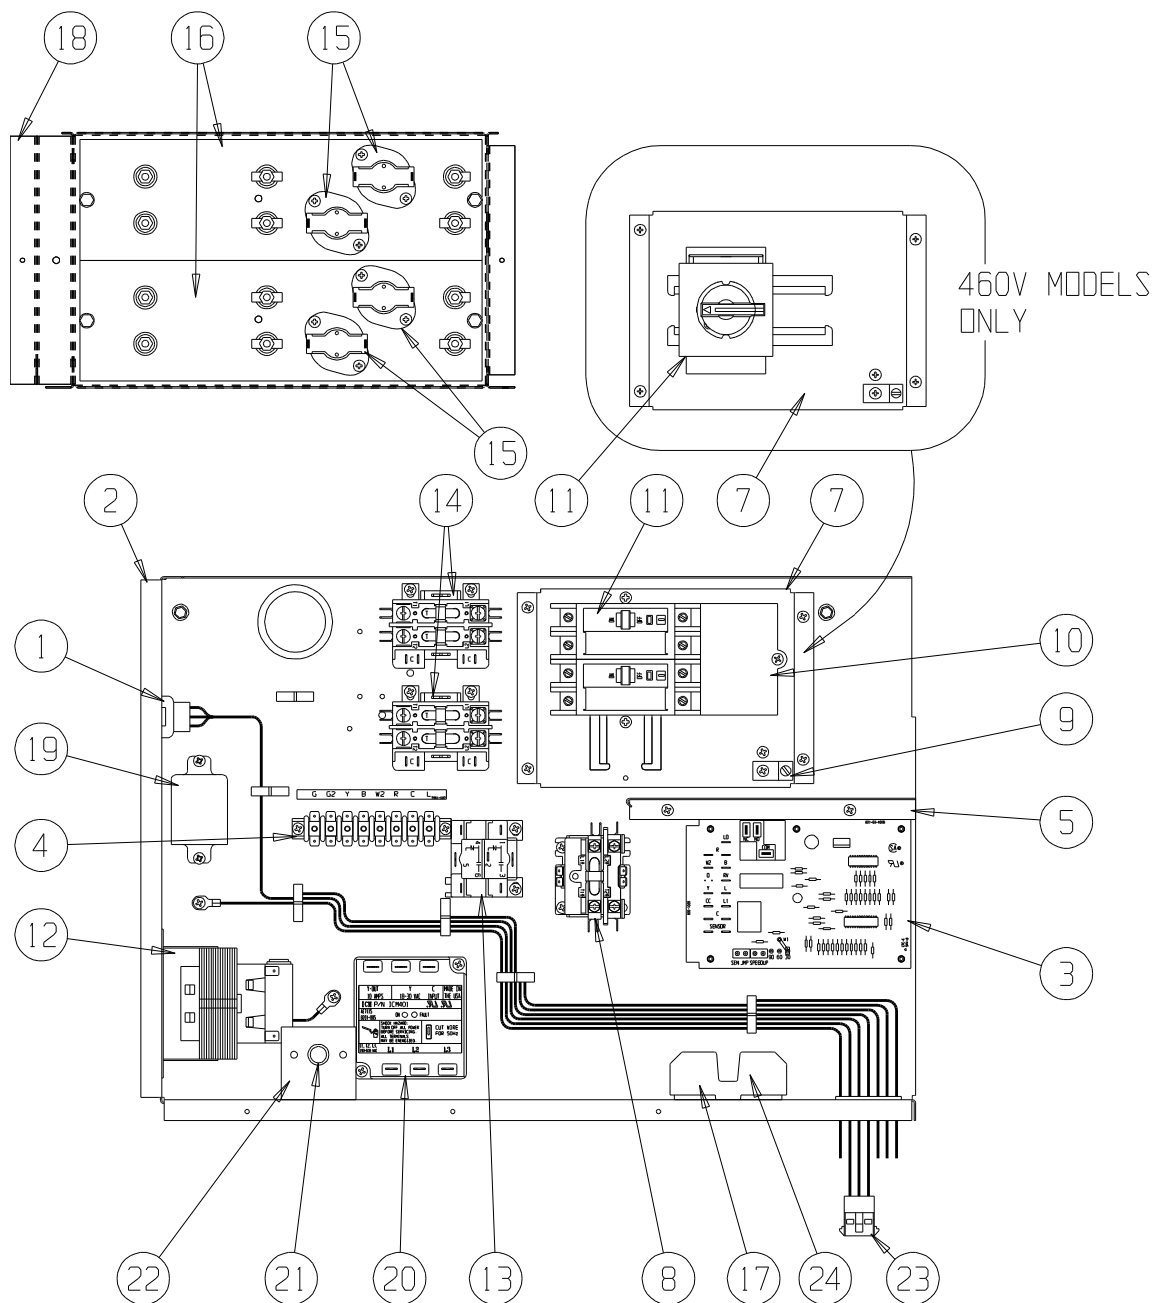

SEXP-373 B

This layout view is referenced in tables on pages 15, 16 and 17

UPPER CONTROL PANEL COMPONENTS

Drawing No.	Part No.	Description	Q24H3-A0Z Q30H3-A0Z	Q36H3-A0Z	Q43H3-A0Z	Q48H3-A0Z	Q60H3-A0Z	Q24H3-A05 Q30H3-A05	Q36H3-A05 Q43H3-A05	Q48H3-A05	Q60H3-A05	Q24H3-A10 Q30H3-A10	Q36H3-A10 Q43H3-A10	Q48H3-A10	Q36H3-A15 Q43H3-A15	Q48H3-A15	Q60H3-A10	Q60H3-A15
1	3000-1293	Wire Set P2	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
2	117-241	Control Panel	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
3	8620-223	Heat Pump Control	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
4	8607-022	Terminal Block	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
5	117-242	Box Partition	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
7	126-267	Circuit Breaker Base	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
8	8401-006	Contactor	X	X	X			X	X			X	X		X			
8	8401-025	Contactor				X	X			X	X			X		X	X	X
9	8611-006	Ground Lug	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
10	8615-047	Jumper Bar Base									X	X	X	X	X	X	X	X
11	8615-036	Circuit Breaker 2 Pole 25A Ckt B								X	X							
11	8615-037	Circuit Breaker 2 Pole 30A Ckt A	X									X						
11	8615-038	Circuit Breaker 2 Pole 35A Ckt A																
11	8615-055	Circuit Breaker 2 Pole 40A Ckt A											X		X	X		
11	8615-039	Circuit Breaker 2 Pole 45A Ckt A		X														
11	8615-040	Circuit Breaker 2 Pole 50A Ckt A			X	X		X		X				X				
11	8615-040	Circuit Breaker 2 Pole 50A Ckt B										X	X	X	X	X	X	X
11	8615-041	Circuit Breaker 2 Pole 60A Ckt A					X		X		X						X	X
12	8407-065	Transformer	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
14	8401-006	Contactor						X	X	X	X				X	X		X
14	8401-025	Contactor										X	X	X	X	X	X	X
15	8402-100	Limits						1	1	1		2	2	2	3	3		
15	8402-131	Limits									1						2	3
16	8604-103	Heat Strip 5KW						X	X	X	X				X	X		X
16	8604-104	Heat Strip 10 KW										X	X		X	X	X	X
18	116-191	Heat Strip Wrapper						X	X	X	X	X	X	X	X	X	X	X
19	8201-048	Relay						X	X	X	X	X	X	X	X	X	X	X
21	8611-094	Indicator Light	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
22	112-225	Bracket	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
23	3000-1294	Wire Set	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
NS	8201-015	Staging Relay SR																
NS	132-145	Heat Strip Cover						X	X	X	X	X	X	X	X	X	X	X
NS	4101-118	Heat Kit Wiring Diagram	X	X	X	X	X											
NS	4101-114	Heat Kit Wiring Diagram						X	X									
NS	4101-115	Heat Kit Wiring Diagram										X	X	X			X	
NS	4101-116	Heat Kit Wiring Diagram													X	X		X
NS	4101-117	Heat Kit Wiring Diagram								X	X							

NS = Not Shown

UPPER CONTROL PANEL COMPONENTS

Drawing No.	Part No.	Description	Q24H3-B0Z	Q30H3-B0Z	Q36H3-B0Z	Q43H3-B0Z	Q48H3-B0Z	Q60H3-B0Z	Q24H3-B06	Q30H3-B06	Q36H3-B06	Q43H3-B06	Q48H3-B06	Q24H3-B09	Q30H3-B09	Q36H3-B09	Q43H3-B09	Q48H3-B09	Q30H3-B12	Q36H3-B15	Q43H3-B15	Q48H3-B15	Q60H3-B09	Q60H3-B15
1	3000-1293	Wire Set P2	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
2	117-241	Control Panel	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
3	8620-223	Heat Pump Control	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
4	8607-022	Terminal Block	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
5	117-242	Box Partition	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
7	126-269	Circuit Breaker Base	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
8	8401-006	Contactor	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
9	8611-006	Ground Lug	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
11	8615-054	Circuit Breaker 3 Pole 20A	X																					
11	8615-051	Circuit Breaker 3 Pole 25A		X																				
11	8615-052	Circuit Breaker 3 Pole 30A			X																			
11	8615-042	Circuit Breaker 3 Pole 35A				X		X																
11	8615-043	Circuit Breaker 3 Pole 40A							X															
11	8615-044	Circuit Breaker 3 Pole 45A										X		X										
11	8615-045	Circuit Breaker 3 Pole 50A									X				X									
11	8615-046	Circuit Breaker 3 Pole 60A														X			X				X	X
12	8407-065	Transformer	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
14	8401-002	Contactor						X	X	X	X	X	X	X	X	X	X	2	2	2	2	X	2	
15	8402-100	Limits						2	2	2	2	2	2	2	2	2	2	4	4	4	4	X	4	
15	8402-131	Limits																						
16	8604-105	Heat Strip 6 KW						X	X	X	X	X	X	X	X	X	X	2	2	2	2	X	X	X
16	8604-106	Heat Strip 9 KW												X	X	X	X					X	X	X
18	116-191	Heat Strip Wrapper						X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
19	8201-048	Relay						X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
20	8201-126	Phase Monitor	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
21	8611-094	Indicator Light	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
22	112-225	Bracket	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
23	3000-1294	Wire Set PL3	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
NS	8201-015	Staging Relay SR																						
NS	132-145	Heat Strip Cover						X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
NS	4101-210	Heat Kit Wiring Diagram	X	X	X	X																		
NS	4101-211	Heat Kit Wiring Diagram						X	X	X	X	X	X									X		
NS	4101-213	Heat Kit Wiring Diagram																		X			X	
NS	4101-212	Heat Kit Wiring Diagram																	X					

NS = Not Shown

This table references layout view on page 14

UPPER CONTROL PANEL COMPONENTS

Drawing No.	Part No.	Description	Q24H3-C02	Q30H3-C02	Q36H3-C02	Q43H3-C02	Q48H3-C02	Q60H3-C02	Q24H3-C06	Q30H3-C06	Q36H3-C06	Q43H3-C06	Q48H3-C06	Q24H3-C09	Q30H3-C09	Q36H3-C09	Q43H3-C09	Q48H3-C09	Q30H3-C12	Q36H3-C15	Q43H3-C15	Q48H3-C15	Q60H3-C15
1	3000-1293	Wire Set P2	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
2	117-241	Control Panel	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
3	8620-223	Heat Pump Control	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
4	8607-022	Terminal Block	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
5	117-242	Box Partition	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
6	8201-078	Low Pressure TDR	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
7	126-323	Circuit Breaker Base	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
8	8401-002	Contactor	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
9	8611-006	Ground Lug	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
11	S8615-068	Disconnect	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
12	8407-050	Transformer	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
13	8201-032	Relay OMR	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
14	8401-002	Contactor 3 Pole 25A		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
15	8402-100	Limits		2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
15	8402-131	Limits																					
16	8604-107	Heat Strip 6KW 480V							X										2	X	X	X	X
16	8604-108	Heat Strip 9KW 480V												X						X	X	X	X
17	8614-041	Fuse Holder	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
18	116-191	Heat Strip Wrapper							X					X					X	X	X	X	X
19	8201-048	Relay							X					X					X	X	X	X	X
20	8201-126	Phase Monitor	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
21	8611-094	Indicator Light	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
22	112-225	Bracket	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
23	3000-1294	Wire Set PL3	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
24	8614-042	Fuses Class CC 7A	X						X					X					X	X	X	X	X
24	8614-046	Fuses Class CC 5A	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
24	8614-047	Fuses Class CC 3.2A		X																			
25	8615-071	Disconnect Handle	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
NS	8407-058	Transformer Stepdown 1.0 KVA	X						X					X					X	X	X	X	X
NS	8407-003	Transformer Stepdown 1.5 KVA	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
NS	8407-004	Transformer Stepdown 2.0 KVA		X																			X
NS	8201-015	Staging Relay																					
NS	132-145	Heat Strip Cover							X					X					X	X	X	X	X
NS	4101-310	Heat Kit Wiring Diagram	X	X																			
NS	4101-311	Heat Kit Wiring Diagram							X					X									
NS	4101-313	Heat Kit Wiring Diagram																		X	X	X	X
NS	4101-312	Heat Kit Wiring Diagram																	X				

① 7 Amp fuses used with 2.0 KVA transformer


② 5 Amp fuses used with 1.5 KVA transformer

③ 3.2 Amp fuses used with 1 KVA transformer

NS = Not Shown

This table references layout view on page 14

LOWER CONTROL PANEL COMPONENTS

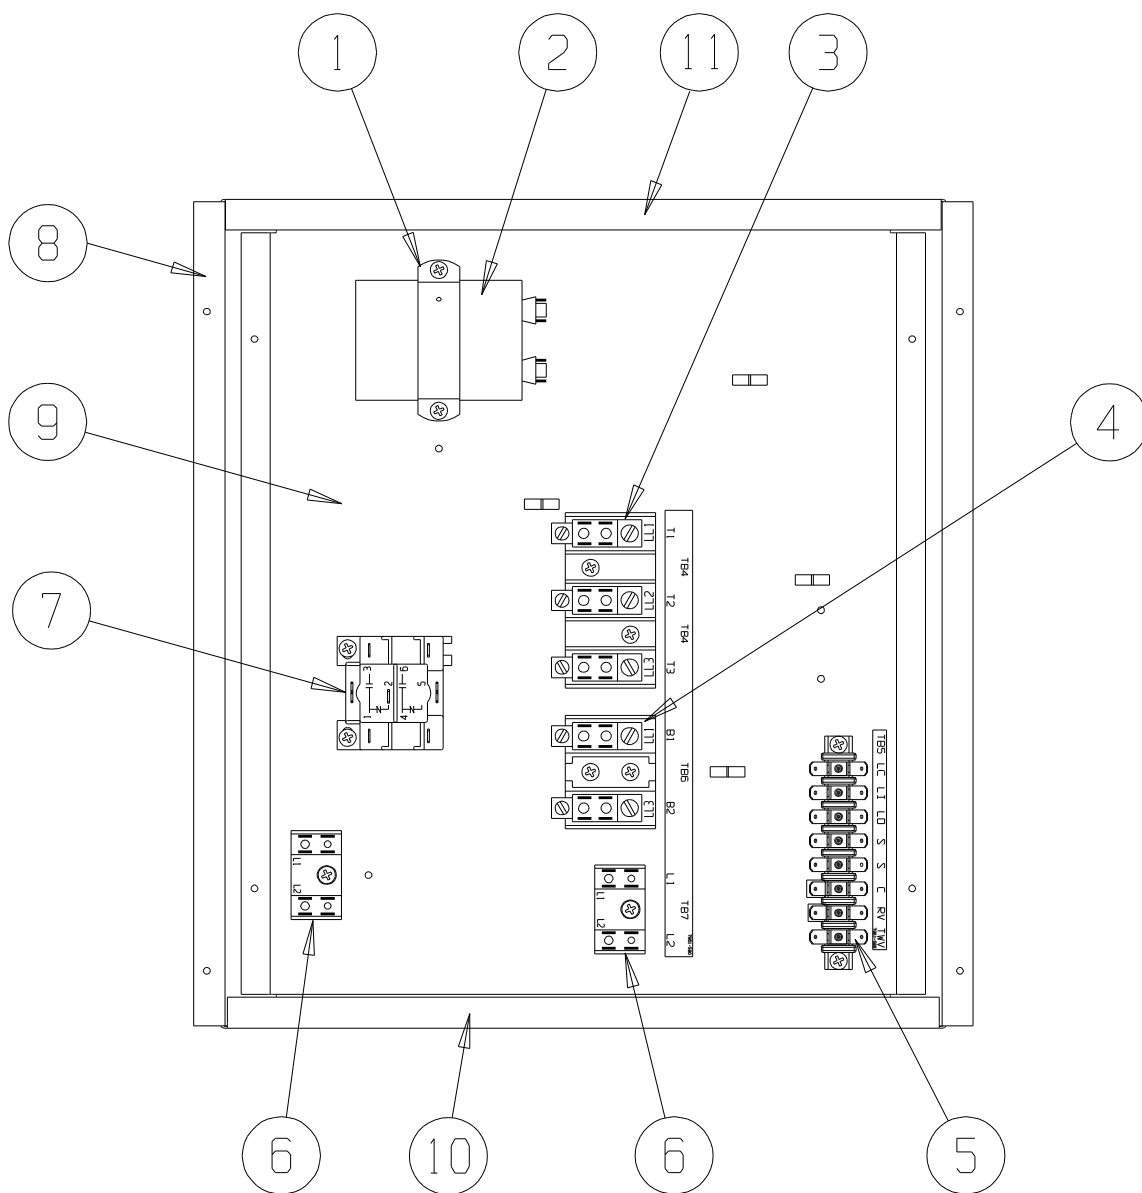


SEXP-374 A

LOWER CONTROL PANEL COMPONENTS

Drawing No.	Part No.	Description	Q24H3-A	Q30H3-A	Q36H3-A	Q43H3-A	Q48H3-A	Q60H3-A	Q24H3B - Q48H3-B	Q60H3-B	Q24H3C - Q48H3-C	Q60H3-C
1	8550-008	Capacitor Strap	X	X	X	X	X	X				
1	8550-003	Capacitor Strap							X		X	
2	8552-002	Fan Capacitor							X		X	
2	8552-050	Compressor Capacitor	X									
2	8552-052	Compressor Capacitor		X	X	X						
2	8552-081	Compressor Capacitor					X	X				
3	8607-014	Terminal Block 3 Terminal							X	X	X	X
4	8607-013	Terminal Block 2 Terminal	X	X	X	X	X	X			X	X
5	8607-022	Terminal Block 8 Pos	X	X	X	X	X	X	X	X	X	X
6	8607-017	Terminal Block 2 Terminal	X	X	X	X	X	X	X	X	X	X
7	8201-032	Low Ambient Bypass Relay (Optional)	X	X	X	X	X	X	X	X	X	X
8	117-239	Lower Control Panel	X	X	X	X	X	X	X	X	X	X
9	117-240	Lower Control Panel Plate	X	X	X	X	X	X	X	X	X	X
10	117-238	Lower Control Panel Bottom	X	X	X	X	X	X	X	X	X	X
11	117-237	Lower Control Panel Top	X	X	X	X	X	X	X	X	X	X

BLOWER ASSEMBLY COMPONENTS

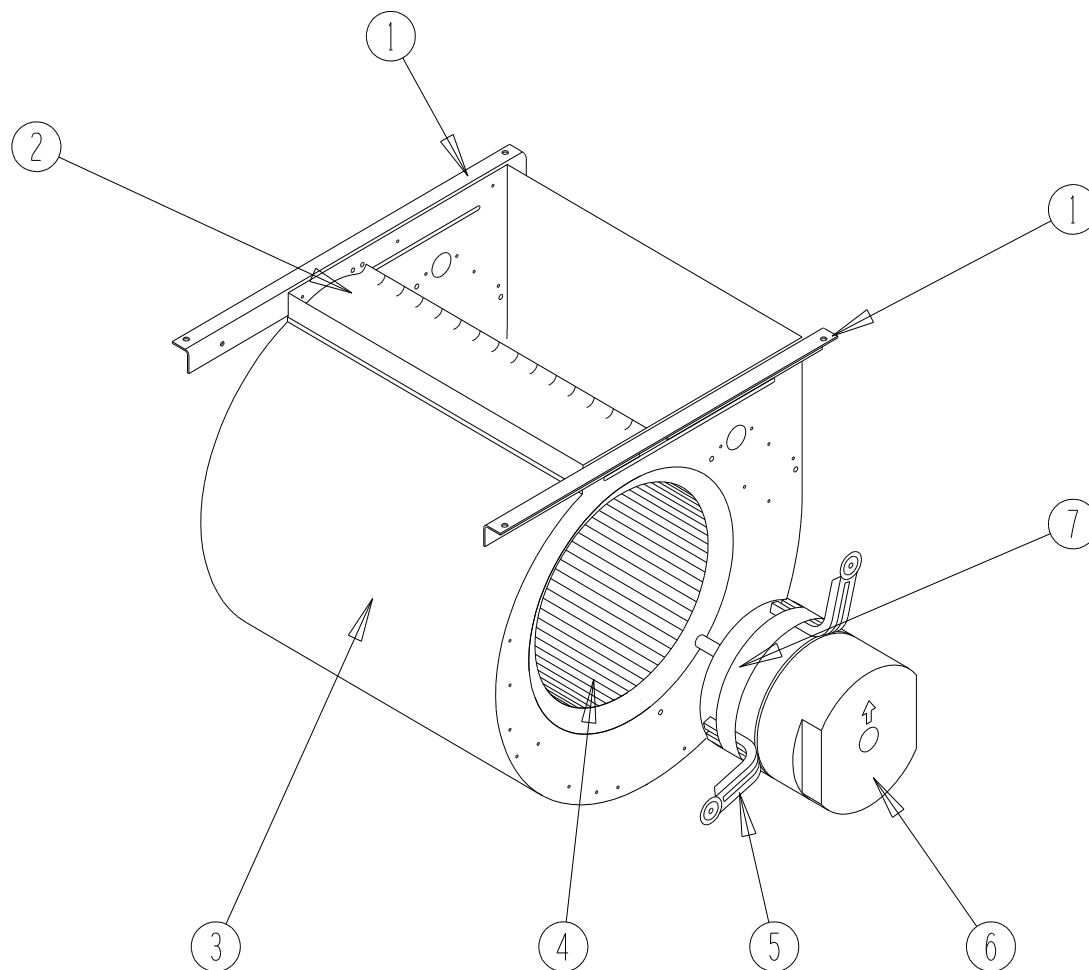


SEXP-245

BLOWER ASSEMBLY COMPONENTS

Drawing No.	Part No.	Description	900-225-001	900-225-002	900-225-004	900-225-005	900-254-001
1	104-980	Blower Angle	2	2	2	2	2
2	144-131	Diffuser	X	X	X	X	X
3	151-110	Blower Housing	X	X	X	X	X
4	5152-061	Blower Wheel	X	X	X	X	X
5	8620-034	Motor Mount Kit	1	1	1	1	1
6	S8106-051-0003B	1/2 HP ECM Motor with Programmed Control	X				
6	C8106-051-0003B	Programmed Motor Control - Only	X				
6	S8106-051-0004A	1/2 HP ECM Motor with Programmed Control		X			
6	C8106-051-0004A	Programmed Motor Control - Only		X			
6	S8106-051-0005B	1/2 HP ECM Motor with Programmed Control			X		
6	C8106-051-0005B	Programmed Motor Control - Only			X		
6	S8106-051-0013A	1/2 HP ECM Motor with Programmed Control				X	
6	C8106-051-0013A	Programmed Motor Control - Only				X	
6	S8107-016-0024B	3/4 HP ECM Motor with Programmed Control					X
6	C8107-016-0024B	Programmed Motor Control - Only					X
7	8620-034	Motor Mount	X	X	X	X	X

OPTIONAL CLIMATE CONTROLS

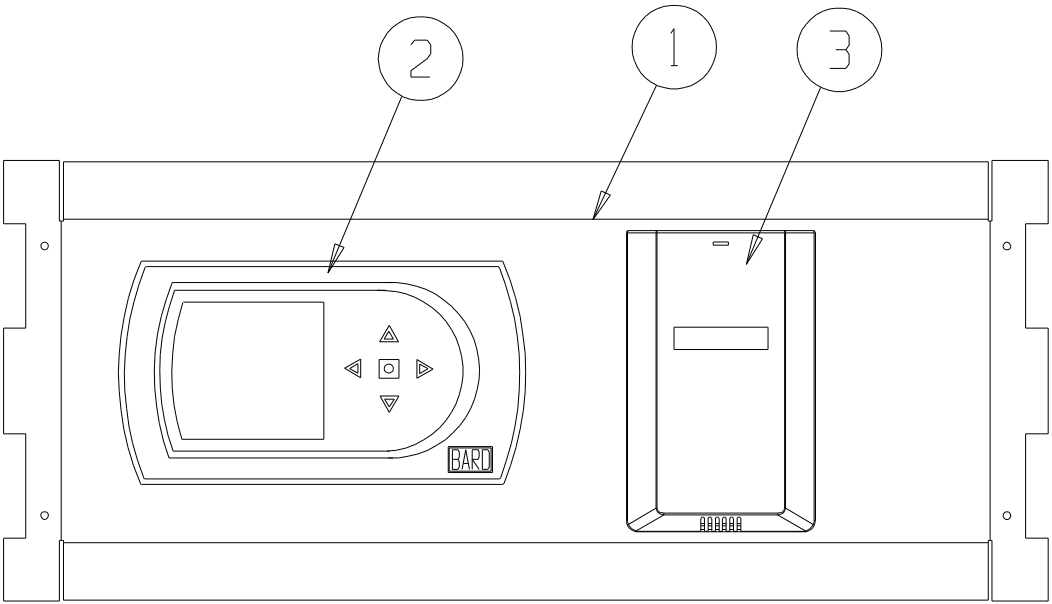

SEXP-0497 A

OPTIONAL CLIMATE CONTROLS

Drawing No.	Part No.	Description	Q24H3, Q30H3 Q36H3, Q43H3 Q48H3, Q60H3				
			Option X	Option D	Option H	Option B	Option C
1	S127-313-* ①	Thermostat Plate	X				
1	S127-308-* ①	Thermostat Plate		X			
1	S127-372-* ①	Thermostat Plate			X		
1	S127-426-* ①	Thermostat Plate				X	X
2	8403-060	Electronic/Programmable Manual/Auto Changeover		X	X		
2	CS9BE-THO	Temperature, Humidity, Occupancy, BACnet				X	
2	CS9BE-THOC	Temperature, Humidity, Occupancy, BACnet, CO ₂					X
3	8403-067	CO ₂ Sensor			X		
NS	3000-1289	Wire Harness, Low Voltage, Terminal Strip to PL2	X				
NS	3000-1288	Wire Harness, Thermostat to PL2		X		X	X
NS	3000-1287	Wire Harness			X		
NS	8607-019	Low Voltage Terminal Strip	X				
NS	4102-061	Wiring Diagram	X				
NS	4102-060	Wiring Diagram		X			
NS	4102-059	Wiring Diagram			X		
NS	4102-078	Wiring Diagram				X	X

① Exterior cabinet parts are manufactured with various paint color options. To ensure the proper paint color is received, reference the following codes:

Beige	-X
Buckeye Gray	-4
Vinyl - Slate Finish	-6
Vinyl - Platinum Finish	-7

NS Not Shown

CLIMATE CONTROL OPTION NOMENCLATURE AS SHOWN IN UNIT MODEL NUMBER

Q 36H2 - A 09 X X X X X

X – None


D – Electronic, programmable, manual/auto changeover

H – Electronic, programmable, manual/auto changeover with CO₂ controller

B – Electronic, programmable, manual/auto changeover with BACnet

C – Electronic, programmable, manual/auto changeover with CO₂ and BACnet

WALL SLEEVE CABINET COMPONENTS

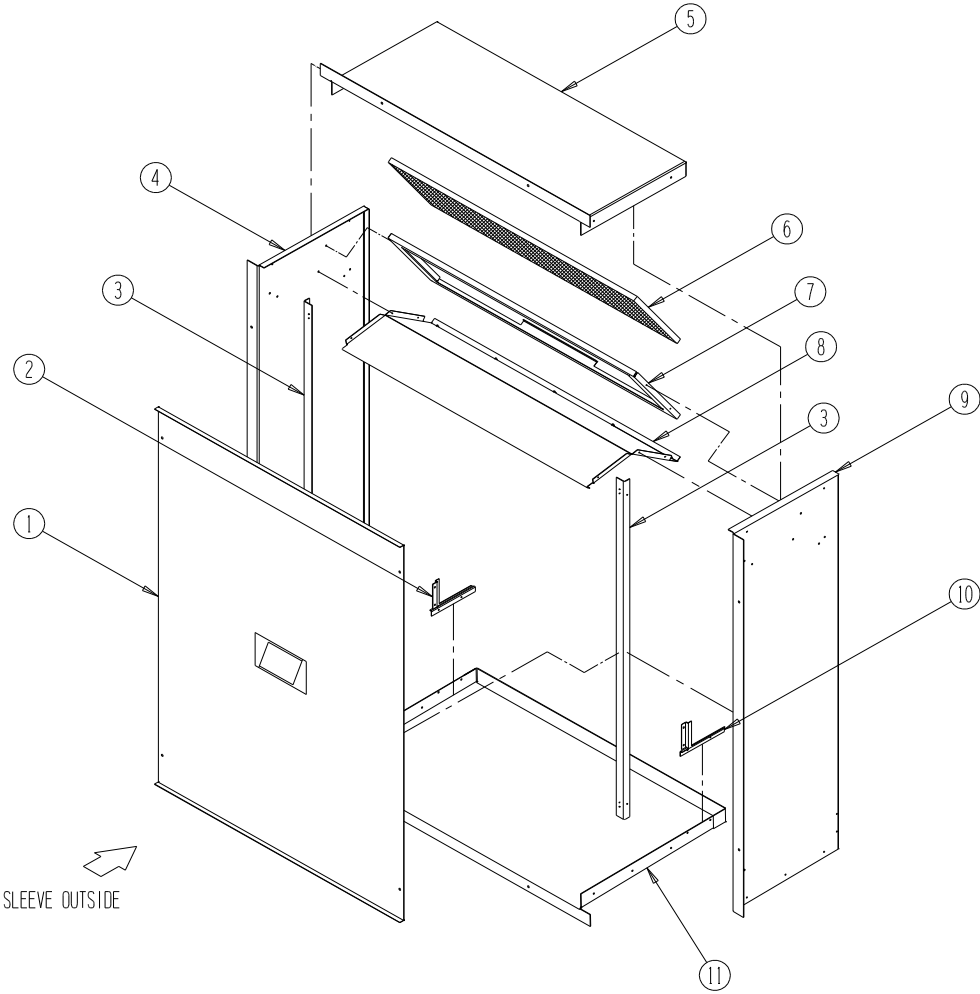

SEXP-281

WALL SLEEVE CABINET COMPONENTS

Drawing No.	Part No.	Description	QWS42A	QWS42A-16	QWS48A	QWS48A-16
1	142-056	Cover	X	X		
1	142-068	Cover			X	X
2	137-450-X	Left Sleeve Corner Fill	X	X	X	X
3	104-988-X	Angle	2	2	2	2
4	111-081-X	Left Side	X		X	
4	111-083-X	Left Side		X		X
5	111-047-X	Top	X			
5	110-050-X	Top		X		
5	110-056-X	Top			X	
5	110-070-X	Top				X
6	7003-044	Mist Eliminator	X	X	X	X
7	131-120-X	Filter Tray	X	X		
7	131-128-X	Filter Tray			X	X
8	121-305-X	Partition	X			
8	121-309-X	Partition		X		
8	121-322-X	Partition			X	
8	121-348-X	Partition				X
9	111-080-X	Right Side	X		X	
9	111-082-X	Right Side		X		X
10	137-449-X	Right Sleeve Corner Fill	X	X		
11	111-046-X	Base	X			
11	111-049-X	Base		X		
11	111-055-X	Base			X	
11	111-071-X	Base				X